

TS and CG Terminal Circuit


DESCRIPTION

If the vehicle is stationary during sensor check mode, speed sensor malfunctions cannot be detected. The vehicle must be driven for speed sensor malfunctions to be detected.

HINT:


Change to sensor check mode by connecting terminals TC and CG of the DLC3, and turning the ignition switch from OFF to ON.

WIRING DIAGRAM

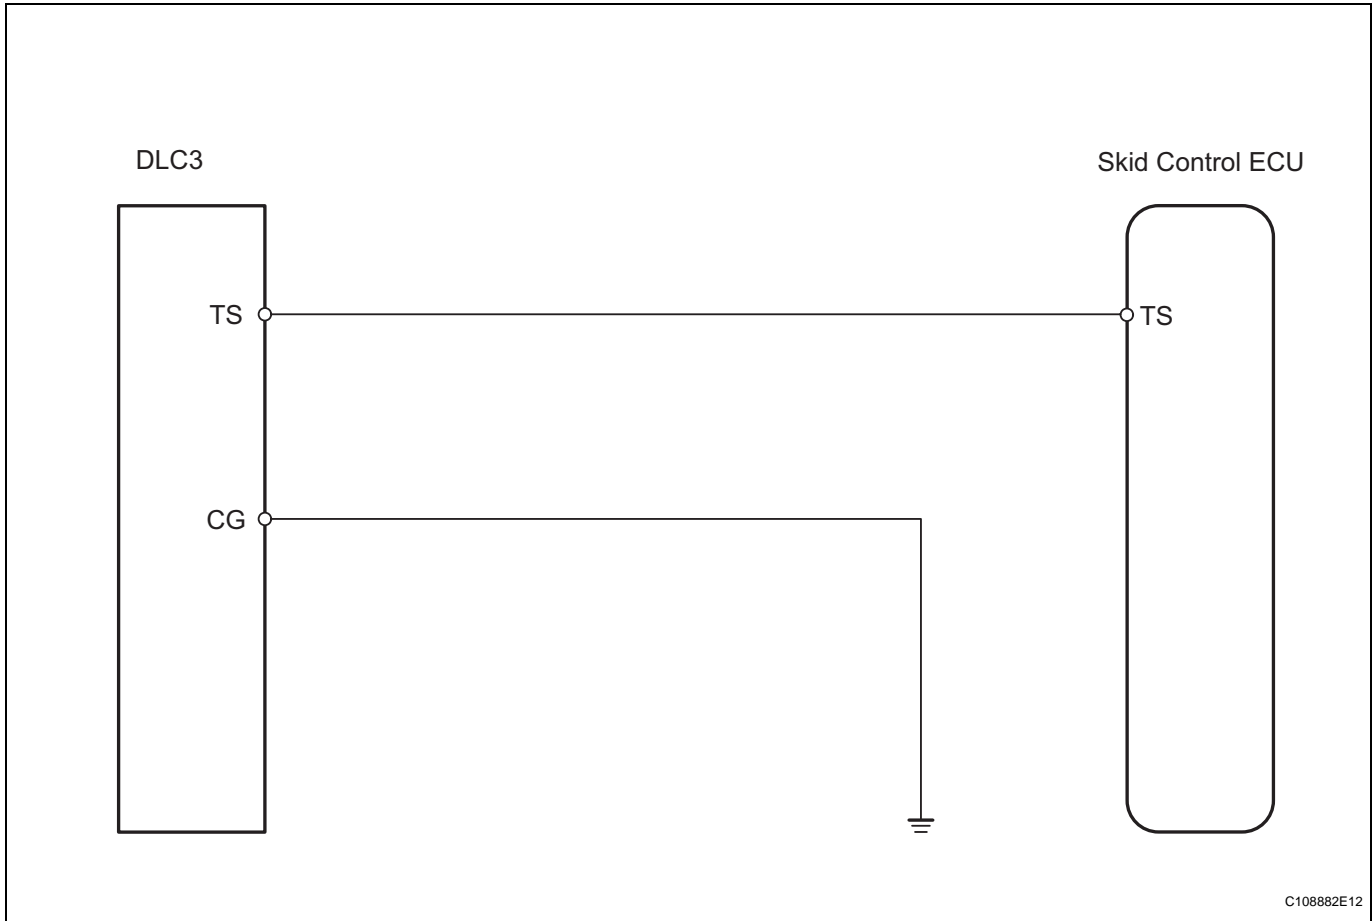

INSPECTION PROCEDURE

1 CHECK WIRE HARNESS (DLC3 - SKID CONTROL ECU AND BODY GROUND)

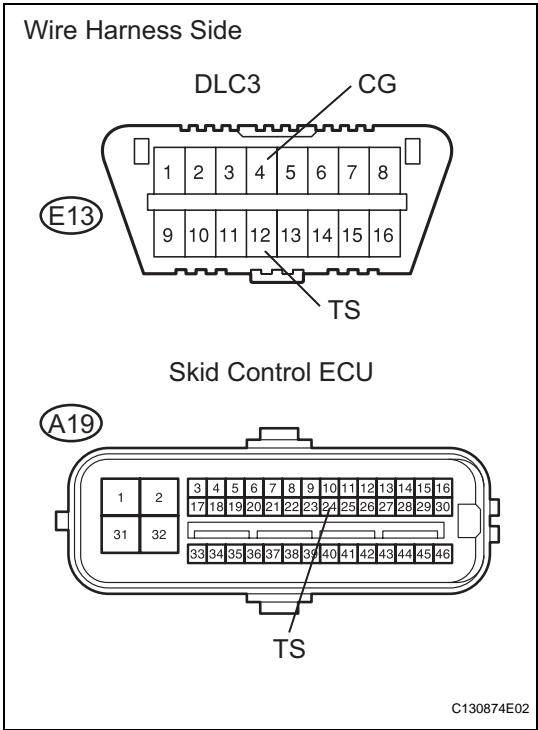

- (a) Disconnect the A27 ECU connector.
 (b) Measure the resistance of the wire harness side connectors.

Standard resistance

Tester Connection	Specified Condition
E13-4 (CG) - Body ground	Below 1 Ω
E13-12 (TS) - A19-15 (TS)	Below 1 Ω
A19-15 (TS) - Body ground	10 kΩ or higher

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE ABS AND TRACTION ACTUATOR ASSEMBLY