


YAW RATE AND DECELERATION SENSOR

COMPONENTS

BC

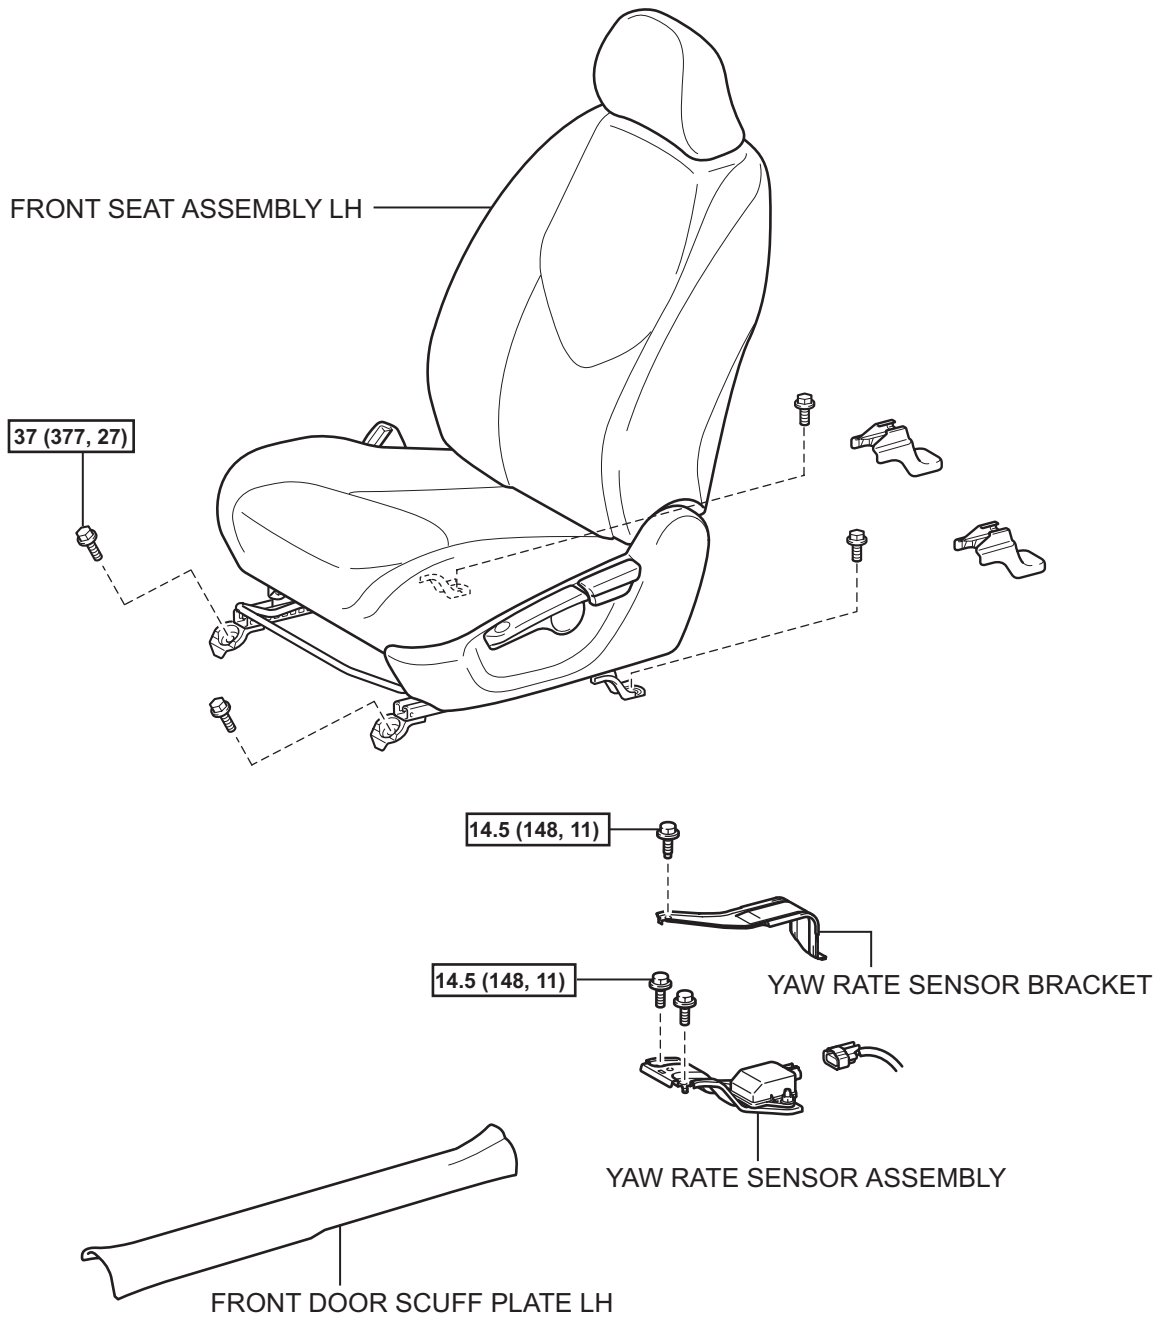

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT SEAT ASSEMBLY LH**

(a) for Manual Seat:

Remove the front seat LH (see page [SE-11](#)).

(b) for Power Seat:

Remove the front seat LH (see page [SE-27](#)).

3. **REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-26](#))**

4. **REMOVE YAW RATE SENSOR BRACKET**

(a) Remove the bolt and yaw rate sensor bracket.

5. **REMOVE YAW RATE SENSOR ASSEMBLY**

(a) Disconnect the yaw rate sensor connector.

(b) Remove the 2 bolts and yaw rate sensor.

NOTICE:

Do not remove the sensor from the bracket.

