


## REMOVAL

(2005/11-2006/01)

1. **REMOVE AIR CLEANER CASE SUB-ASSEMBLY**
  - (a) Remove the air cleaner case (see page [EM-98](#)).  
HINT:  
Refer to the procedures from the removal of the purge VSV up until the removal of the air cleaner case.
2. **DRAIN BRAKE FLUID**  
**NOTICE:**  
Wash off brake fluid immediately if it comes in contact with any painted surface.
3. **DISCONNECT BRAKE LINES (See page [BC-181](#))**
4. **REMOVE ABS AND TRACTION ACTUATOR ASSEMBLY WITH BRACKET (See page [BC-182](#))**
5. **REMOVE BRAKE MASTER CYLINDER SUB-ASSEMBLY (See page [BR-21](#))**
6. **DISCONNECT VACUUM HOSE**
7. **REMOVE PUSH ROD PIN**
  - (a) Remove the clip from the push rod pin.
  - (b) Remove the push rod pin from the push rod clevis.
8. **REMOVE BRAKE MASTER CYLINDER PUSH ROD CLEVIS**
  - (a) Loosen the push rod clevis lock nut.
  - (b) Remove the push rod clevis.
9. **REMOVE BRAKE BOOSTER ASSEMBLY**
  - (a) Remove the 4 nuts.
  - (b) Pull out the booster with gasket.
10. **REMOVE BRAKE BOOSTER GASKET**
11. **REMOVE BRAKE VACUUM CHECK VALVE ASSEMBLY**
12. **REMOVE CHECK VALVE GROMMET**

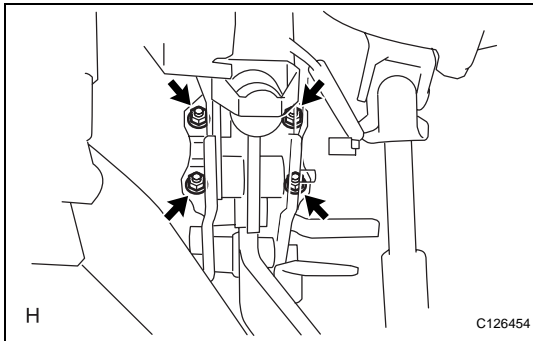

H

C126454

**BR**

## REMOVAL

(2006/01- )

### 1. REMOVE AIR CLEANER CASE SUB-ASSEMBLY (for 2AZ-FE)

(a) Remove the air cleaner case (see page [EM-98](#)).

HINT:

Refer to the procedures from the removal of the purge VSV up until the removal of the air cleaner case.

### 2. REMOVE AIR CLEANER CASE (for 2GR-FE)

(a) Remove the air cleaner case (see page [EM-21](#)).

HINT:

Refer to the procedures from the removal of the air cleaner cap sub-assembly up until the removal of the air cleaner case.

### 3. DRAIN BRAKE FLUID

**NOTICE:**

Wash off brake fluid immediately if it comes in contact with any painted surface.

### 4. DISCONNECT BRAKE LINES (See page [BC-183](#))

### 5. REMOVE ABS AND TRACTION ACTUATOR ASSEMBLY WITH BRACKET (See page [BC-184](#))

### 6. REMOVE BRAKE MASTER CYLINDER SUB-ASSEMBLY (See page [BR-22](#))

### 7. DISCONNECT VACUUM HOSE

### 8. REMOVE PUSH ROD PIN

(a) Remove the clip from the push rod pin.

(b) Remove the push rod pin from the push rod clevis.

### 9. REMOVE BRAKE MASTER CYLINDER PUSH ROD CLEVIS

(a) Loosen the push rod clevis lock nut.

(b) Remove the push rod clevis.

### 10. REMOVE BRAKE BOOSTER ASSEMBLY

(a) Remove the 4 nuts.

(b) Pull out the booster with gasket.

### 11. REMOVE BRAKE BOOSTER GASKET

### 12. REMOVE BRAKE VACUUM CHECK VALVE ASSEMBLY

### 13. REMOVE CHECK VALVE GROMMET

