INSTALLATION

(2005/11-2006/01)

- 1. INSTALL CHECK VALVE GROMMET
 - (a) Install the grommet to the booster.
- 2. INSTALL BRAKE VACUUM CHECK VALVE ASSEMBLY
 - (a) Install the check valve to the grommet.
- 3. INSTALL BRAKE BOOSTER GASKET
 - (a) Install a new gasket to the booster.
- 4. INSTALL BRAKE MASTER CYLINDER PUSH ROD CLEVIS
 - (a) Install the push rod clevis to the booster.
 - (b) Temporarily tighten the push rod clevis lock nut. HINT:


The push rod clevis lock nut will be tightened to a torque specification in the "CHECK AND ADJUST BRAKE PEDAL HEIGHT" procedures.




(a) Install the booster with the 4 nuts.

Torque: 12.7 N*m (130 kgf*cm, 9 ft.*lbf)

6. INSTALL PUSH ROD PIN

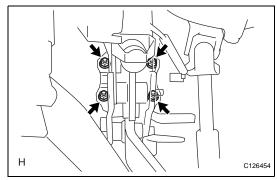

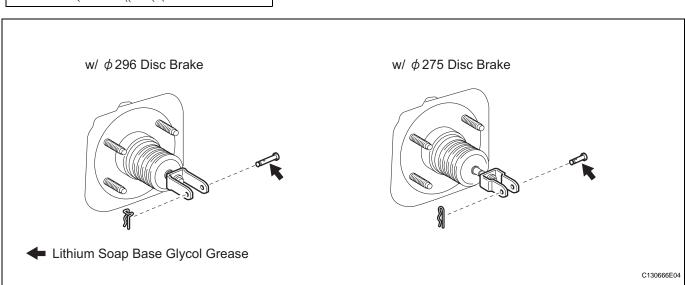

- (a) Apply lithium soap base glycol grease to the push rod pin.
- (b) Install the push rod pin to the push rod clevis.

NOTICE:

The push rod pin must be installed as shown in the illustration.



- (c) Install the clip to the push rod pin.
 - NOTICE:

The clip must be installed as shown in the illustration.

- 7. CHECK AND ADJUST BRAKE BOOSTER PUSH ROD (See page BR-24)
- 8. CONNECT VACUUM HOSE
 - (a) Connect the vacuum hose to the check valve.
- INSTALL BRAKE MASTER CYLINDER SUB-ASSEMBLY (See page BR-25)
- 10. INSTALL ABS AND TRACTION ACTUATOR
 ASSEMBLY WITH BRACKET (See page BC-186)
- 11. CONNECT BRAKE LINES (See page BC-187)
- 12. FILL RESERVOIR WITH BRAKE FLUID (See page BR-6)
- 13. BLEED AIR FROM BRAKE MASTER CYLINDER (See page BR-7)
- 14. BLEED AIR FROM BRAKE LINE (See page BR-7)
- 15. BLEED AIR FROM ABS AND TRACTION ACTUATOR ASSEMBLY (See page BR-8)
- 16. CHECK AND ADJUST BRAKE PEDAL HEIGHT (See page BR-13)
- 17. CHECK BRAKE PEDAL FREE PLAY (See page BR-14)
- 18. CHECK BRAKE PEDAL RESERVE DISTANCE (See page BR-14)
- 19. CHECK BRAKE FLUID LEVEL IN RESERVOIR (See page BR-6)
- 20. CHECK FOR BRAKE FLUID LEAKAGE
- 21. INSTALL AIR CLEANER CASE SUB-ASSEMBLY
 - (a) Install the air cleaner case (see page EM-105). HINT:

Refer to the procedures from the installation of the air cleaner case up until the installation of the purge VSV.