


FRONT BRAKE FLEXIBLE HOSE

COMPONENTS

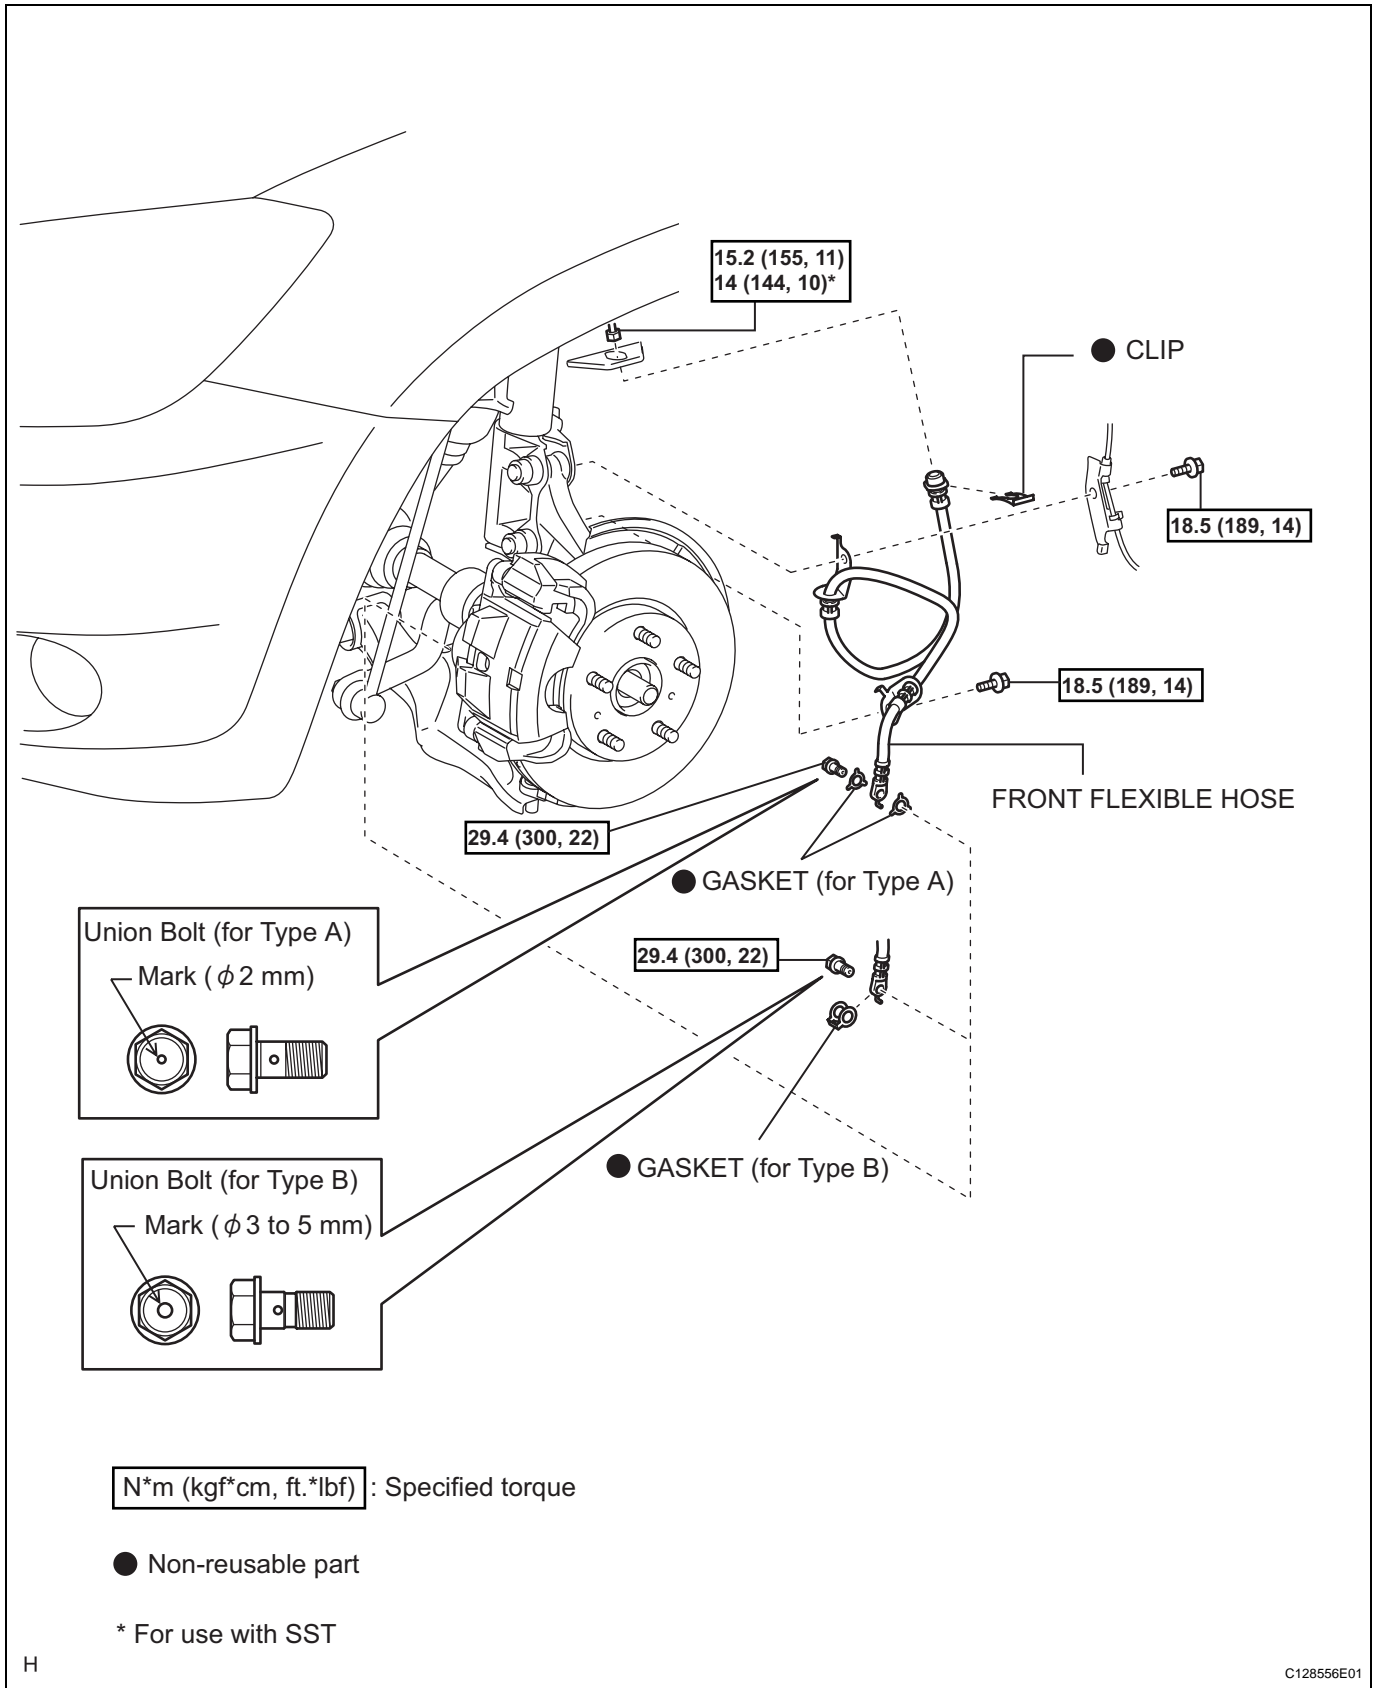

REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.

1. REMOVE FRONT WHEEL

2. DRAIN BRAKE FLUID

NOTICE:

Wash off brake fluid immediately if it comes in contact with any painted surface.



3. REMOVE FRONT FLEXIBLE HOSE


- (a) Disconnect the brake tube (labeled A) from the flexible hose with SST while holding the flexible hose with a wrench.

SST 09023-00101

NOTICE:

- Do not bend or damage the brake tube.
 - Do not allow any foreign matter such as dirt and dust to enter the brake tube from the connecting point.
- (b) Remove the clip (labeled B).
- (c) Remove the 2 bolts (labeled C, D) and then remove the flexible hose clamp (labeled E) from the knuckle.
- (d) Remove the sensor clamp and flexible hose clamp from the flexible hose bracket.

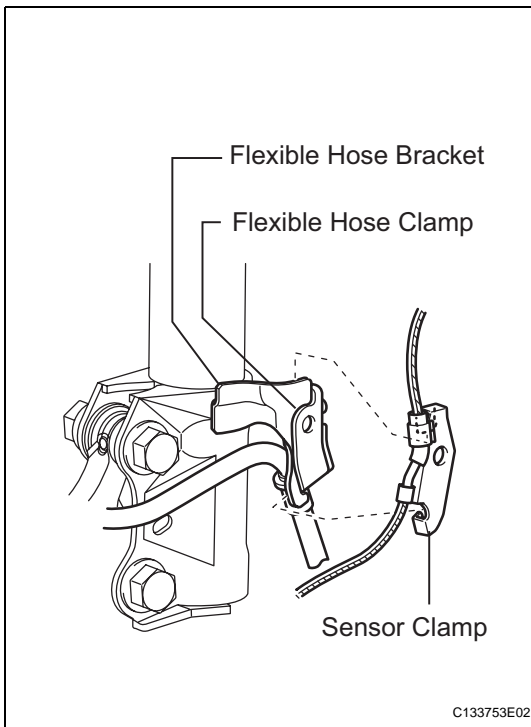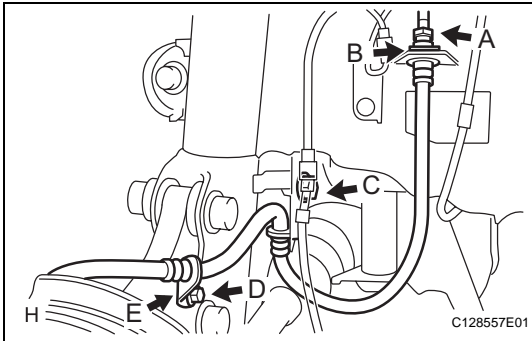

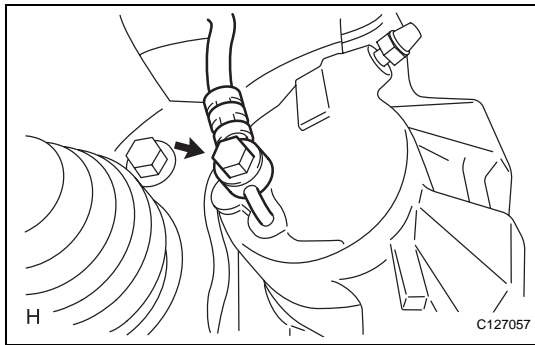

- (e) Remove the union bolt and gasket(s), and then remove the flexible hose from the disc brake cylinder.