



INSTALLATION

1. **INSTALL CRUISE CONTROL MAIN SWITCH**
 - (a) Install the switch with the 2 screws.
Torque: 1.7 to 3.0 N*m (17.34 to 30.60 kgf*cm, 15.04 to 26.55 in.*lbf)
 - (b) Connect the connector.
2. **INSTALL STEERING PAD ASSEMBLY (See page [RS-336](#))**
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
4. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-37](#)).