

TC and CG Terminal Circuit


DESCRIPTION

Connecting terminals TC and CG of the DLC3 enables DTCs to be read through blinking patterns of the combination meter's CRUISE main indicator light.

HINT:


When a warning light of the combination meter blinks continuously, terminal TC of the DLC3 or an ECM may have a ground short.

WIRING DIAGRAM

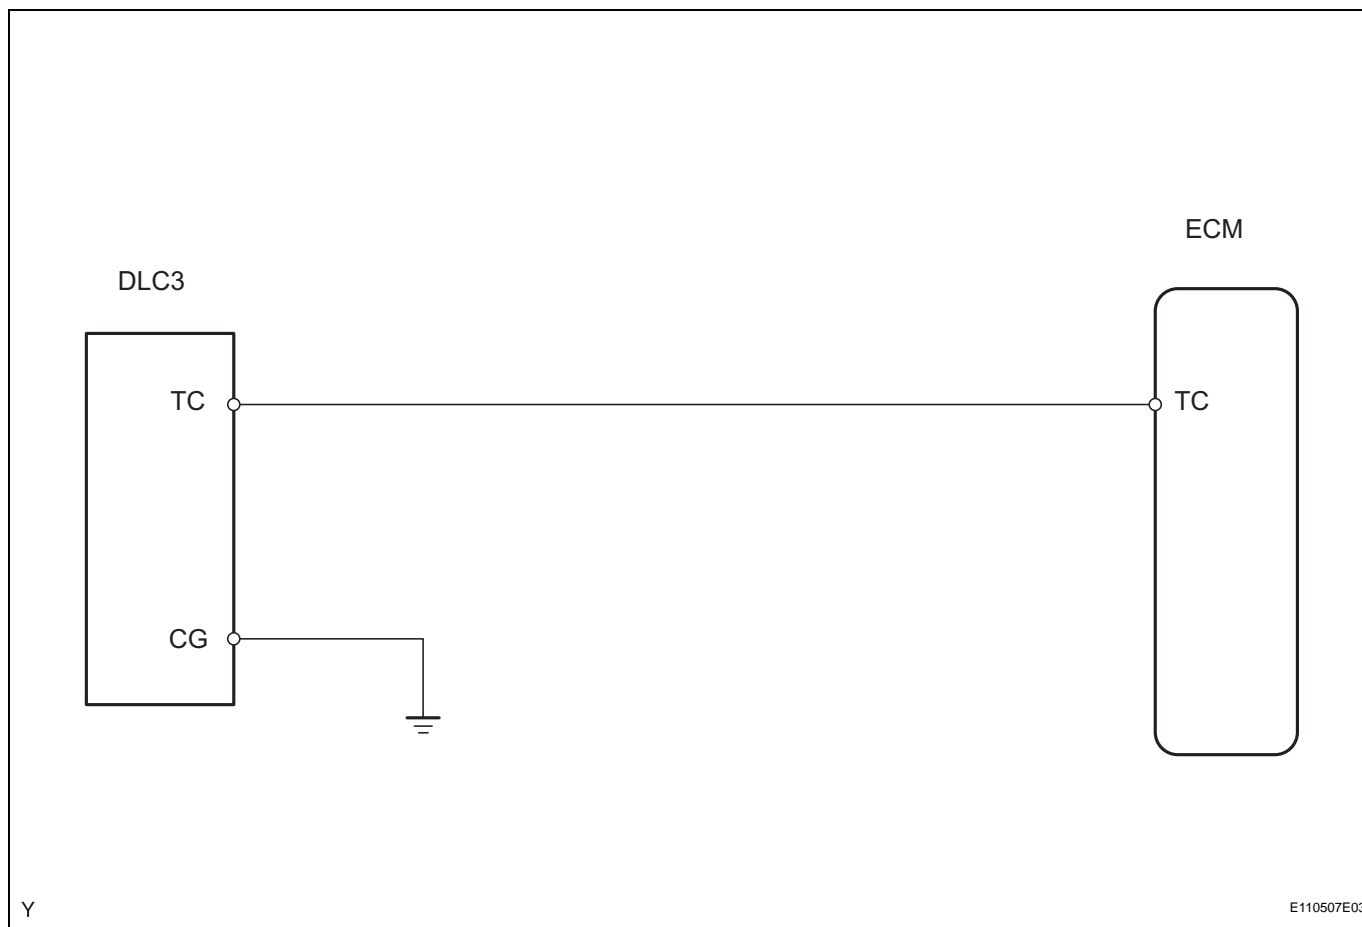

INSPECTION PROCEDURE

1 CHECK WIRE HARNESS (DLC3 - ECM AND BODY GROUND)

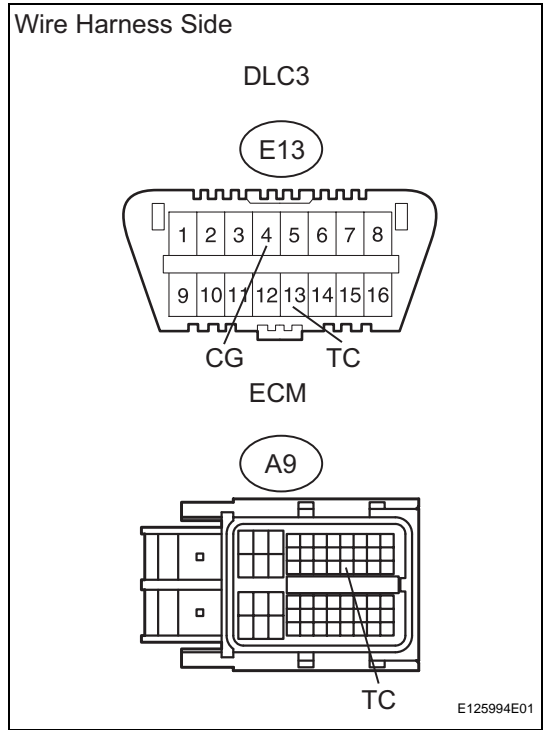

- (a) Disconnect the E13 DLC3 connector.
- (b) Disconnect the A9 ECM connector.
- (c) Measure the resistance of the wire harness side connectors.

Standard resistance

Tester Connection	Specified Condition
E13-13 (TC) - A9-27 (TC)	Below 1 Ω
E13-4 (CG) - Body ground	

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE ECM