

HOW TO PROCEED WITH TROUBLESHOOTING

HINT:

- Use the procedure to troubleshoot the power door lock control system.
- *: Use the Intelligent tester.

1 VEHICLE BROUGHT TO WORKSHOP

NEXT

2 INSPECT BATTERY VOLTAGE

Standard voltage:

11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3 PROBLEM SYMPTOMS TABLE

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed on problem symptoms table	B

B

Go to step 5

A

4 OVERALL ANALYSIS AND TROUBLESHOOTING*

- (a) Operation Check (see page [DL-6](#)).
- (b) Terminals of ECU (see page [DL-8](#)).
- (c) DATA LIST / ACTIVE TEST (see page [DL-12](#)).

NEXT

5 ADJUST, REPAIR OR REPLACE

NEXT

6	CONFIRMATION TEST
---	-------------------

NEXT

END
