

## OPERATION CHECK

### 1. CHECK ELECTRICAL DOOR LOCK OPERATION

- (a) Check the basic function.
  - (1) Check that all doors lock when the door control switch (for manual operation) is turned to LOCK and all doors unlock when turned to UNLOCK.
  - (2) Check that all doors lock when the driver side door lock key cylinder is turned to LOCK using the key.
  - (3) Check that only the driver side door unlocks when the driver side door lock key cylinder is turned to UNLOCK and all doors unlock when turned to UNLOCK once again within 3 seconds using the key (2-step unlocking function).

- (b) Check the key lock-in prevention.

**NOTICE:**

**In order to prevent the key from being actually locked-in, the inspection should be made with the driver side door window open.**

- (1) Have the key inserted into the ignition key cylinder.
- (2) With the driver side door open, check that all doors unlock immediately after the door lock knob for the driver side door is turned to LOCK.
- (3) With the driver side door open, check that all doors unlock immediately after the door control switch (for manual operation) is turned to LOCK.
- (4) With the driver side door open, turn the driver side door lock knob to LOCK and hold it for 2 seconds or more, and then close the driver side door. Then check that all doors unlock.

## CUSTOMIZE PARAMETERS

### 1. CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

HINT:

The following item can be customized.

**NOTICE:**

- When the customer requests a change in a function, first make sure that the function can be customized.
- Make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

**Power door lock control system:**

Display (Item)	Default	Function	Setting
UNLK/KEY TWICE	ON	Unlocks only driver side door when driver side door key cylinder turned to unlock once, and unlocks all doors when turned to unlock twice. For OFF setting, turning it once unlocks all doors.	ON/OFF