


TRANSMITTER BATTERY

COMPONENTS

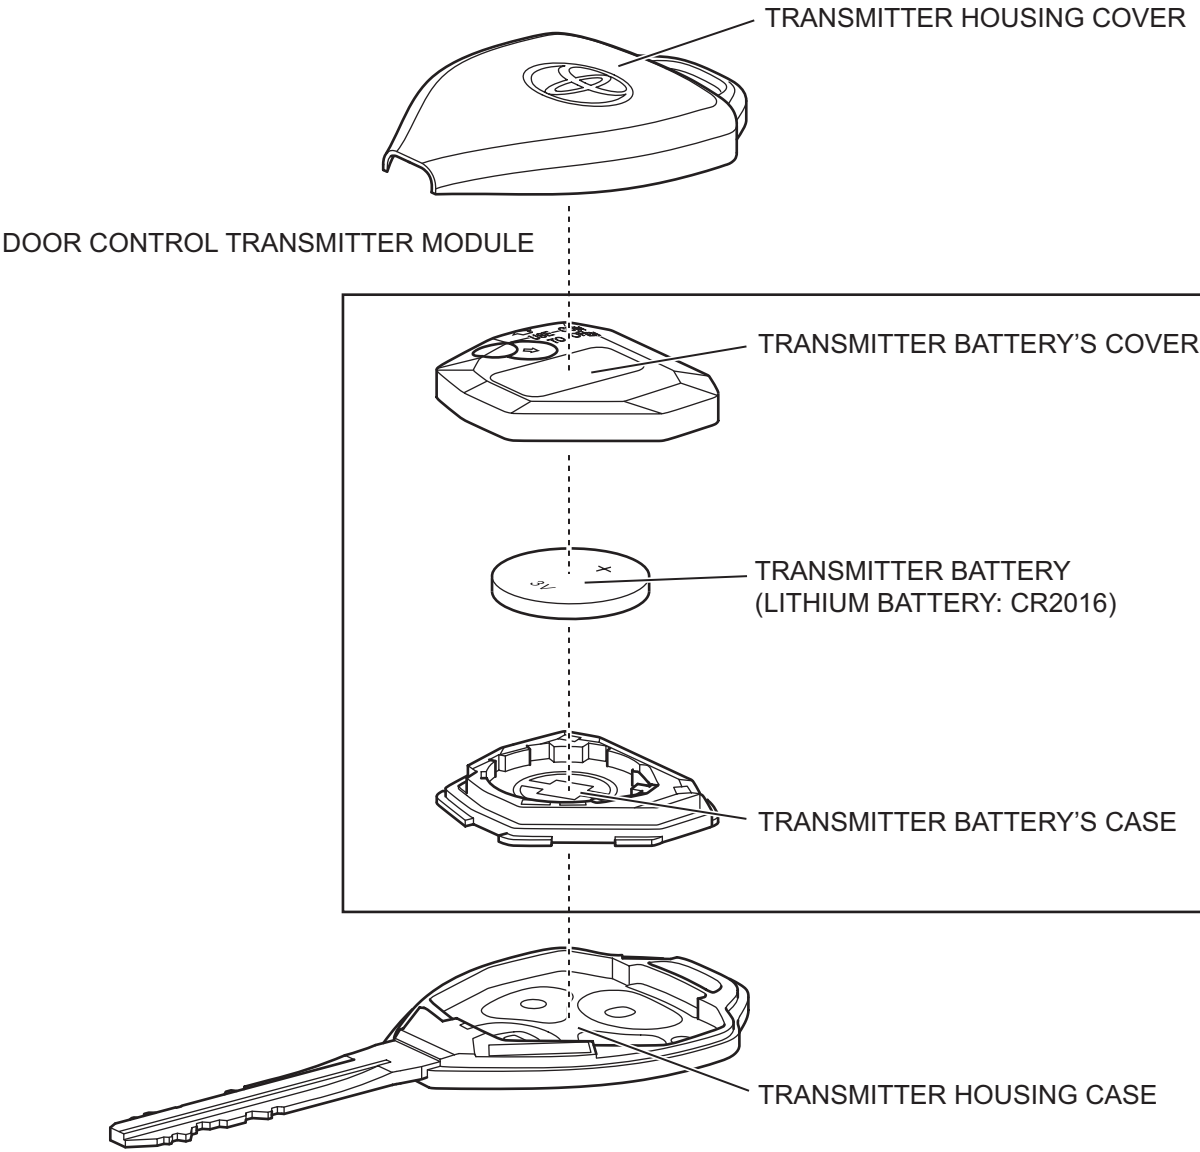

DL

REMOVAL

1. REMOVE TRANSMITTER HOUSING COVER

NOTICE:

Take extra care when handling these precision electronic components.


- (a) Twist the screwdriver in the direction of the arrow mark in the illustration, and open the transmitter housing cover.

NOTICE:


Do not forcibly pry the cover.

HINT:

Tape the screwdriver tip before use.

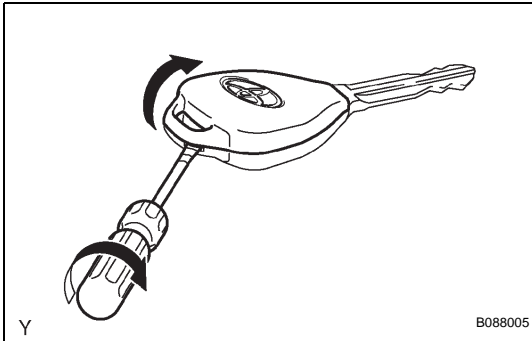


2. REMOVE DOOR CONTROL TRANSMITTER MODULE

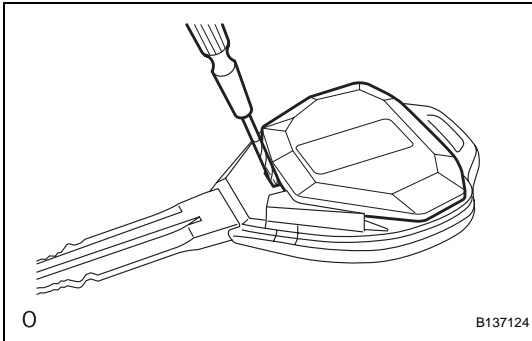

3. REMOVE TRANSMITTER BATTERY

- (a) Twist the coin in the direction of the arrow mark in illustration, and remove the transmitter battery's cover.

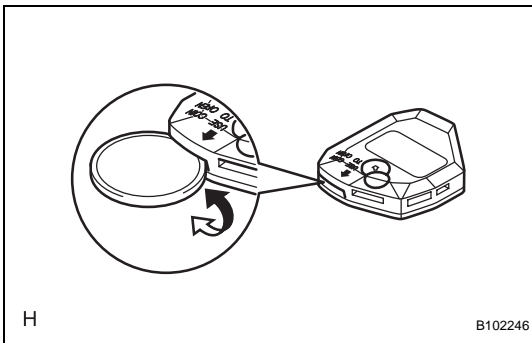

- (b) Remove the battery (lithium battery: CR2016).

NOTICE:

- Do not push the terminals with your finger.
- Do not forcibly pry up the battery. The terminals may become damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter. It may cease to work.

