



UNLOCK WARNING SWITCH

INSPECTION

- 1. **INSPECT UNLOCK WARNING SWITCH ASSEMBLY**
 - (a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2	Not pushed	10 kΩ higher
1 - 2	Pushed	Below 1 Ω

If the result is not as specified, replace the unlock warning switch assembly.