

## UNLOCK WARNING SWITCH

### INSPECTION

#### 1. INSPECT UNLOCK WARNING SWITCH ASSEMBLY

- (a) Measure the resistance of the switch.

##### Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Pushed	Below 1 $\Omega$
	Not pushed	10 k $\Omega$ or higher

If the result is not as specified, replace the switch assembly.

