
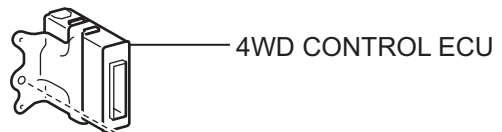


4WD CONTROL ECU


COMPONENTS

TF

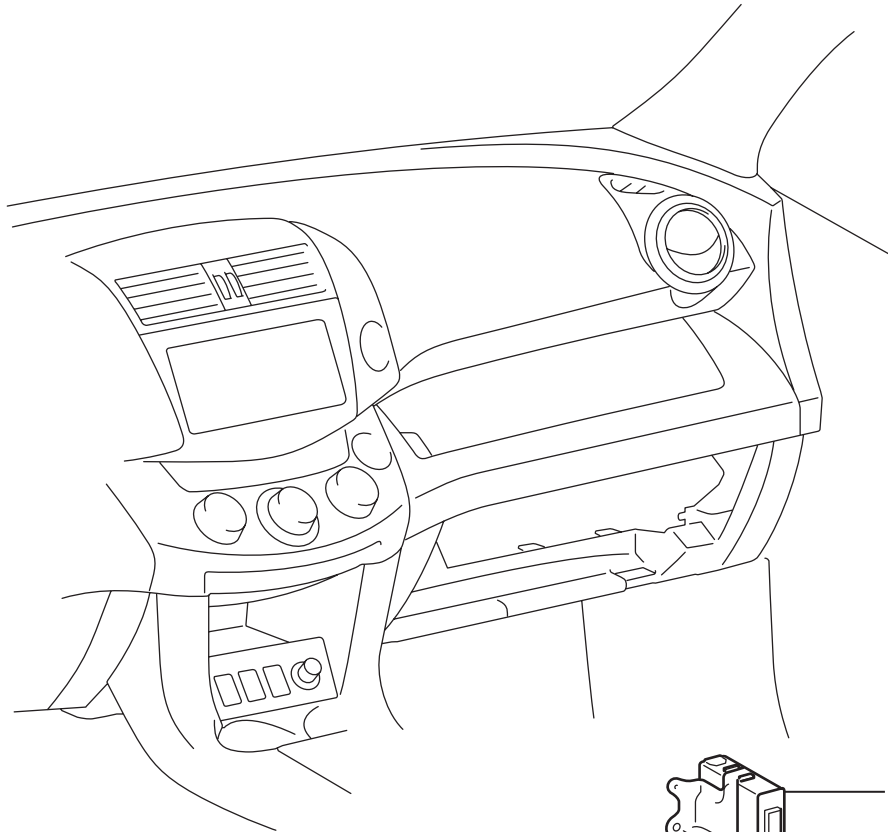

4WD CONTROL ECU

4.5 (46, 40 in.*lbf)

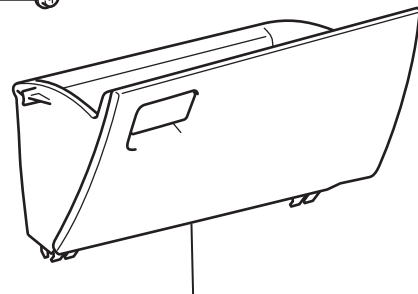

GLOVE COMPARTMENT DOOR ASSEMBLY



N*m (kgf*cm, ft.*lbf) : Specified torque



REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-20](#))
3. **REMOVE 4WD CONTROL ECU**
 - (a) Disconnect the connector.
 - (b) Remove the bolt and ECU.

TF

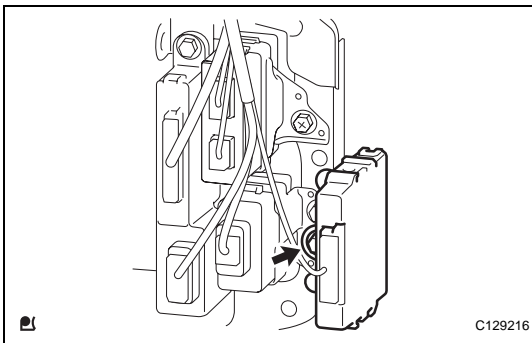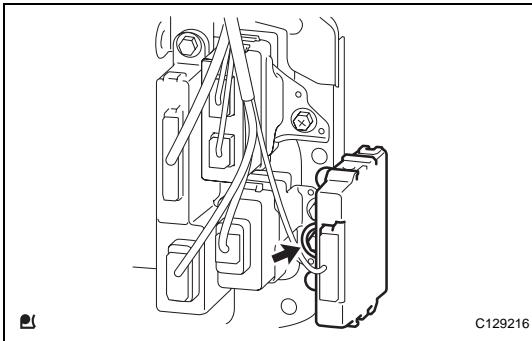

INSTALLATION

1. **INSTALL 4WD CONTROL ECU**
 - (a) Install the ECU with the bolt.
Torque: 4.5 N*m (46 kgf*cm, 40 in.*lbf)
 - (b) Connect the connector.
2. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-25](#))
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**