

# DAYTIME RUNNING LIGHT RELAY

## ON-VEHICLE INSPECTION

### 1. INSPECT DAY TIME RUNNING LIGHT RELAY

(a) Remove the No. 2 relay, No. 3 relay and No. 4 relay from the engine room No. 2 relay block.

(b) Measure the resistance of the relays.

**Standard resistance:**

**No. 2, No. 4**

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

**No. 3**

Tester Connection	Specified Condition
4 - 5	Below 1 Ω
4 - 5	10 kΩ or higher (Battery voltage applied to terminals 1 and 2)
3 - 5	Below 1 Ω
3 - 5	10 kΩ or higher (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

