


HAZARD WARNING SWITCH

COMPONENTS

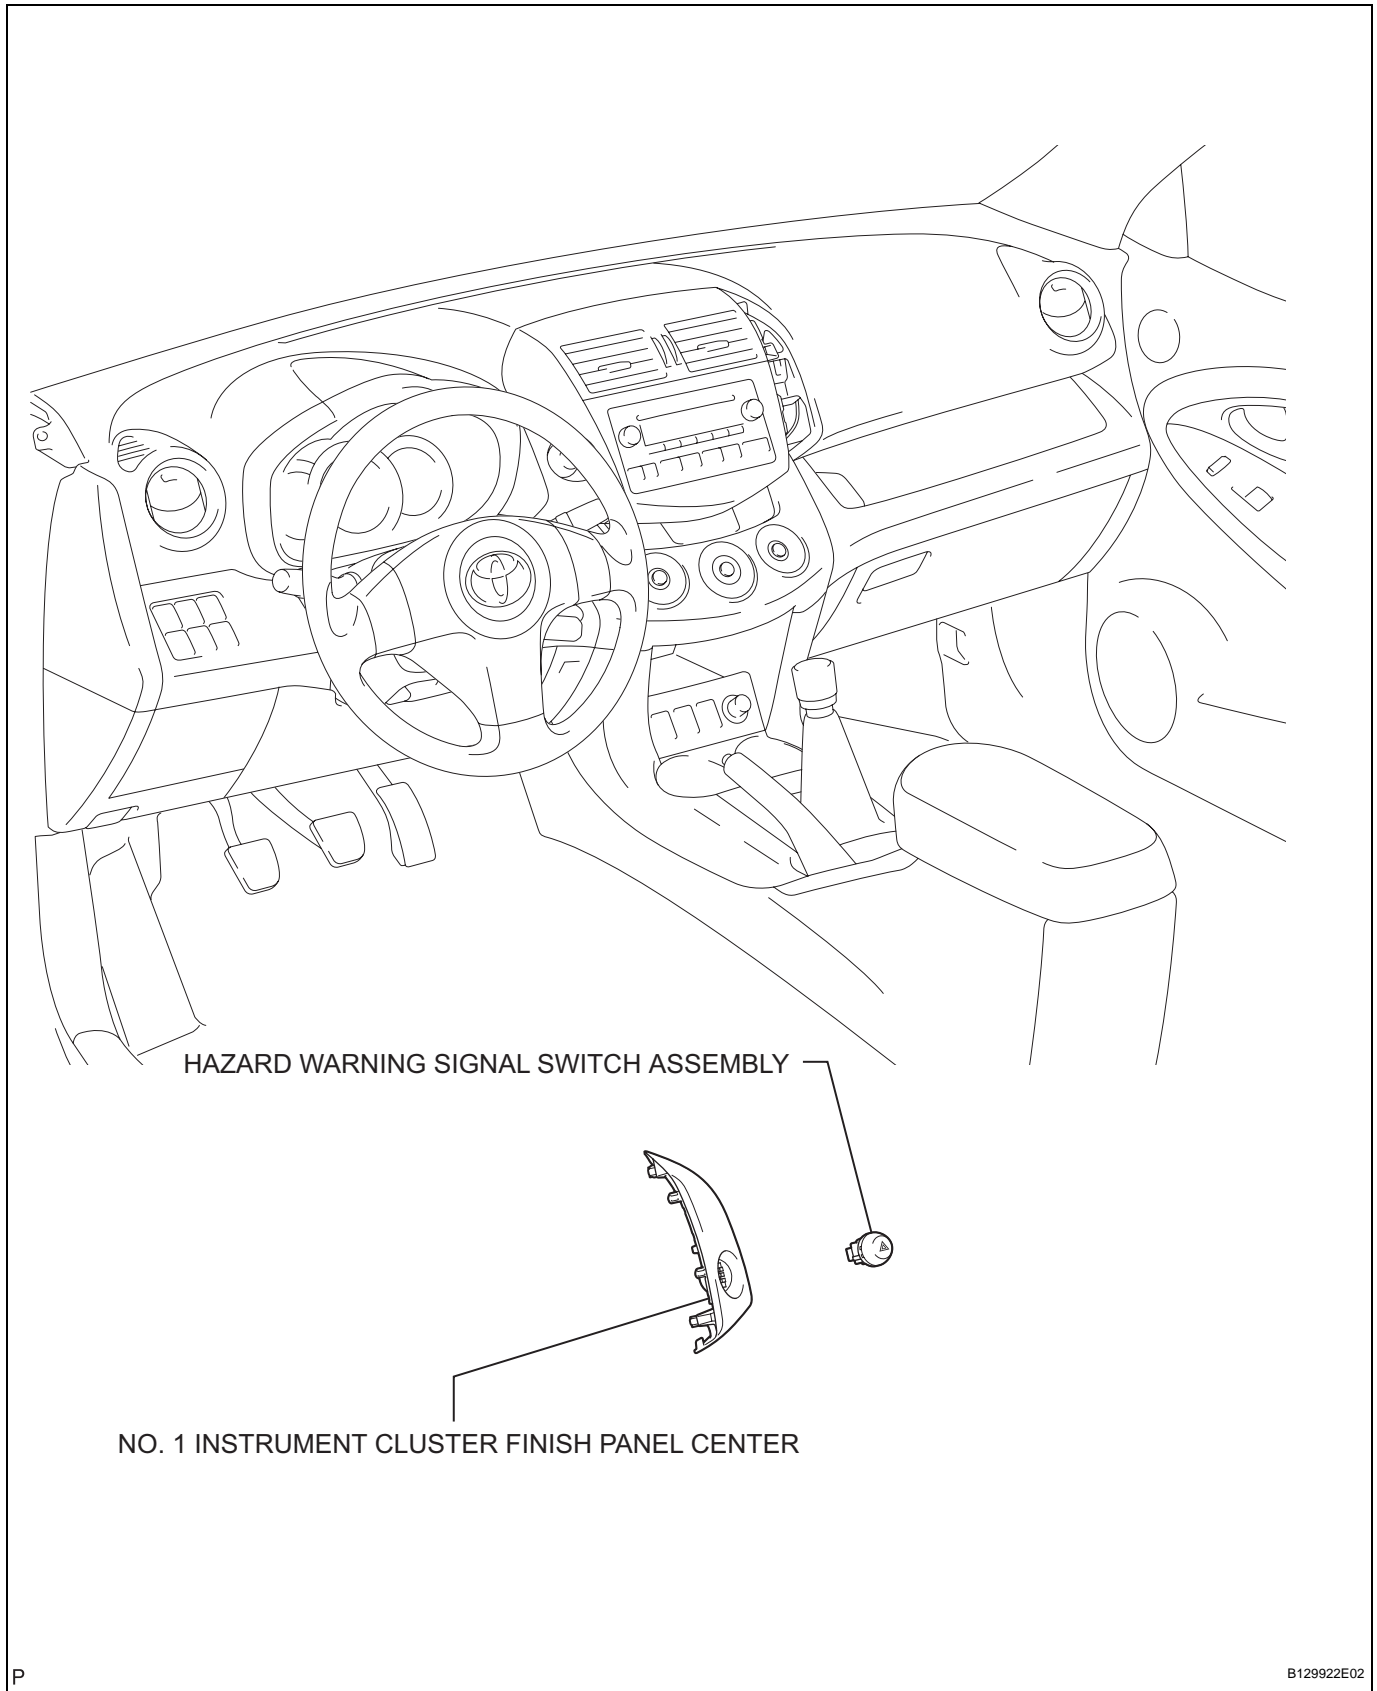

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL



CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-5)

3. REMOVE HAZARD WARNING SIGNAL SWITCH ASSEMBLY

(a) Detach the 2 claws and remove the switch.

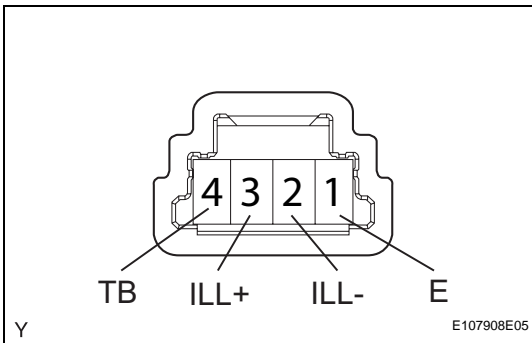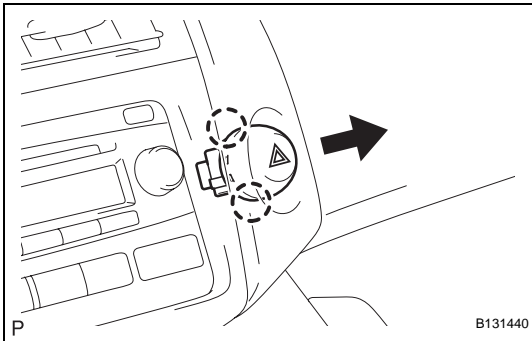

INSPECTION

1. INSPECT HAZARD WARNING SIGNAL SWITCH ASSEMBLY

(a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
4 (TB) - 1 (E)	OFF (Not pushed)	10 k Ω or higher
4 (TB) - 1 (E)	ON (Pushed)	Below 1 Ω

If the result is not as specified, replace the switch assembly.

(b) Inspect the switch illumination.

(1) Connect the battery positive (+) lead to terminal 3 (ILL+) and the negative (-) lead to terminal 2 (ILL-), then check that the light comes on.

OK:

LED comes on.

If the result is not as specified, replace the light.

INSTALLATION

1. INSTALL HAZARD WARNING SIGNAL SWITCH ASSEMBLY

(a) Attach the 2 claws to install the switch.

2. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-10)

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

