


REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT FENDER LINER LH** (See page [ET-4](#))
3. **REMOVE FRONT FENDER LINER RH** (See page [ET-4](#))
4. **REMOVE RADIATOR SUPPORT OPENING COVER** (See page [ET-4](#))
5. **REMOVE FRONT BUMPER COVER** (See page [ET-5](#))
6. **REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSEMBLY UPPER**
 - (a) Disconnect the 2 horn connectors.
 - (b) Remove the 2 bolts and reinforcement.
7. **REMOVE HEADLIGHT ASSEMBLY**
 - (a) Remove the 3 screws and bolt.
 - (b) Disconnect the connectors and remove the headlight.

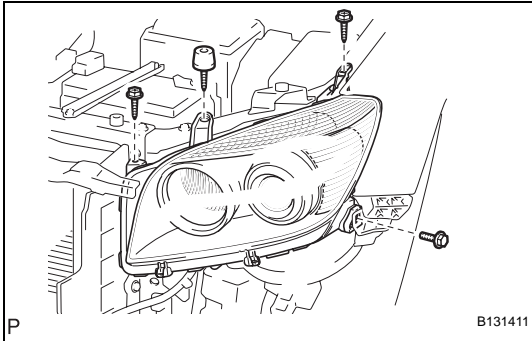


DISASSEMBLY

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.


1. REMOVE NO. 1 HEADLIGHT BULB

- (a) Turn the bulb in the direction indicated by the arrow and pull to remove it.

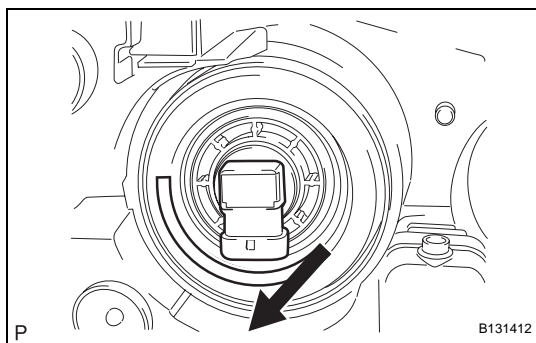


2. REMOVE NO. 2 HEADLIGHT BULB

- (a) Turn the bulb in the direction indicated by the arrow and pull to remove it.

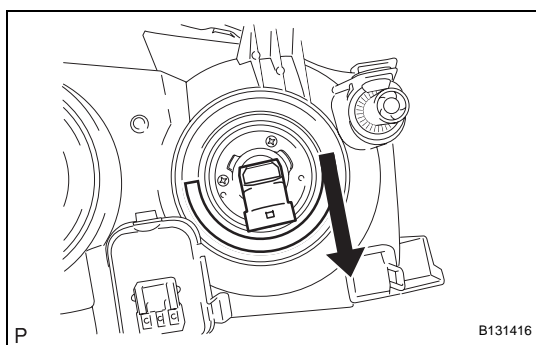

3. REMOVE CLEARANCE LIGHT BULB

- (a) Turn the bulb in the direction indicated by the arrow and pull to remove it.

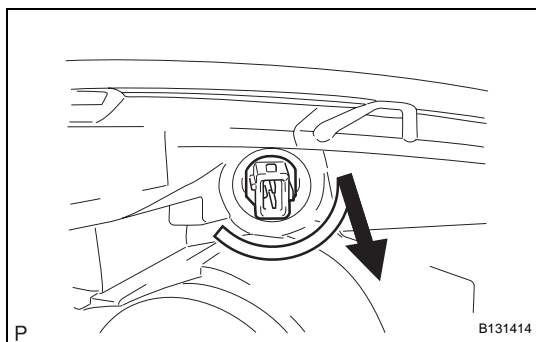

4. REMOVE FRONT TURN SIGNAL LIGHT BULB

- (a) Turn the bulb/socket unit in the direction indicated by the arrow and pull to remove it.
(b) Remove the bulb from the socket.

