


REASSEMBLY

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.


1. INSTALL FRONT TURN SIGNAL LIGHT BULB

- (a) Install the bulb to the socket.
- (b) Insert the bulb/socket unit into the headlight.
- (c) Turn the bulb/socket unit in the direction indicated by the arrow to install it.

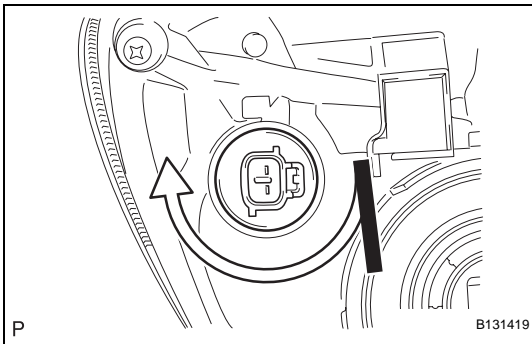


2. INSTALL CLEARANCE LIGHT BULB

- (a) Insert the bulb into the headlight.
- (b) Turn the bulb in the direction indicated by the arrow to install it.

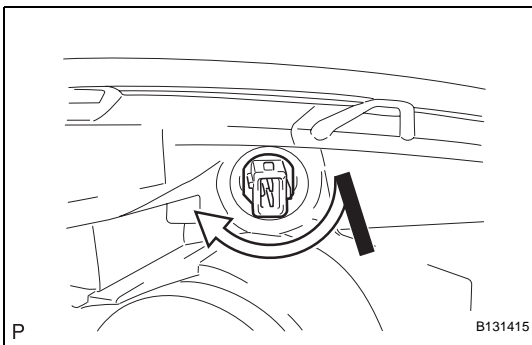


3. INSTALL NO. 2 HEADLIGHT BULB

- (a) Insert the bulb into the headlight.
- (b) Turn the bulb in the direction indicated by the arrow to install it.

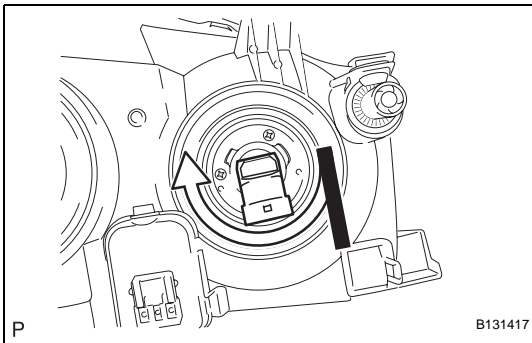

4. INSTALL NO. 1 HEADLIGHT BULB


- (a) Insert the bulb into the headlight.
- (b) Turn the bulb in the direction indicated by the arrow to install it.

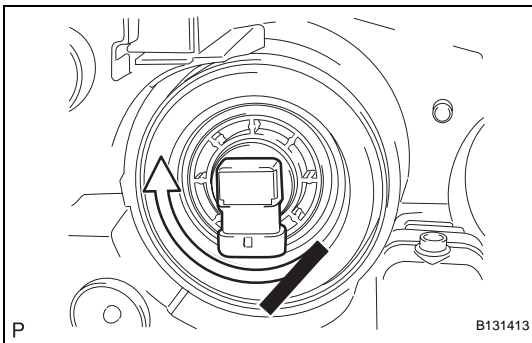

INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

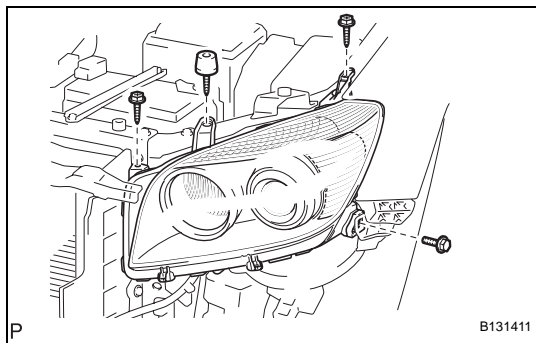

1. **INSTALL HEADLIGHT ASSEMBLY LH**
 - (a) Connect the connectors with the headlight.
 - (b) Install the 3 screws and bolt.
2. **INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSEMBLY UPPER**
 - (a) Install the reinforcement with the 2 bolts.
 - (b) Connect the 2 horns connectors.
3. **INSTALL FRONT BUMPER COVER** (See page [ET-11](#))
4. **INSTALL RADIATOR SUPPORT OPENING COVER** (See page [ET-12](#))
5. **INSTALL FRONT FENDER LINER RH** (See page [ET-10](#))
6. **INSTALL FRONT FENDER LINER LH** (See page [ET-12](#))
7. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
8. **ADJUST HEADLIGHT AIMING**
 - (a) Adjust the headlight aiming (see page [LI-94](#)).