


REAR COMBINATION LIGHT ASSEMBLY

COMPONENTS

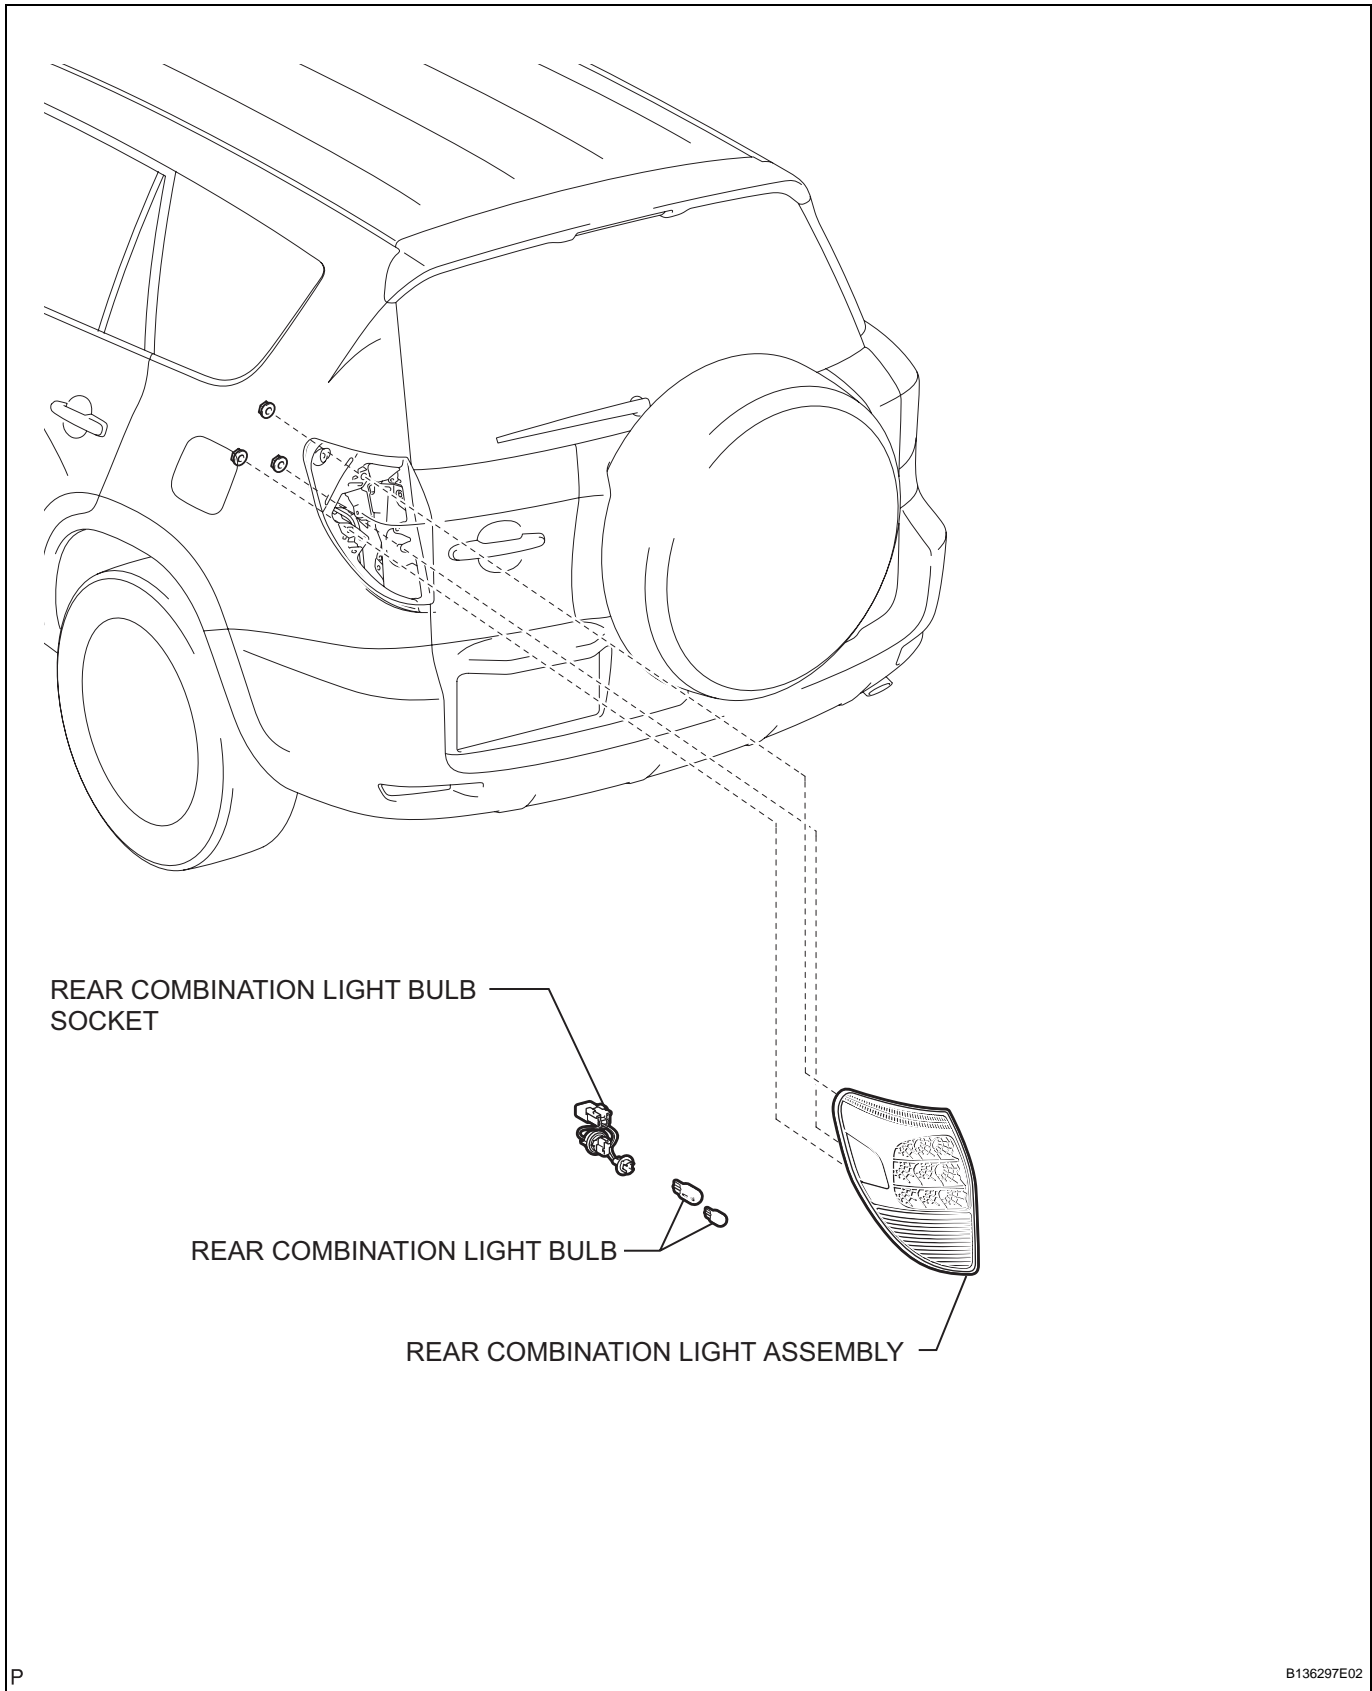

REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.



1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR COMBINATION LIGHT ASSEMBLY

- (a) Remove the 3 nuts and disconnect the connector.

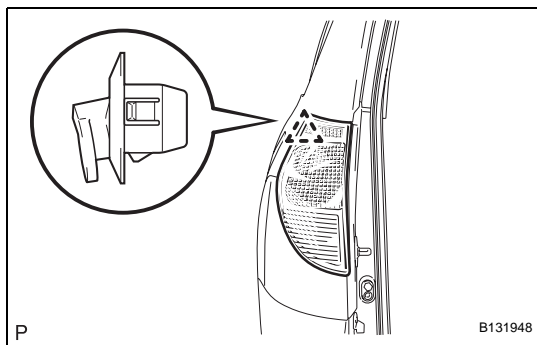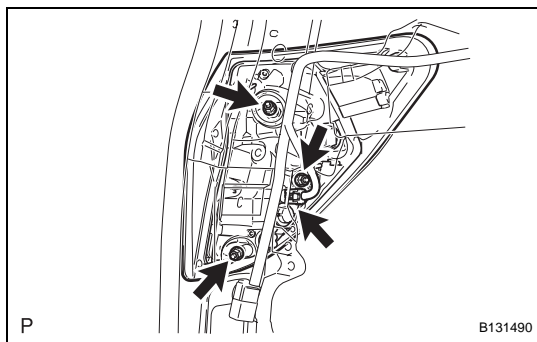

- (b) Detach the clip and remove the light.