



# INNER REAR VIEW MIRROR

## COMPONENTS


MI

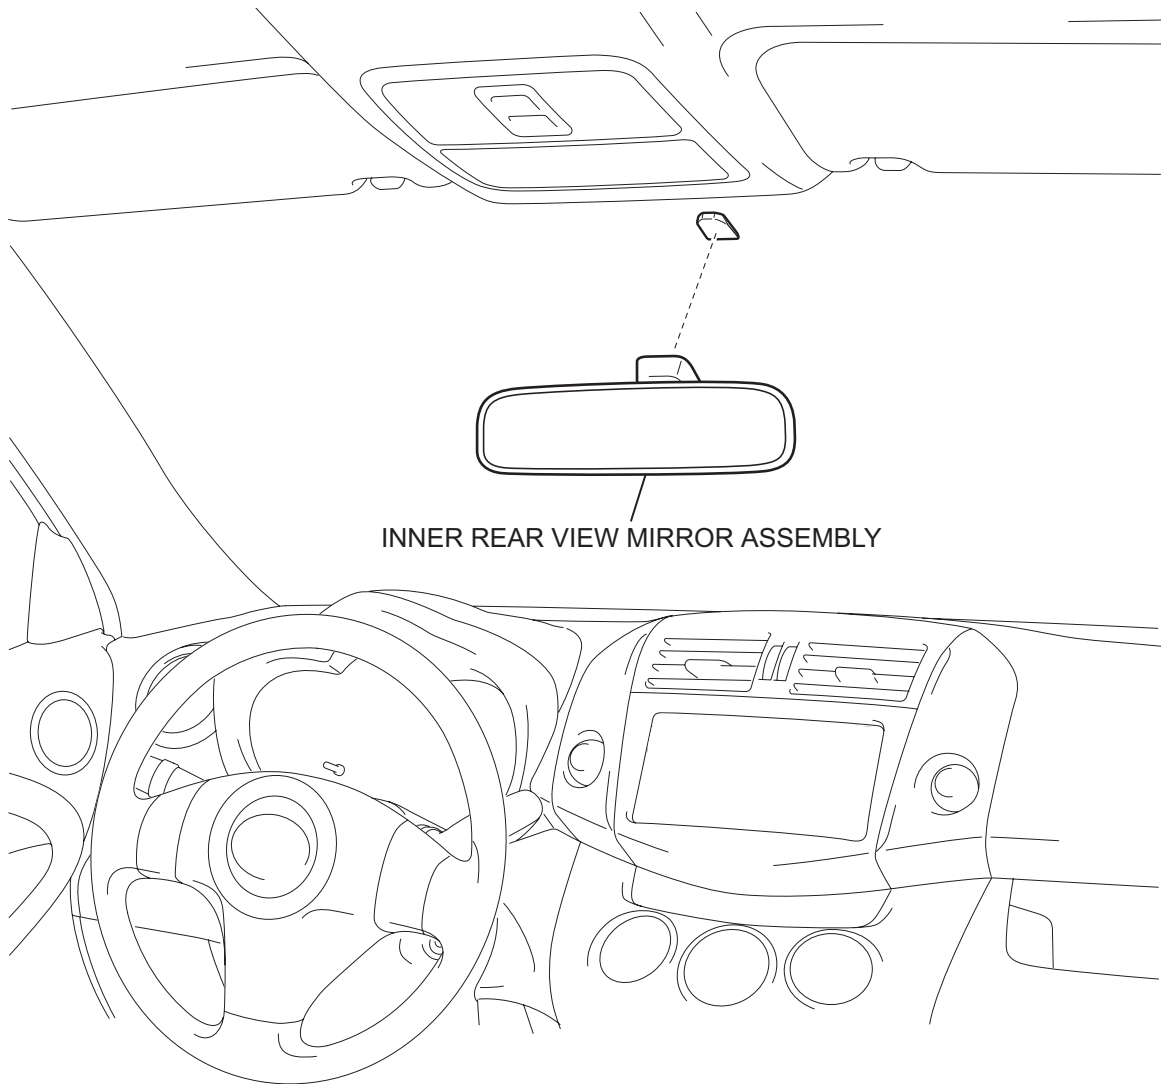

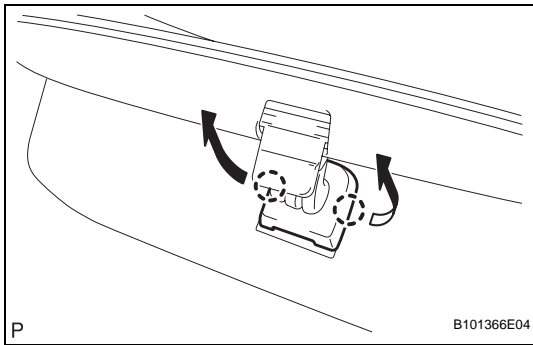


## REMOVAL

- 1. REMOVE INNER REAR VIEW MIRROR ASSEMBLY**
  - (a) Disengage the 2 claws and separate the inner rear view mirror cover as shown in the illustration.

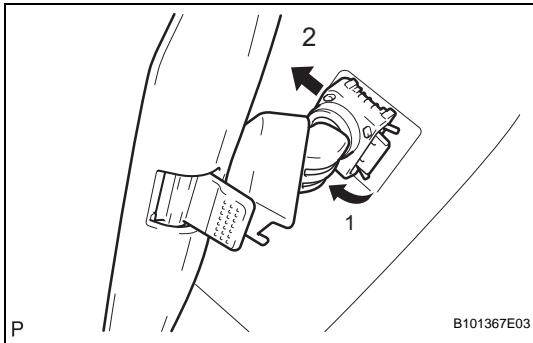

- (b) Remove the inner rear view mirror as shown in the illustration.

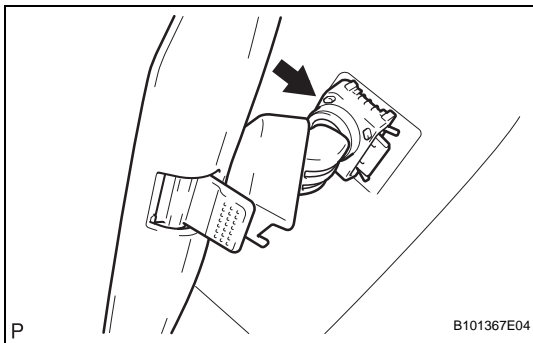

## INSTALLATION

- 1. INSTALL INNER REAR VIEW MIRROR ASSEMBLY**
  - (a) Install the inner rear view mirror as shown in the illustration.
  - (b) Install the cover.