



REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.


1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-19](#))
2. REMOVE FRONT ARMREST UPPER BASE PANEL LH (See page [ED-19](#))
3. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-20](#))
4. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the mirror connector labeled A.
- (b) Remove the 3 screws.
- (c) Remove the outer rear view mirror.

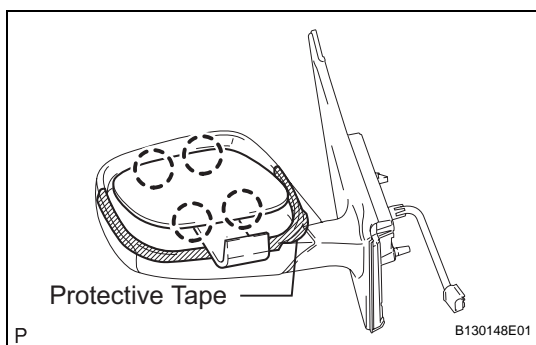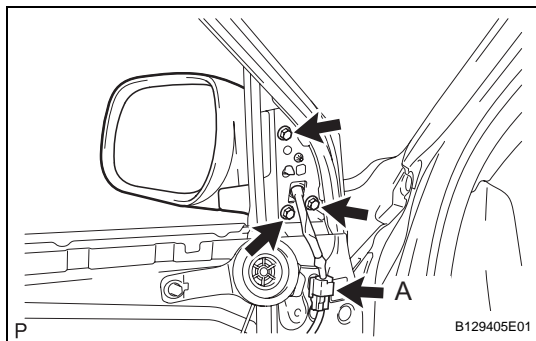


5. REMOVE OUTER MIRROR COVER LH (w/ Mirror Heater)

- (a) Using a moulding remover, detach the 4 claws.
HINT:
Apply protective tape to the mirror body.

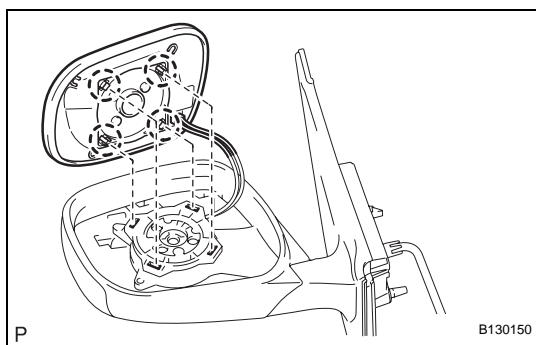


- (b) Remove the 2 connectors and disconnect the mirror.

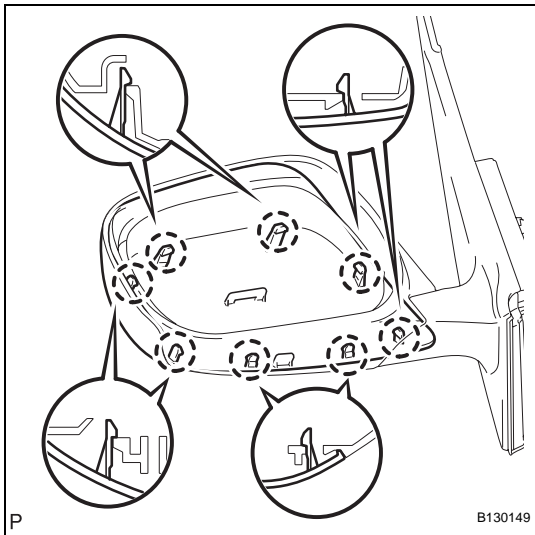

- (c) Using a screwdriver, detach the 8 claws and remove the mirror cover.

HINT:

Tape the screwdriver tip before use.

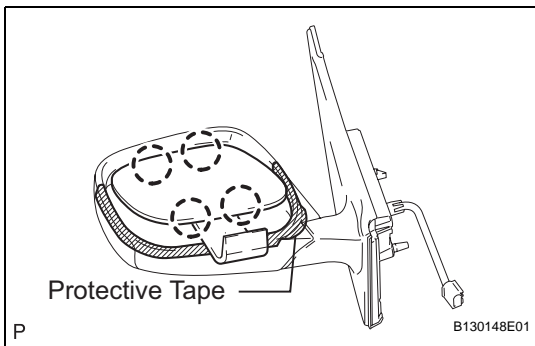


6. REMOVE OUTER MIRROR COVER LH (w/o Mirror Heater)


- (a) Using a moulding remover, detach the 4 claws.

HINT:

Apply protective tape to the mirror body.

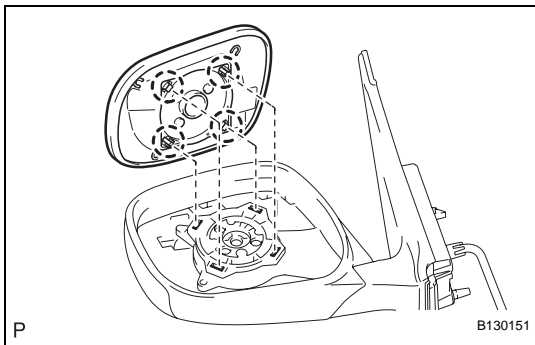

- (b) Disconnect the mirror.

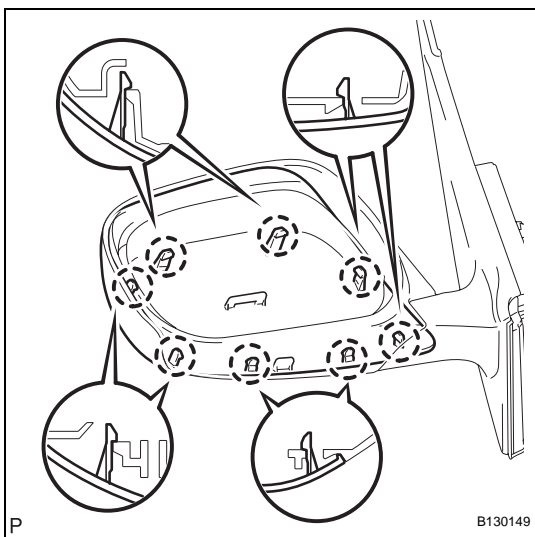

- (c) Using a screwdriver, detach the 8 claws and remove the mirror cover.

HINT:

Tape the screwdriver tip before use.