
 


 


 


 


 
 
 
 
 



 
 
 
 
U241E AUTOMATIC TRANSAXLE




 
 



 

 
 
SST

	09308-00010	Oil Seal Puller	-
	09316-60011	Transmission & Transfer Bearing Replacer	-
	(09316-00011)	Replacer Pipe	-
	09350-32014	TOYOTA Automatic Transmission Tool Set	-
	(09351-32010)	One-way Clutch Test Tool	-
	(09351-32020)	Stator Stopper	-
	(09351-32070)	No.2 Piston Spring Compressor	-
	(09351-3240)	Oil Seal Replacer	-
	(09351-32150)	Oil Seal Replacer	-
	09387-00020	Direct Clutch Wrench	-
	09387-00030	Counter Drive Gear Holding Tool	-


 
 
 

 

 


 

PP













PP




	09387-00041	Bearing Puller Assembly	-
	(09387-01010)	Claw No.1	-
	(09387-01030)	Pin	-
	(09387-01040)	Bearing Puller Body	-
	(09387-02010)	Oil Seal Replacer	-
	(09387-02020)	One-way Clutch Test Tool Set	-
	09387-00050	Under Drive Gear Puller	-
	09387-00060	Second Brake Wrench	-
	09387-00070	First & Reverse Brake Wrench	-
	09387-00080	Counter Drive Gear Nut Wrench	-
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	-
	09514-35011	Rear Wheel Bearing Puller	-

	09550-60010	Differential Side Bearing Replacer	-
	(09951-00320)	Replacer 32	-
	09564-16020	Drive Pinion Lock Nut Wrench	-
	09564-32011	Differential Preload Adaptor	-
	09608-06041	Front Hub Inner Bearing Cone Replacer	-
	09608-32010	Steering Knuckle Oil Seal Replacer	-
	09649-17010	Steering Knuckle Tool	-
	09930-00010	Drive Shaft Nut Chisel	-
	(09931-00010)	Handle	-
	(09931-00020)	Nut Chisel	-
	09950-00020	Bearing Remover	-
	09950-00030	Bearing Remover Attachment	-

PP

	09950-40011	Puller B Set	-
	(09951-04010)	Hanger 150	-
	(09951-04020)	Hanger 200	-
	(09952-04010)	Slide Arm	-
	(09953-04020)	Center Bolt 150	-
	(09954-04010)	Arm 25	-
	(09955-04011)	Claw No.1	-
	(09955-04061)	Claw No.6	-
	(09957-04010)	Attachment	-
	(09958-04011)	Holder	-
	09950-60010	Replacer Set	-
	(09951-00230)	Replacer 23	-

	(09951-00250)	Replacer 25	-
	(09951-00320)	Replacer 32	-
	(09951-00340)	Replacer 34	-
	(09951-00350)	Replacer 35	-
	(09951-00400)	Replacer 40	-
	(09951-00450)	Replacer 45	-
	(09951-00600)	Replacer 60	-
	09950-60020	Replacer Set No.2	-
	(09951-00680)	Replacer 68	-
	(09951-00710)	Replacer 71	-
	(09951-00890)	Replacer 89	-
	(09951-07150)	Handle 150	-

	09950-70010	Handle Set	-
	(09951-07100)	Handle 100	-
	(09951-07150)	Handle 150	-

PP