


FRONT SEAT INNER BELT ASSEMBLY

COMPONENTS

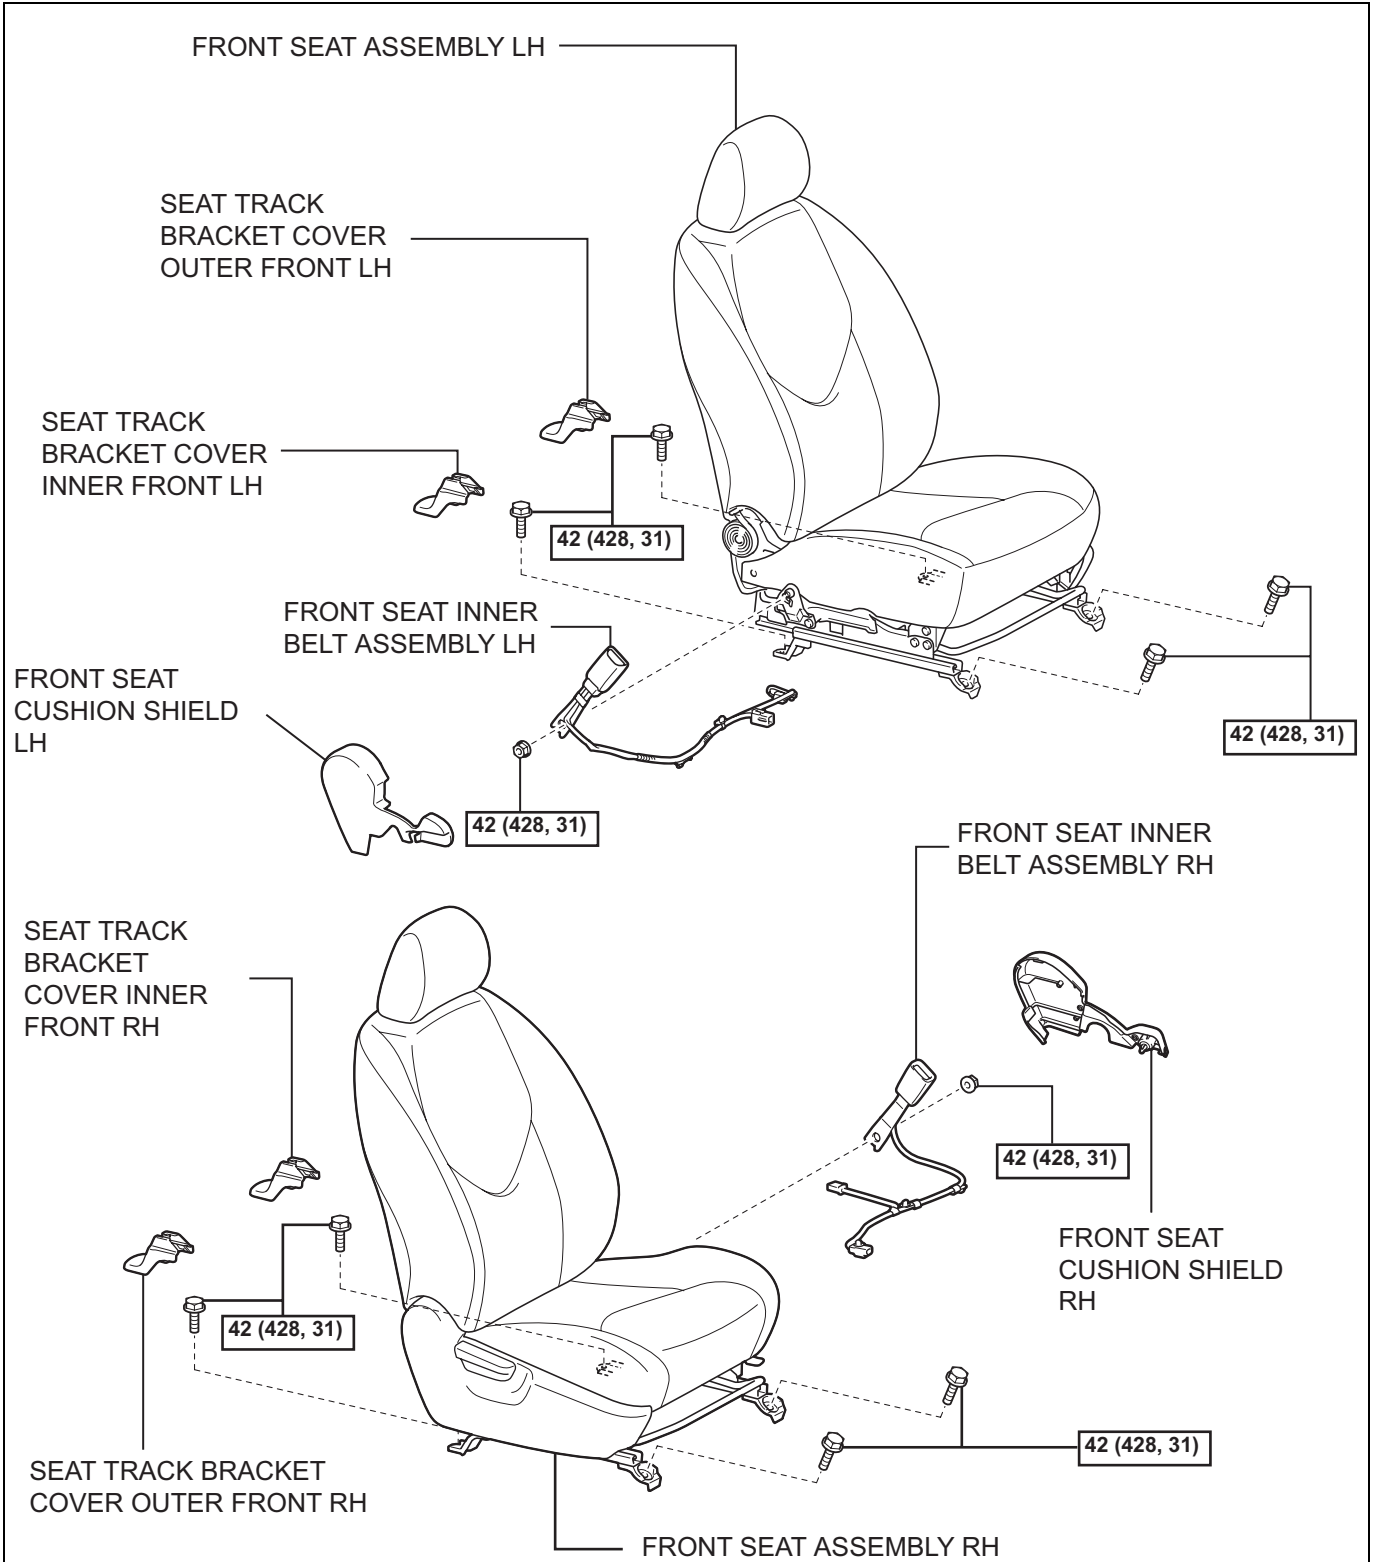


N*m (kgf*cm, ft.*lbf) : Specified torque

SB

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **REMOVE FRONT SEAT TRACK BRACKET OUTER COVER LH** (See page [SE-11](#))
3. **REMOVE FRONT SEAT TRACK BRACKET INNER COVER LH** (See page [SE-11](#))
4. **REMOVE SEAT TRACK BRACKET COVER OUTER FRONT RH**
 (a) Use the same procedures described for the LH side.
5. **REMOVE SEAT TRACK BRACKET COVER INNER FRONT RH**
 (a) Use the same procedures described for the LH side.
6. **REMOVE FRONT SEAT ASSEMBLY (for Power Seat)** (See page [SE-27](#))
7. **REMOVE FRONT SEAT ASSEMBLY (for Manual Seat)** (See page [SE-11](#))
8. **REMOVE FRONT SEAT CUSHION SHIELD RH (for Power Seat)** (See page [SE-29](#))
9. **REMOVE FRONT SEAT CUSHION INNER SHIELD LH (for Manual Seat)** (See page [SE-13](#))
10. **REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)**
 (a) for Driver Seat:
 Disconnect the 2 connectors and detach the 2 clamps.
 (b) for Passenger Seat:
 Disconnect the connector and detach the 2 clamps.
 (c) Remove the nut and seat belt.
11. **REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)**
 (a) for Driver Seat:
 Disconnect the 2 connectors and detach the 3 clamps.
 (b) for Passenger Seat:
 Disconnect the connector and detach the 2 clamps.

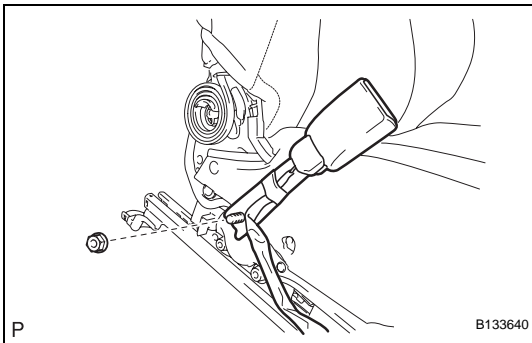

(c) Remove the nut and seat belt.

