


INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

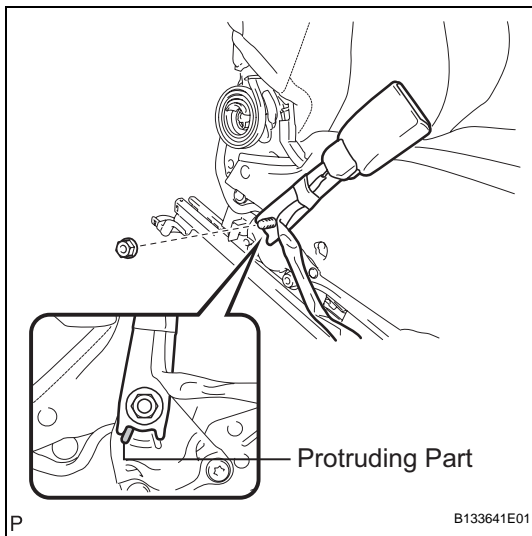

1. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)


- (a) Install the front seat inner belt assembly with the nut.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not overlap the anchor part of the seat belt and protruding part of the seat adjuster.

- (b) for driver seat:
Attach the 2 clamps and connect the 2 connector.
- (c) for Passenger Seat:
Attach the clamp and connect the 2 connector.

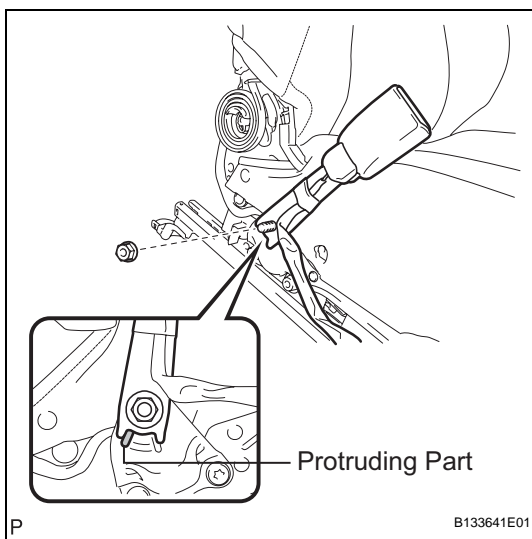

2. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)

- (a) Install the front seat inner belt assembly with the nut.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not overlap the anchor part of the seat belt and protruding part of the seat adjuster.

- (b) for driver seat:
Attach the 3 clamps and connect the 2 connector.
- (c) for Passenger Seat:
Attach the 2 clamps and connect the connector.

3. INSTALL FRONT SEAT CUSHION INNER SHIELD LH (See page [SE-21](#))

4. INSTALL FRONT SEAT CUSHION INNER SHIELD RH (See page [SE-21](#))

5. INSTALL FRONT SEAT ASSEMBLY (for Power Seat) (See page [SE-27](#))

6. INSTALL FRONT SEAT ASSEMBLY (for Manual Seat) (See page [SE-11](#))

7. INSTALL FRONT SEAT TRACK BRACKET OUTER COVER LH (See page [SE-23](#))

8. INSTALL FRONT SEAT TRACK BRACKET INNER COVER LH (See page [SE-23](#))

9. INSTALL FRONT SEAT TRACK BRACKET INNER COVER RH

- (a) Use the same procedures described for the LH side.

-
10. **INSTALL FRONT SEAT TRACK BRACKET OUTER COVER RH**
 - (a) Use the same procedures described for the LH side.
 11. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**