


## REMOVAL

### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

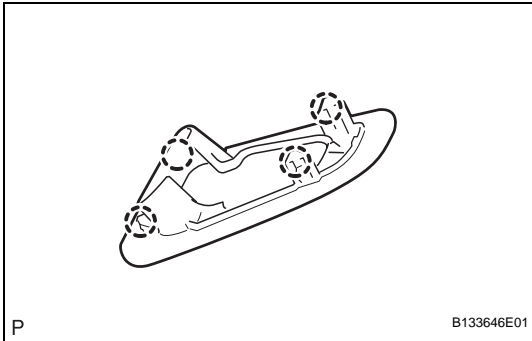

### 1. REMOVE SHOULDER BELT ANCHOR COVER RH

- (a) Using a screwdriver, remove the 4 claws and cover.

#### HINT:

Tape the screwdriver tip before use.

### 2. REMOVE ROOF HEADLINING ASSEMBLY



#### HINT:

It is not necessary to completely remove the roof headlining. Slightly lower the rear section of the roof headlining.

- (a) Partially remove the roof headlining (see page [IR-26](#)).

### 3. REMOVE REAR CENTER SEAT OUTER BELT ASSEMBLY

- (a) Remove the 2 bolts and seat belt.

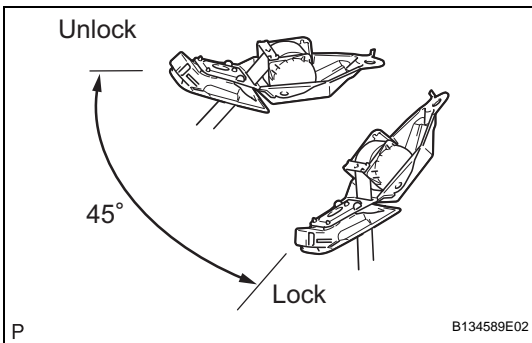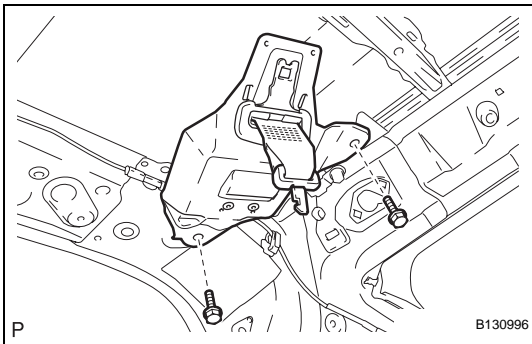

## INSPECTION

### 1. INSPECT REAR CENTER SEAT OUTER BELT ASSEMBLY

#### NOTICE:

Do not disassemble the retractor.

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.

If the operation is not as specified, replace the belt.


## INSTALLATION


### 1. INSTALL REAR CENTER SEAT OUTER BELT ASSEMBLY

- (a) Install the seat belt with the 2 bolts.  
Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)

### 2. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining (see page [IR-49](#)).

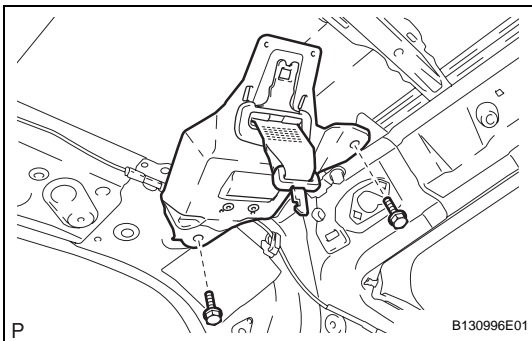

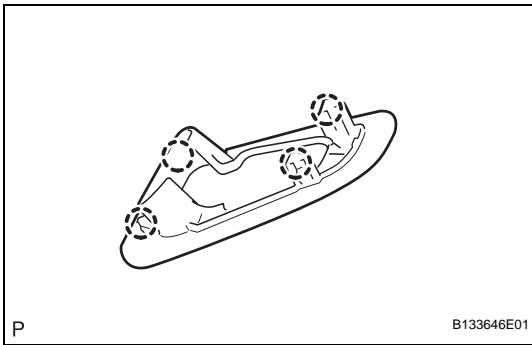

- 3. INSTALL SHOULDER BELT ANCHOR COVER RH**  
(a) Install the cover with the 4 claws.