


INSTALLATION

HINT:


- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

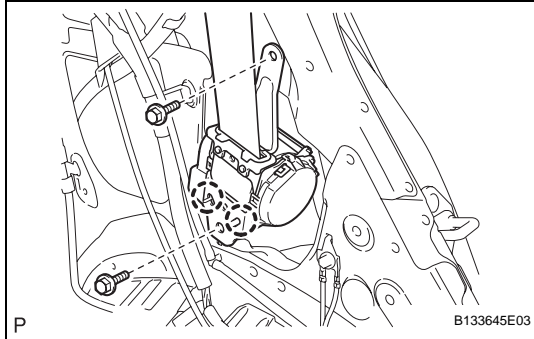

1. INSTALL REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH


- (a) Align the claws with the seat belt positioning holes, and install the retractor of the seat belt with the 2 bolts as shown in the illustration.

Torque: 8.5 N*m (87 kgf*cm, 75 in.*lbf) for upper bolt
42 N*m (428 kgf*cm, 31 ft.*lbf) for lower bolt

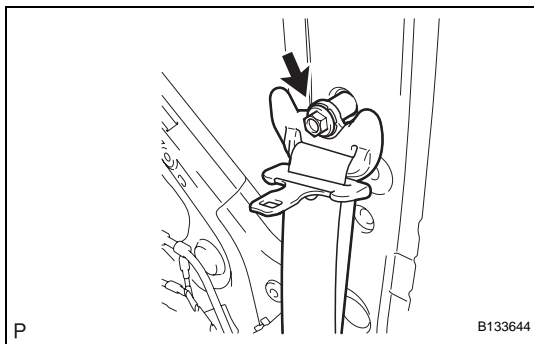

- (b) Connect the shoulder anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)


2. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-52](#))

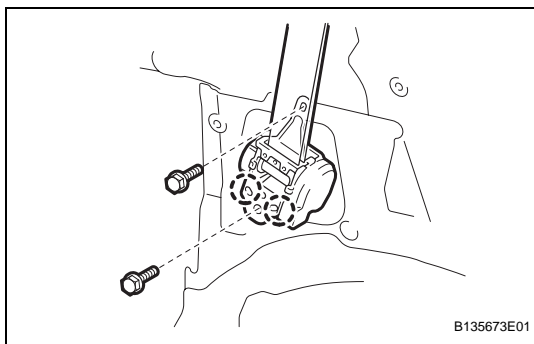

3. INSTALL REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Align the claws with the seat belt positioning holes and install the retractor of the seat belt with the 2 bolts as shown in the illustration.

Torque: 8.5 N*m (87 kgf*cm, 75 in.*lbf) for upper bolt
42 N*m (428 kgf*cm, 31 ft.*lbf) for lower bolt

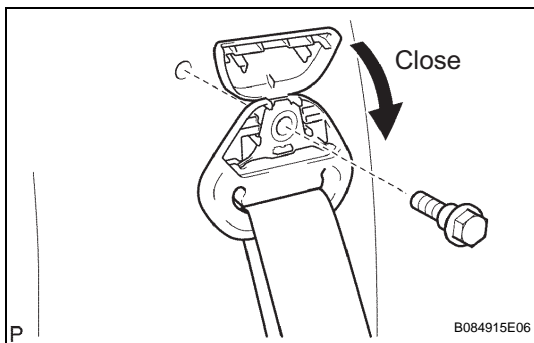


- (b) Connect the shoulder anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 (c) Close the cover cap.

4. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat) (See page [IR-51](#))


5. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-53](#))

6. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat) (See page [IR-52](#))

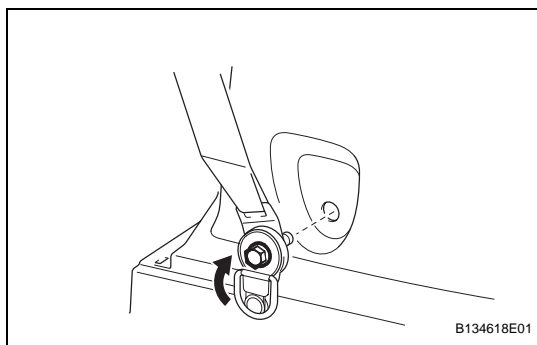

7. CONNECT REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Connect the seat belt's floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
- (b) Close the cover.

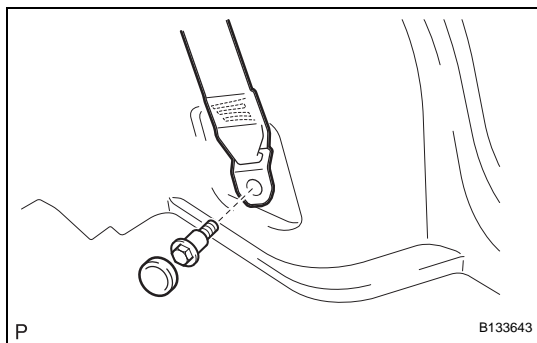

8. CONNECT REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH

- (a) Connect the seat belt's floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
- (b) Attach the lap belt outer anchor cover.

9. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat)

10. INSTALL REAR FLOOR FINISH PLATE (See page [IR-55](#))

11. INSTALL REAR NO. 1 FLOOR MAT SUPPORT SIDE PLATE (See page [IR-55](#))

12. INSTALL REAR FLOOR NO. 3 BOARD

13. INSTALL REAR FLOOR NO. 2 BOARD

14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))

15. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-55](#))

16. INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

17. INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))

18. INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

19. REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))

20. INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

21. INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)

22. INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)

23. INSTALL PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

24. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

25. **INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-57](#))**
26. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**