

## OPERATION CHECK

1. **INSPECT DRIVER SIDE SEAT BELT WARNING LIGHT**
  - (a) Turn the ignition switch ON.
  - (b) When the driver seat belt is not fastened, check that the driver seat belt warning light on the combination meter blinks.
  - (c) When the driver seat belt is fastened, check that the driver seat belt warning light on the combination meter is off.
2. **INSPECT PASSENGER SIDE SEAT BELT WARNING LIGHT (For Automatic Air Conditioning System)**
  - (a) Turn the ignition switch ON.
  - (b) When the front passenger seat belt is not fastened with the passenger seat occupied, check that the front passenger seat belt warning light on the heater control panel display blinks.
  - (c) When the front passenger seat belt is fastened with the passenger seat occupied, check that the front passenger seat belt warning light on the heater control panel display is off.
3. **REMOVE PASSENGER SIDE SEAT BELT WARNING LIGHT (For Manual Air Conditioning System)**
  - (a) Turn the ignition switch ON.
  - (b) When the front passenger seat belt is not fastened with the passenger seat occupied, check that the front passenger seat belt warning light on the clock panel blinks.
  - (c) When the front passenger seat belt is fastened with the passenger seat occupied, check that the front passenger seat belt warning light on the clock panel is off.
4. **INSPECT SEAT BELT WARNING BUZZER**

HINT:  
If the buzzer does not sound, the buzzer cancel setting may be set to ON.

  - (a) Turn the ignition switch ON.
  - (b) When the vehicle is driven at approximately 20 km/h (12.4 mph) or more while the driver or front passenger seat belt is not fastened, check that the buzzer in the combination meter sounds at 1.2 second intervals for 30 seconds.
  - (c) 30 seconds after the buzzer has first sounded, check that the buzzer sounds at 0.4 second intervals for 90 seconds.
  - (d) 120 seconds after the buzzer has first sounded, check that the buzzer stops.
  - (e) After the buzzer has stopped, turn the ignition switch off and then start the engine again. Drive the vehicle at approximately 25 km/h (16 mph) or more while the driver or front passenger seat belt is not fastened, and then check that the buzzer sounds again.

- (f) After the buzzer has stopped, fasten the driver and front passenger seat belts. Drive the vehicle at approximately 25 km/h (16 mph) or more and unfasten the driver or front passenger seat belt, and then check that the buzzer sounds again.
- (g) After the buzzer has stopped, move the shift lever to the R position, and then move it to the D position. Drive the vehicle at approximately 25 km/h (16 mph) or more, and then check that the buzzer sounds again.