



LUMBAR SUPPORT ADJUSTER ASSEMBLY

INSPECTION

1. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY

- (a) Check operation of the lumbar support adjuster.
 - (1) Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

OK

Measurement Condition	Operation Direction
Battery positive (+) → 1 (H) Battery negative (-) → 2 (R)	Clockwise
Battery positive (+) → 2 (R) Battery negative (-) → 1 (H)	Counterclockwise

If the result is not as specified, replace the lumbar support adjuster assembly.