
INSPECTION

- 1. CHECK TORQUE SENSOR
 - (a) Check the torque sensor (see page PS-19).
- 2. CHECK POWER STEERING MOTOR
 - (a) Check the power steering motor (see page PS-22).
- 3. CHECK MOTOR ROTATION ANGLE SENSOR
 - (a) Check the motor rotation angle sensor (see page PS-25).

REASSEMBLY




(a) Attach the 2 claws to install the ignition switch onto the steering column bracket upper.

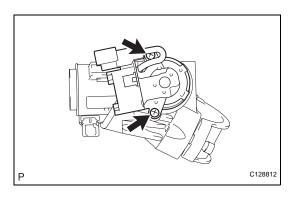

2. INSTALL KEY INTERLOCK SOLENOID

- (a) for Automatic Transaxle:
 - Install the key interlock solenoid onto the steering column bracket upper with the 2 screws.

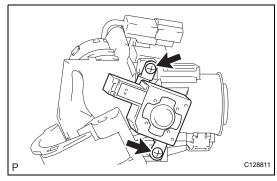


3. INSTALL UNLOCK WARNING SWITCH ASSEMBLY


(a) Attach the 2 claws to install the unlock warning switch onto the steering column bracket upper.


Slide the unlock warning switch in the direction shown by the arrow in the illustration to install it.



 
- (a) Turn the ignition switch to ON (ACC).
- (b) Install the ignition switch lock cylinder into the steering column bracket upper.
- (c) Make sure that the ignition switch lock cylinder is securely fixed onto the ignition switch lock cylinder.

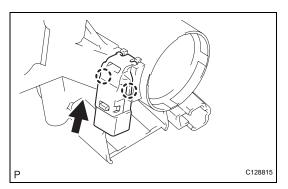

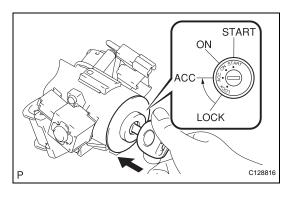






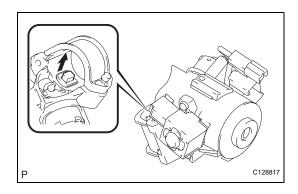

5. INSPECT STEERING LOCK OPERATION

(a) Remove the key and check that the steering lock function is activated.

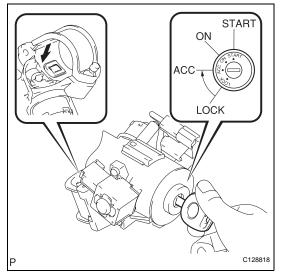

(b) Insert the key, turn the ignition switch ON (ACC) and check that the steering lock function is deactivated.


6. INSTALL STEERING COLUMN UPPER W/ SWITCH BRACKET ASSEMBLY

(a) Fix the steering column assembly in a vise between aluminum plates.


NOTICE:

Do not overtighten the vise.



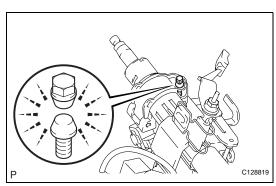

(b) Install the steering column upper with switch bracket and steering column clamp upper with new steering lock set bolt, and then tighten the bolts until their heads come off.

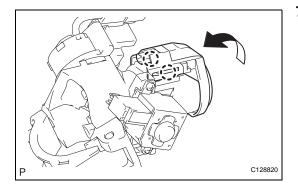

7. INSTALL TRANSPONDER KEY AMPLIFIER

(a) Attach the 2 claws and install the transponder key amplifier onto the steering column upper with the switch bracket.