

REMOVAL

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE RADIATOR SUPPORT OPENING COVER**


3. **REMOVE FRONT AIRBAG SENSOR LH**

- (a) Disconnect the sensor connector.
- (b) Remove the bolt and sensor.

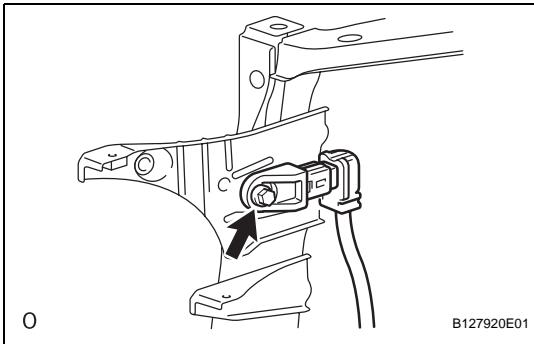

4. **REMOVE FRONT AIRBAG SENSOR RH**


- (a) Disconnect the sensor connector.
- (b) Remove the bolt and sensor.

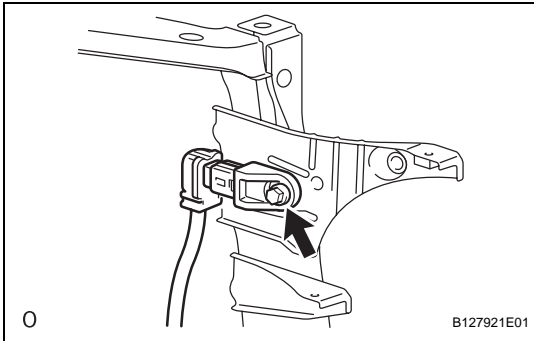

INSTALLATION

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

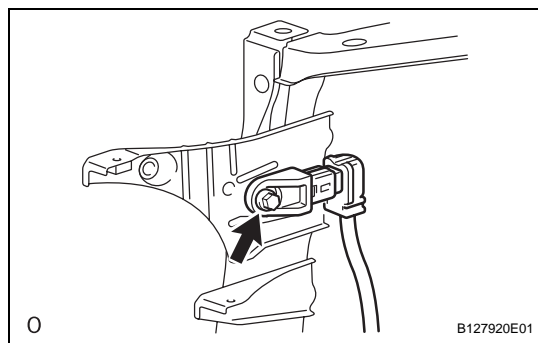


1. INSTALL FRONT AIRBAG SENSOR LH

- (a) Install the sensor with the bolt.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

NOTICE:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
 - When installing the airbag sensor, make sure that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (b) Check that there is no free play in the installation parts of the sensor.
- (c) Connect the sensor connector.

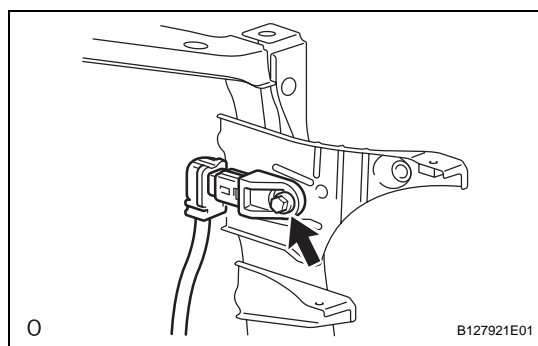

2. INSTALL FRONT AIRBAG SENSOR RH

- (a) Install the sensor with the bolt.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

NOTICE:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
 - When installing the airbag sensor, make sure that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (b) Check that there is no free play in the installation parts of the sensor.
- (c) Connect the sensor connector.

3. INSTALL RADIATOR SUPPORT OPENING COVER

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

5. CHECK SRS WARNING LIGHT

- (a) Check the SRS warning light (see page [RS-34](#)).