


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

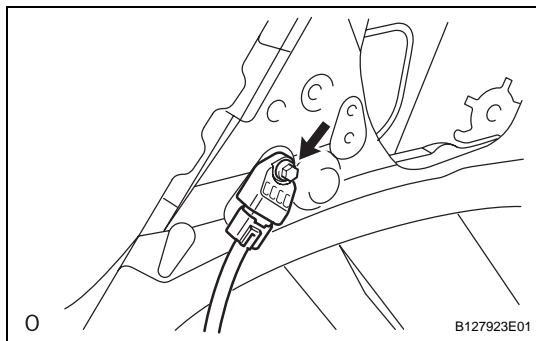

1. INSTALL AIRBAG SENSOR REAR LH

- (a) Install the airbag sensor with the bolt.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

NOTICE:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
2. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-53](#))
 3. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat) (See page [IR-52](#))
 4. CONNECT REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)
 5. CONNECT REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH (See page [SB-51](#))
 6. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat)
 7. INSTALL REAR FLOOR FINISH PLATE (See page [IR-55](#))
 8. INSTALL REAR NO. 1 FLOOR MAT SUPPORT SIDE PLATE (See page [IR-55](#))
 9. INSTALL REAR FLOOR NO. 3 BOARD
 10. INSTALL REAR FLOOR NO. 2 BOARD
 11. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))
 12. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat) (See page [IR-55](#))
 13. INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))
 14. INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))
 15. INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))
 16. INSTALL NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat) (See page [IR-56](#))

17. **INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)**
18. **INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)**
19. **INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)**
20. **REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)**
21. **INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH**
22. **INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-57](#))**
23. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
24. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-34](#)).