


SEAT POSITION SENSOR

COMPONENTS

FRONT SEAT ASSEMBLY

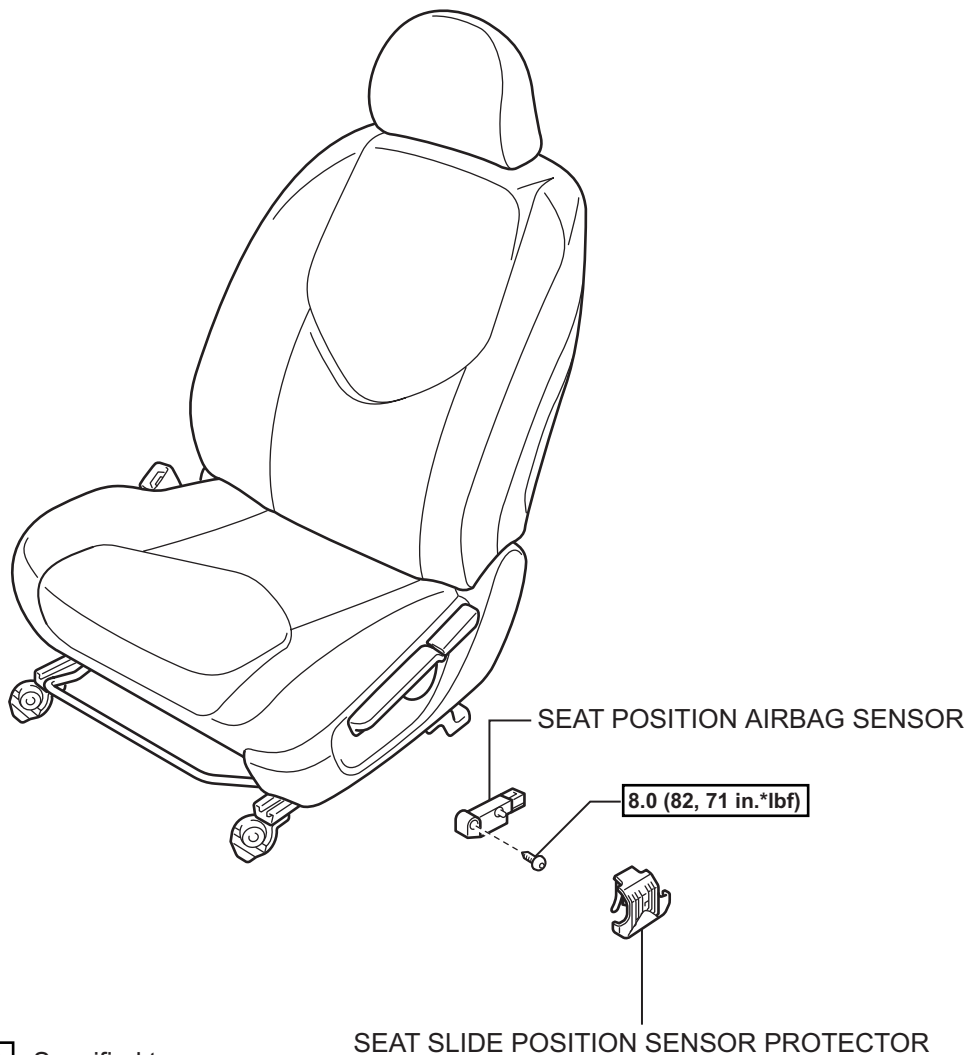

N*m (kgf*cm, ft.*lbf) : Specified torque

RS

ON-VEHICLE INSPECTION

1. CHECK SEAT POSITION SENSOR (VEHICLE NOT INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (see page [RS-49](#)).

2. CHECK SEAT POSITION SENSOR (VEHICLE INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (see page [RS-49](#)).
- (b) Even if the airbag was not deployed, check if there is any damage to the seat position sensor. If there are any defects as mentioned below, replace the seat position sensor with a new one:
 - Cracks, dents or chips on the sensor housing.
 - Cracks or other damage to the connector.

CAUTION:

For removal and installation procedures of the seat position sensor, be sure to follow the correct procedure.