

## REMOVAL

**CAUTION:**

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

**HINT:**

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE FRONT DOOR SCUFF PLATE LH** (See page [IR-26](#))

3. **REMOVE REAR DOOR SCUFF PLATE LH** (See page [IR-57](#))

4. **REMOVE CENTER PILLAR GARNISH LOWER LH** (See page [SB-27](#))

5. **REMOVE SIDE AIRBAG SENSOR ASSEMBLY LH**

- (a) Disconnect the connector.
- (b) Remove the bolt and sensor.

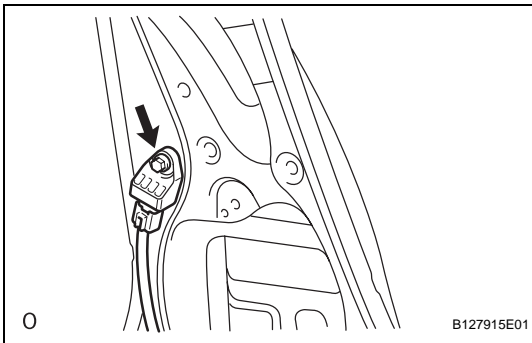


## INSTALLATION

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

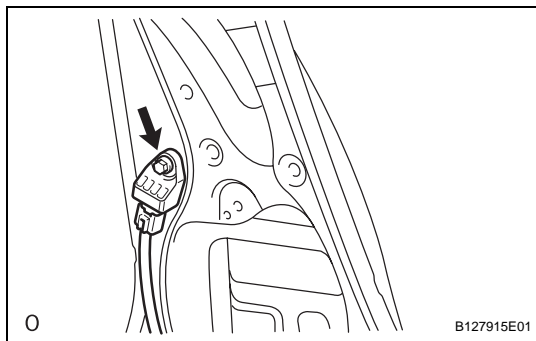

### 1. INSTALL SIDE AIRBAG SENSOR ASSEMBLY LH

- (a) Install the sensor with the bolt.

**Torque: 9.0 N\*m (92 kgf\*cm, 82 in.\*lbf)**

#### NOTICE:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (b) Check that there is no looseness in the installation parts of the sensor.

- (c) Connect the connector.

### 2. INSTALL CENTER PILLAR GARNISH LOWER LH (See page [SB-31](#))

### 3. INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-57](#))

### 4. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-59](#))

### 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

### 6. CHECK SRS WARNING LIGHT

- (a) Check the SRS warning light (see page [RS-34](#)).