


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

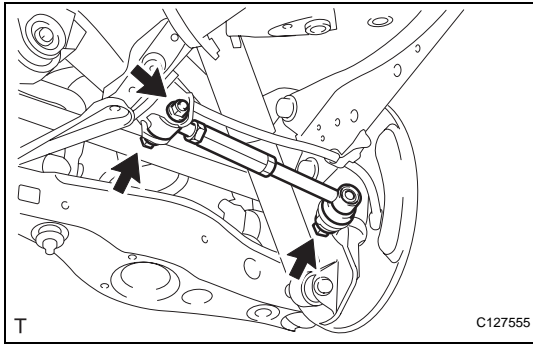

1. TEMPORARILY TIGHTEN REAR NO. 1 SUSPENSION ARM ASSEMBLY LH

- (a) Temporarily install the suspension arm with the bolt and 2 nuts to the suspension member and axle carrier.

2. INSTALL REAR WHEEL

- (a) Install the wheel.
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

3. TIGHTEN REAR NO. 1 SUSPENSION ARM ASSEMBLY LH

- (a) Install the nut and 2 bolts.
Torque: 90 N*m (918 kgf*cm, 66 ft.*lbf) for bolt
100 N*m (1,020 kgf*cm, 74 ft.*lbf) for nut

NOTICE:

For the nut on the rear suspension member side, do not tighten the nut.

4. INSPECT AND ADJUST REAR WHEEL ALIGNMENT

- (a) Inspect and adjust the rear wheel alignment (see page [SP-7](#)).