


## INSTALLATION

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

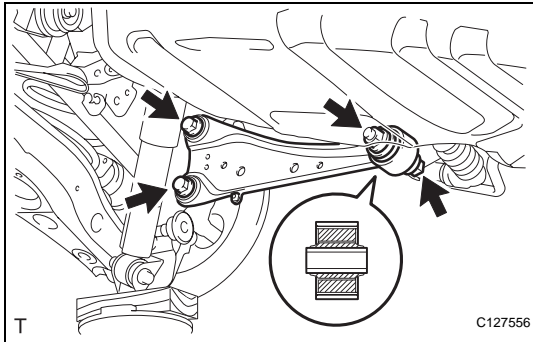

### 1. TEMPORARILY TIGHTEN REAR TRAILING ARM ASSEMBLY LH

- (a) Temporarily install the trailing arm with the 3 bolts and nut to the axle carrier and suspension arm bracket.

### HINT:

While fixing the nut in place, tighten the bolt.

### 2. INSTALL NO. 2 PARKING BRAKE CABLE ASSEMBLY (See page [PB-9](#))

### 3. INSTALL REAR WHEEL

Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)

### 4. TIGHTEN REAR TRAILING ARM ASSEMBLY LH

- (a) Tighten the 3 bolts and nut.

Torque: 200 N\*m (2,039 kgf\*cm, 148 ft.\*lbf) for axle carrier

150 N\*m (1,530 kgf\*cm, 111 ft.\*lbf) for suspension arm bracket

### 5. INSPECT AND ADJUST REAR WHEEL ALIGNMENT

- (a) Inspect and adjust the rear wheel alignment (see page [SP-7](#)).