


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

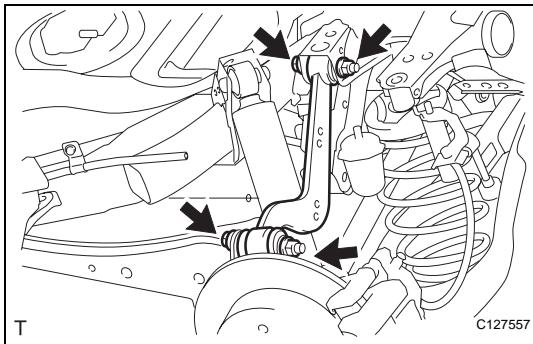

- 1. TEMPORARILY INSTALL REAR UPPER CONTROL ARM LH**
 - (a) Temporarily install the control arm with the 2 bolts and 2 nut.

HINT:
Fix the nuts in place and temporarily tighten the bolts.
- 2. CONNECT SKID CONTROL SENSOR WIRE (for 2WD)**
(See page [BC-201](#))
- 3. CONNECT REAR SPEED SENSOR LH (for 4WD)** (See page [BC-206](#))
- 4. INSTALL REAR WHEEL**
 - (a) Install the wheel.
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
- 5. TIGHTEN REAR UPPER CONTROL ARM ASSEMBLY LH**
 - (a) Fix the 2 nuts in place and tighten the 2 bolts.
Torque: 90 N*m (918 kgf*cm, 66 ft.*lbf)