


REAR WHEEL ALIGNMENT

ADJUSTMENT

1. **INSPECT TIRE**
 - (a) Inspect the tire (see page [TW-1](#)).
2. **MEASURE VEHICLE HEIGHT**
 - (a) Measure the vehicle height (see page [SP-3](#)).
3. **INSPECT TOE-IN**
Standard toe-in

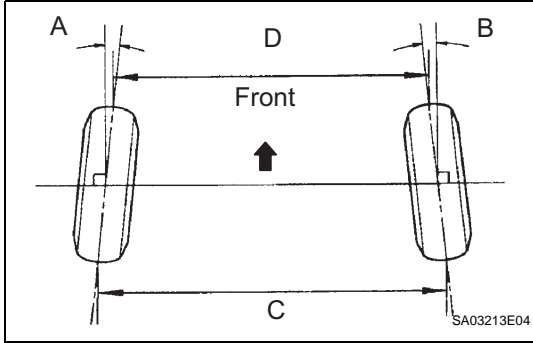

Item	Specified Condition
Toe-in (total)	A + B: 0°11' +-10' (0.18° +-0.17°) C - D: 2.3 +-1 mm (0.09 +-0.04 in.)

If the toe-in is not within the specified range, inspect the suspension parts and replace them if necessary.

4. **INSPECT CAMBER**
 - (a) Install the camber-caster-kingpin gauge or set the vehicle on the wheel alignment tester.
 - (b) Inspect the camber.

Standard camber

Item	Specified Condition
Camber Right-left error	Tire Size: 215/70R16 -0°55' +-45' (-0.92 +-0.75°) 30' (0.5°) or less
	Tire Size: 225/65R17 Tire Size: 235/55R18 -1°04' +-45' (-1.07 +-0.75°) 30' (0.5°) or less
	Tire Size: 225/65R17* -0°52' +-45' (-0.87 +-0.75°) 30' (0.5°) or less

HINT:

- *: w/ 3rd seat
- Camber is not adjustable. If the measurement is not within the specified range, inspect the suspension parts for damage and/or wear, and replace them if necessary.