


INSTALLATION

1. INSTALL FLOOR SHIFT ASSEMBLY


- Connect the 2 connectors and attach the clamp.
- Install the floor shift with the 4 bolts.

Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

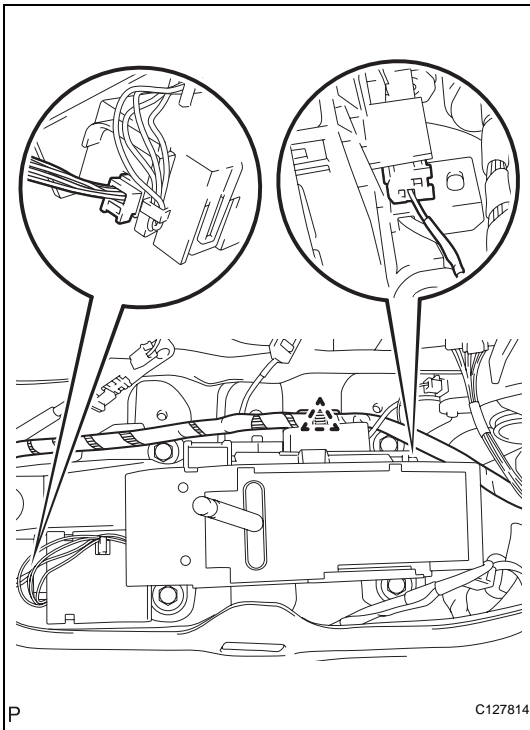

2. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY


- Turn the nut of the control cable and push in the lock.

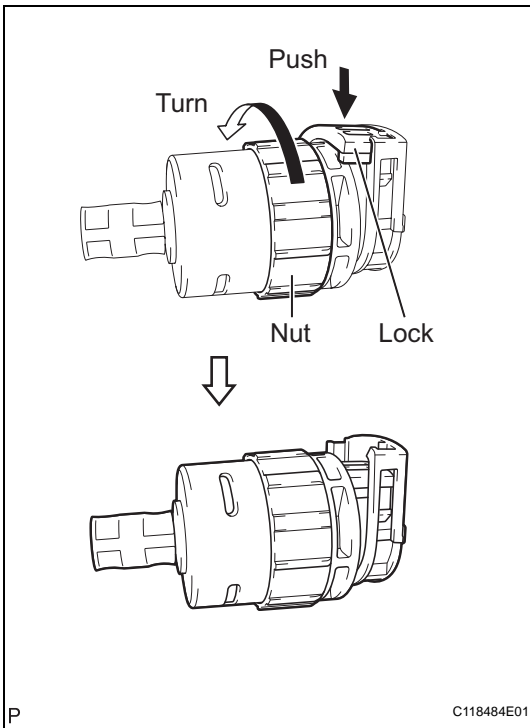


- Install the control cable onto the shift lever retainer.


NOTICE:

- Install the cable with the protruding portion of the cable outer facing upward.

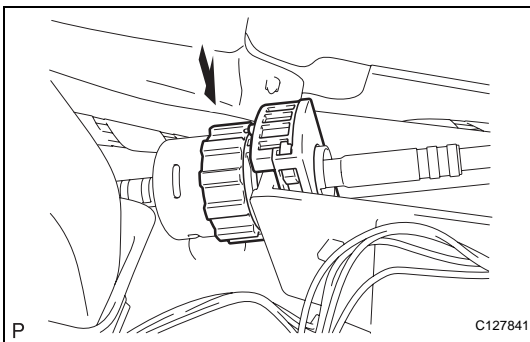

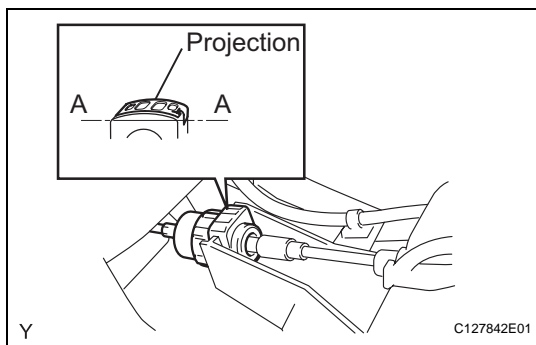

- After installing, check that the lock of the cable outer is protruding beyond portion A-A, as shown in the illustration.

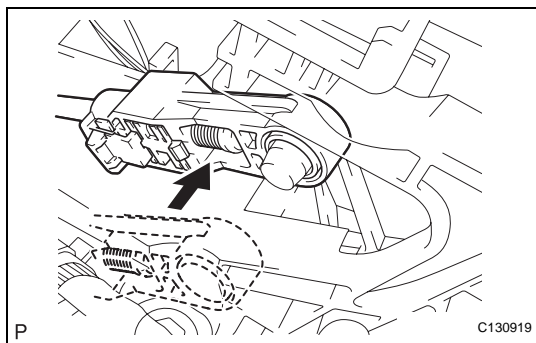

- (c) Connect the control cable to the shift lever.

NOTICE:

Connect the control cable so that the adjusting mechanism lock of the control cable is installed on the driver side of the vehicle.

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
4. **INSPECT SHIFT LEVER POSITION** (See page [AX-164](#))
5. **ADJUST SHIFT LEVER POSITION** (See page [AX-164](#))
6. **INSTALL REAR CONSOLE BOX SUB-ASSEMBLY**
 - (a) Install the rear console box (see page [IP-28](#)).
7. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY**