

# AUTOMATIC TRANSAXLE FLUID

## ON-VEHICLE INSPECTION

### 1. CHECK TRANSAXLE FLUID LEVEL

#### HINT:

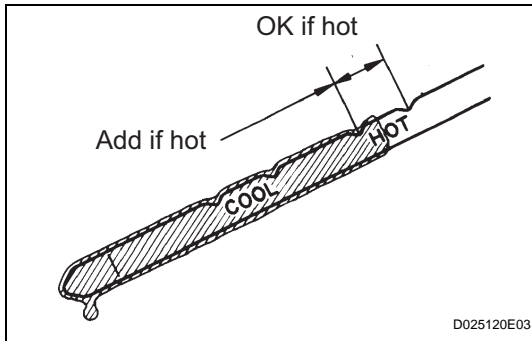
Drive the vehicle so that the engine and transaxle are at normal operating temperature.

#### Fluid temperature:

**70 to 80°C (158 to 176°F)**

- (a) Park the vehicle on a level surface and set the parking brake.
- (b) With the engine idling and the brake pedal depressed, move the shift lever to each position from P to L position, and return it to the P position.
- (c) Take out the ATF dipstick and wipe it clean.
- (d) Fully push the dipstick back into the pipe.
- (e) Take it out and check that the fluid level is at the HOT position.

If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs and/or other parts.

**AX**