





## DISASSEMBLY


### 1. REMOVE FRONT DIFFERENTIAL RING GEAR

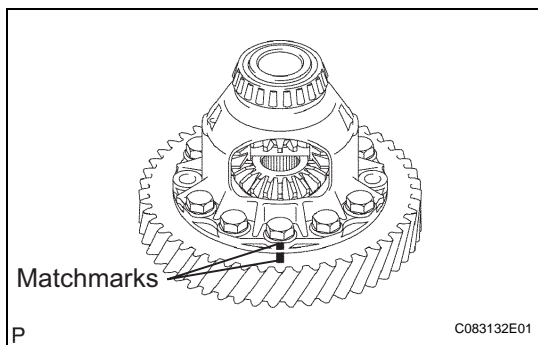

- (a) Place the matchmarks on the ring gear and differential case.

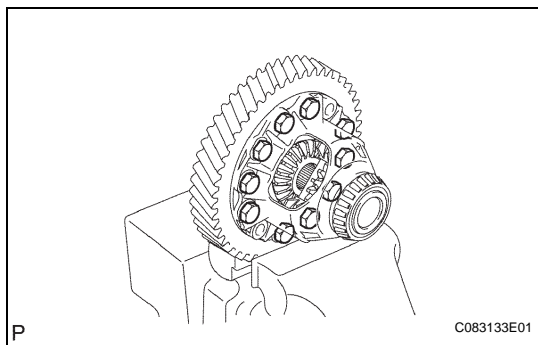


- (b) Remove the 10 bolts.

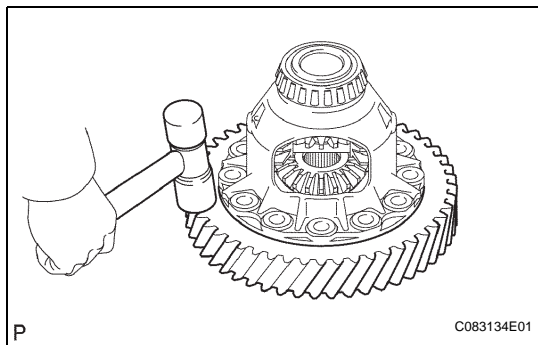


- (c) Using a plastic-faced hammer, tap on the ring gear to remove it from the case.

### 2. REMOVE FRONT DIFFERENTIAL CASE FRONT TAPERED ROLLER BEARING

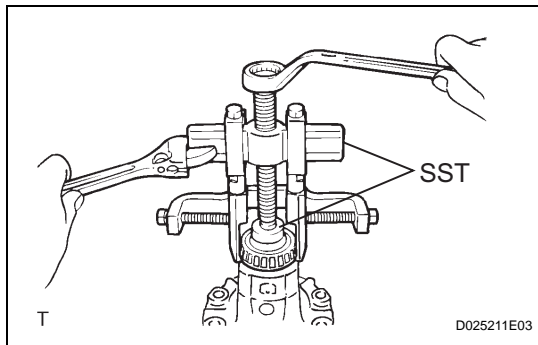

- (a) Using SST, remove the front differential case tapered roller bearing front inner race from the differential case.


**SST 09950-40011 (09951-04020, 09952-04010, 09953-04020, 09954-04010, 09955-04061, 09957-04010, 09958-04011), 09950-60010 (09951-00340)**

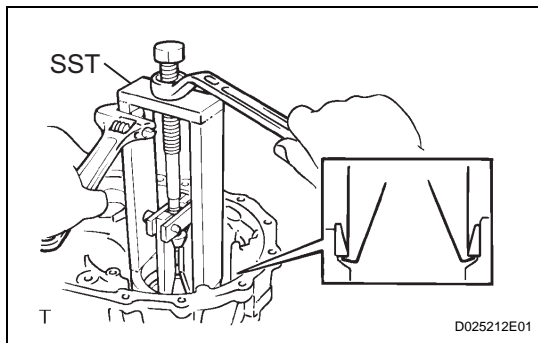

- (b) Using SST, remove the front differential case tapered roller bearing front outer race and differential case washer.

**SST 09387-00041 (09387-01030, 09387-01040, 09387-02010, 09387-02020)**


AX

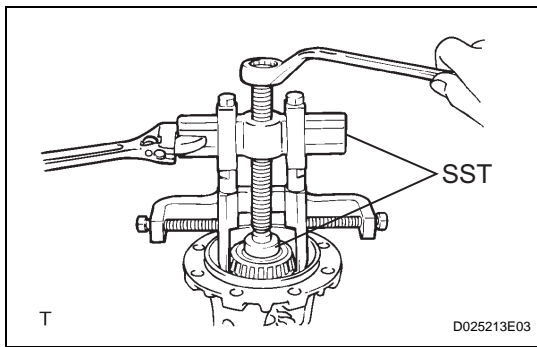

**3. REMOVE FRONT DIFFERENTIAL CASE REAR TAPERED ROLLER BEARING**


- (a) Using SST, remove the front differential case tapered roller bearing rear inner race from the differential case.

**SST 09950-40011 (09951-04020, 09952-04010, 09953-04020, 09954-04010, 09955-04061, 09957-04010, 09958-04011), 09950-60010 (09951-00340)**

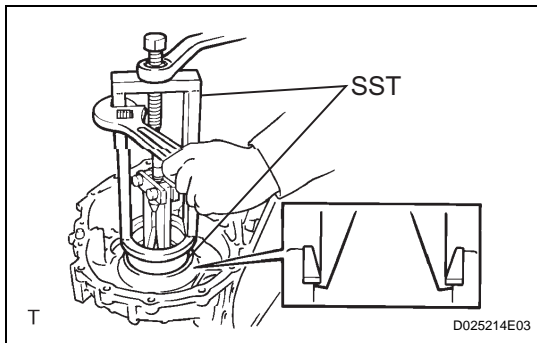


- (b) Using SST, remove the front differential case tapered roller bearing rear outer race from the differential case washer.

**SST 09387-00041 (09387-01030, 09387-01040, 09387-02010, 09387-02020)**

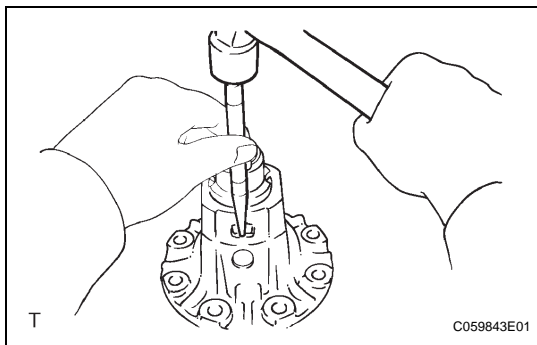


**4. REMOVE FRONT DIFFERENTIAL PINION SHAFT STRAIGHT PIN**

- (a) Using a punch and hammer, loosen the staked part of the differential case.

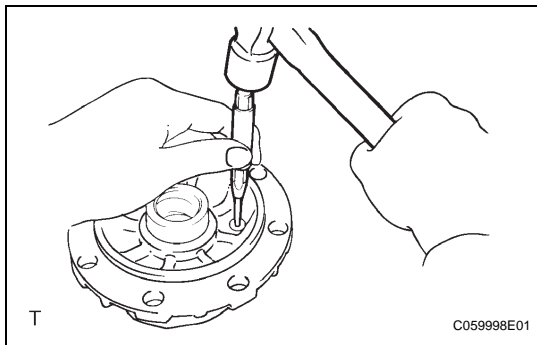

- (b) Using a pin punch (5 mm), tap out the pin from the ring gear side.

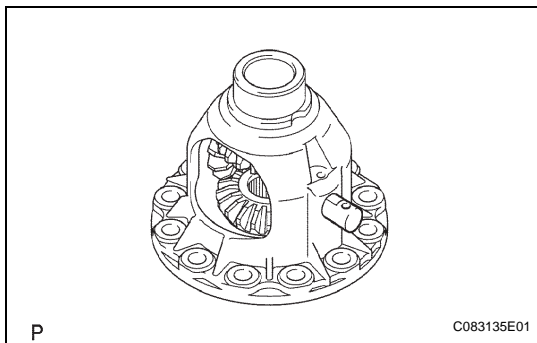

**5. REMOVE NO. 1 FRONT DIFFERENTIAL PINION SHAFT**

- (a) Remove the front differential pinion shaft from the differential case.