






# TRANSMISSION OIL COOLER

## COMPONENTS

AX

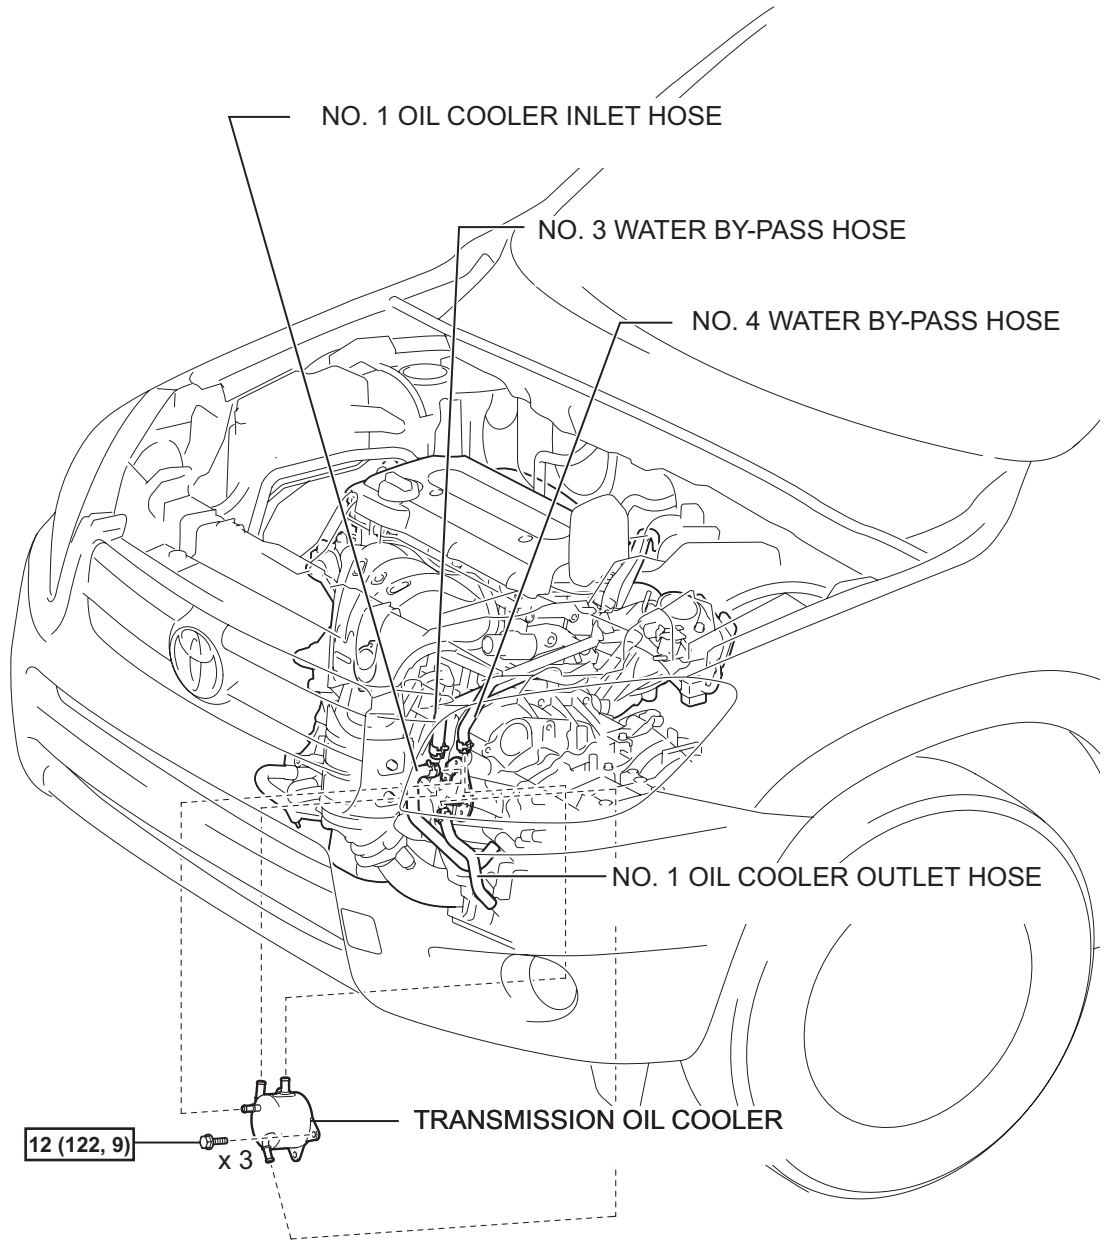

**12 (122, 9)** : Specified torque

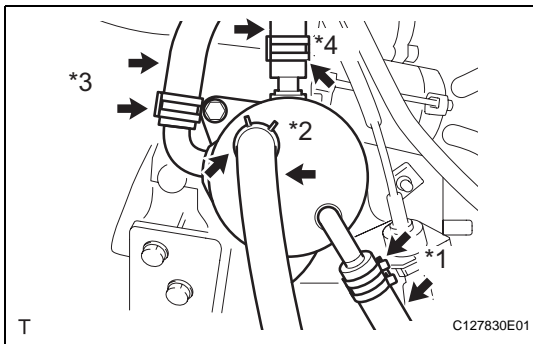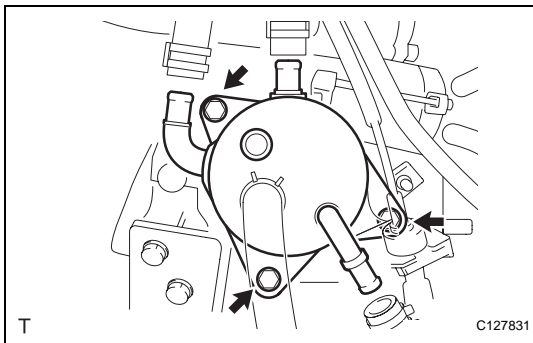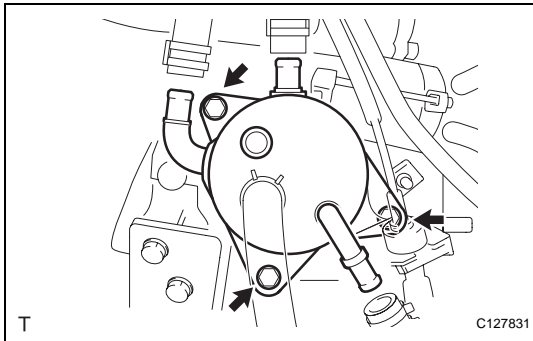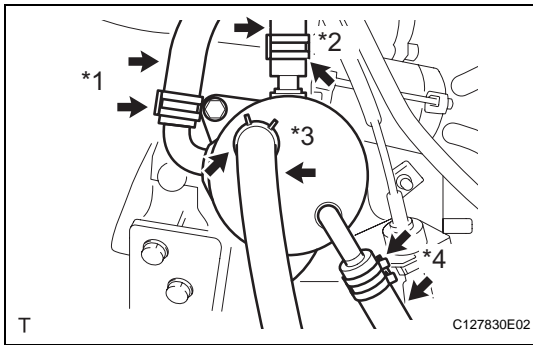

## REMOVAL

### 1. REMOVE TRANSMISSION OIL COOLER

- (a) \*1: Disconnect the No. 3 water by-pass hose from the transmission oil cooler.
- (b) \*2: Disconnect the No. 4 water by-pass hose from the transmission oil cooler.
- (c) \*3: Disconnect the No. 1 oil cooler inlet hose from the transmission oil cooler.
- (d) \*4: Disconnect the No. 1 oil cooler outlet hose from the transmission oil cooler.
- (e) Remove the 3 bolts and oil cooler from the bracket.

**AX**

## INSTALLATION

### 1. INSTALL TRANSMISSION OIL COOLER

- (a) Install the oil cooler to the bracket with the 3 bolts.  
**Torque: 12 N\*m (122 kgf\*cm, 9 ft.\*lbf)**

- (b) \*1: Connect the No. 1 oil cooler outlet hose to the transmission.
- (c) \*2: Connect the No. 1 oil cooler inlet hose to the transmission.
- (d) \*3: Connect the No. 3 water by-pass hose to the transmission.
- (e) \*4: Connect the No. 4 water by-pass hose to the transmission.

### 2. ADD AUTOMATIC TRANSAXLE FLUID

### 3. INSPECT AUTOMATIC TRANSAXLE FLUID

- (a) Inspect the automatic transaxle fluid (see page [AX-102](#)).

### 4. ADD COOLANT

- (a) Add the coolant (see page [CO-6](#)).