


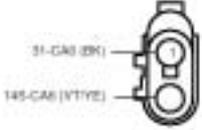
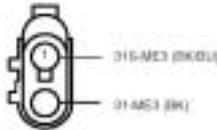
 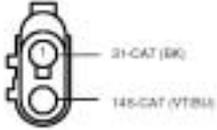
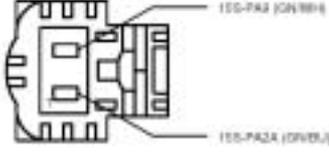
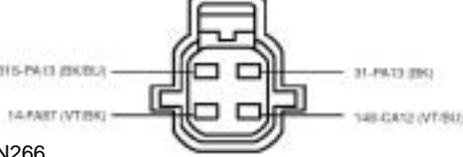

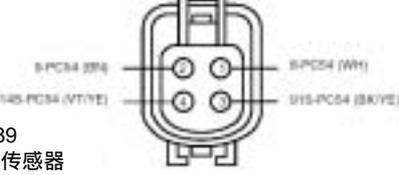
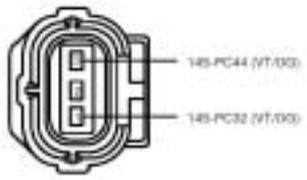
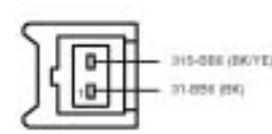
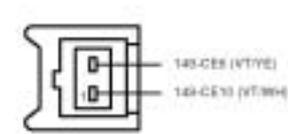
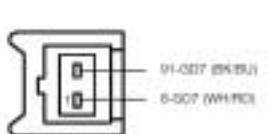
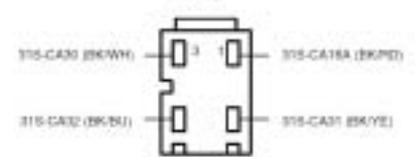
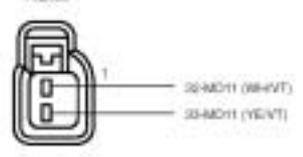



 
 
 
<p style="text-align: center;">C75 14401 F02005</p>  <p>Y16 空调压缩机离合器</p>	<p style="text-align: center;">C81b 14401 F02005</p>  <p>H4 第二喇叭</p>
<p style="text-align: center;">C76 14401 F02005</p>  <p>V7 空调压缩机离合器 二极管</p>	<p style="text-align: center;">C82 14401 F02005</p>  <p>R27 温控开关</p>
<p style="text-align: center;">C77 14401 F04175</p>  <p>N266 三通压力开关</p>	<p style="text-align: center;">C84 14300 / 14401 F02012</p>  <p>B43 曲轴位置传感器</p>
<p style="text-align: center;">C80b 14401 F02005</p>  <p>H1 喇叭</p>	<p style="text-align: center;">C86 14401 F04013</p>  <p>B89 氧传感器 (HO2S)</p>

 




<p>C87 FD2100</p>  <p>148-PC44 (VT/03) 148-PC32 (VT/03)</p> <p>N61 燃油切断阀</p>	<p>C92 14401 FD1813</p>  <p>315-WC18 (BK/PC)</p> <p>N63 驻车制动开关</p>
<p>C88 14401 FD2013</p>  <p>315-DBE (BK/YE) 31-DBE (BK)</p> <p>N81 离合器踏板位置开关</p>	<p>C93 14300 FD101E</p>  <p>315-WD9 (BK/01)</p> <p>N17 机油压力开关</p>
<p>C89 14401 FD2012</p>  <p>149-CE8 (VT/YE) 149-CE10 (VT/WH)</p> <p>N96 动力转向压力开关</p>	<p>C94 14401 FD2012</p>  <p>91-027 (BK/BL) 8-007 (WH/PC)</p> <p>B6 冷却液温度传感器</p>
<p>C90 18B518 FD429</p>  <p>315-CA30 (BK/WH) 315-CA18A (BK/PE) 315-CA32 (BK/BL) 315-CA31 (BK/YE)</p> <p>R21 变阻器</p>	<p>C95 14401 FD205E</p>  <p>33-MD11 (BK/VT) 33-MD11 (YE/VT)</p> <p>Y61 后扬声器, 左</p>

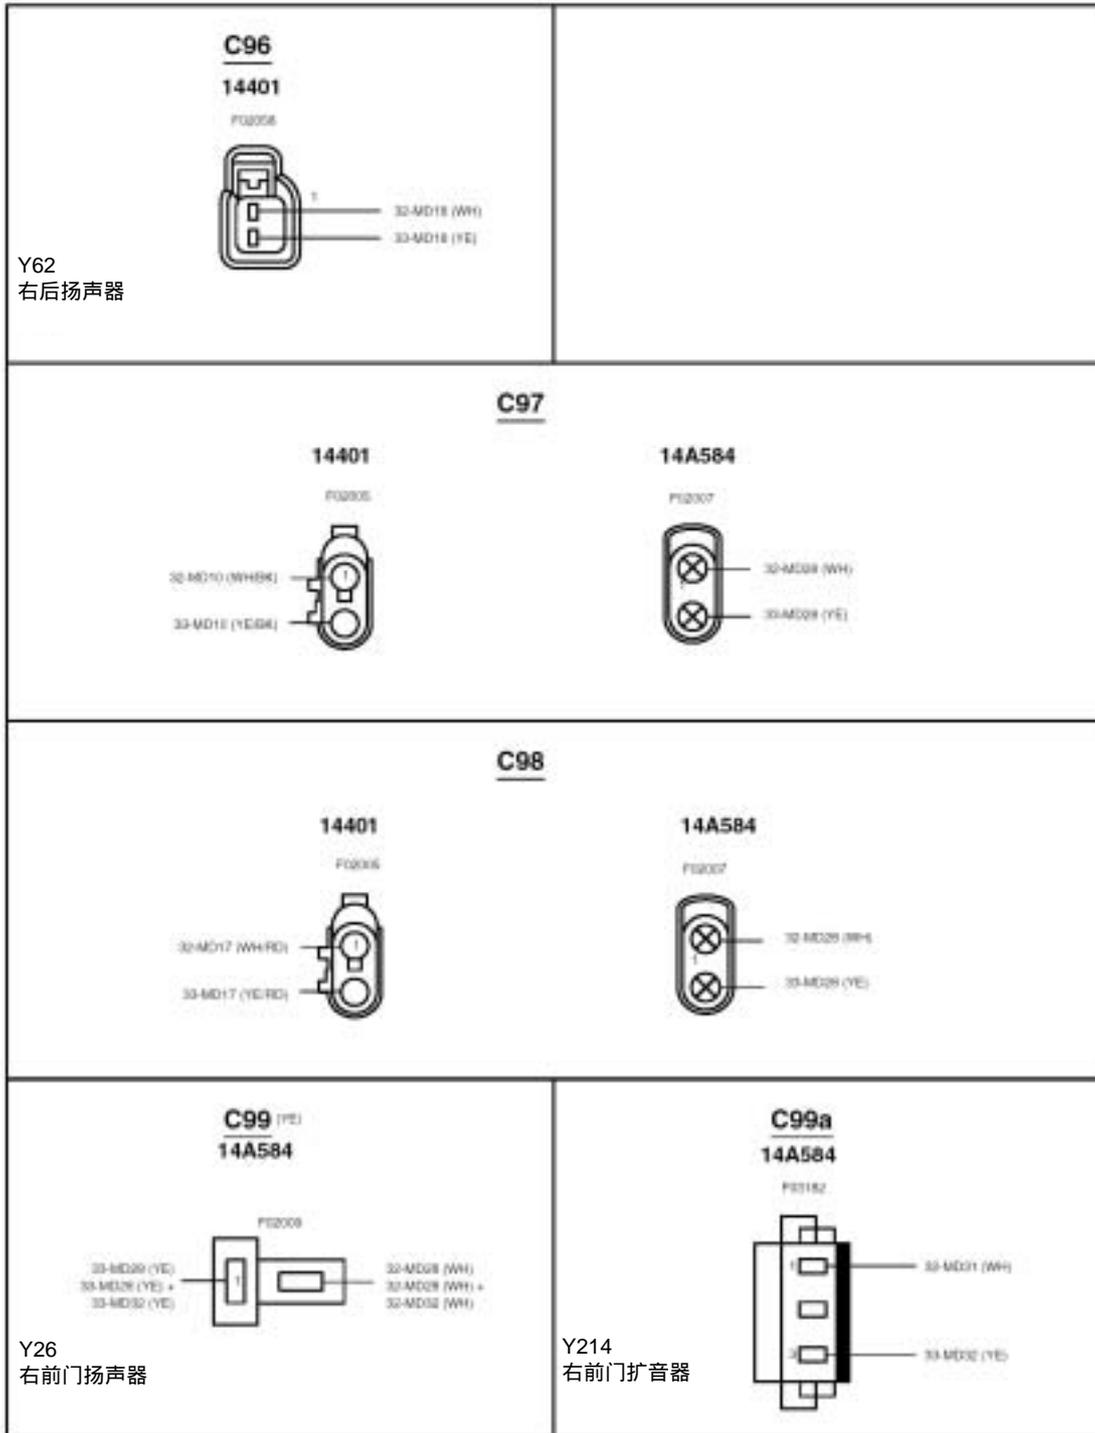

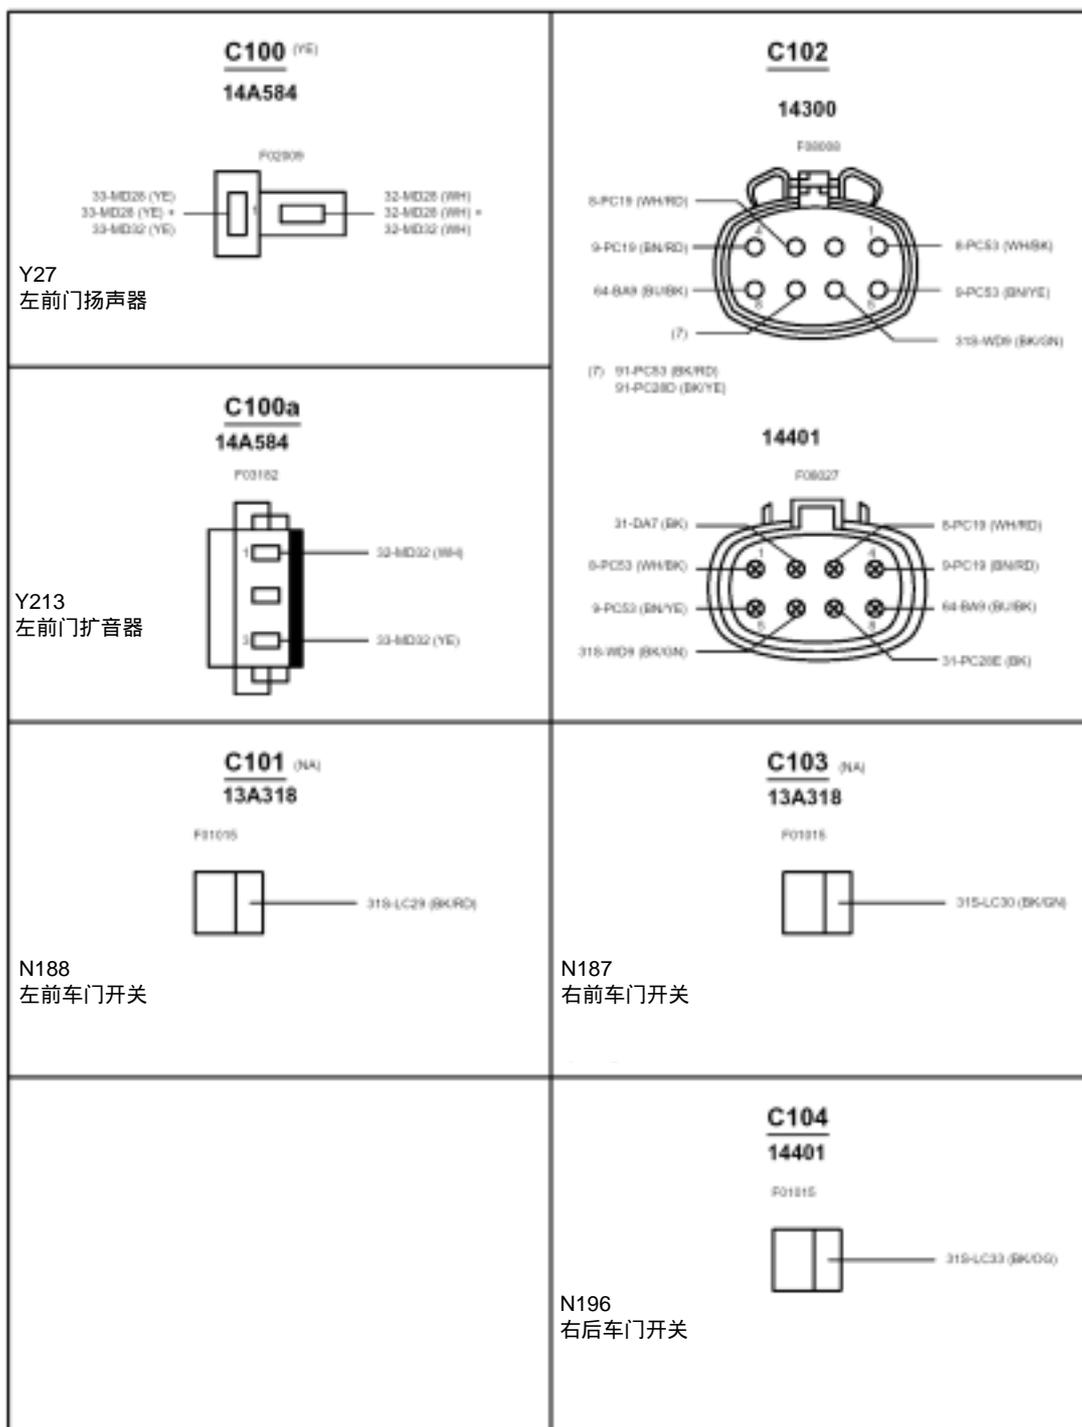

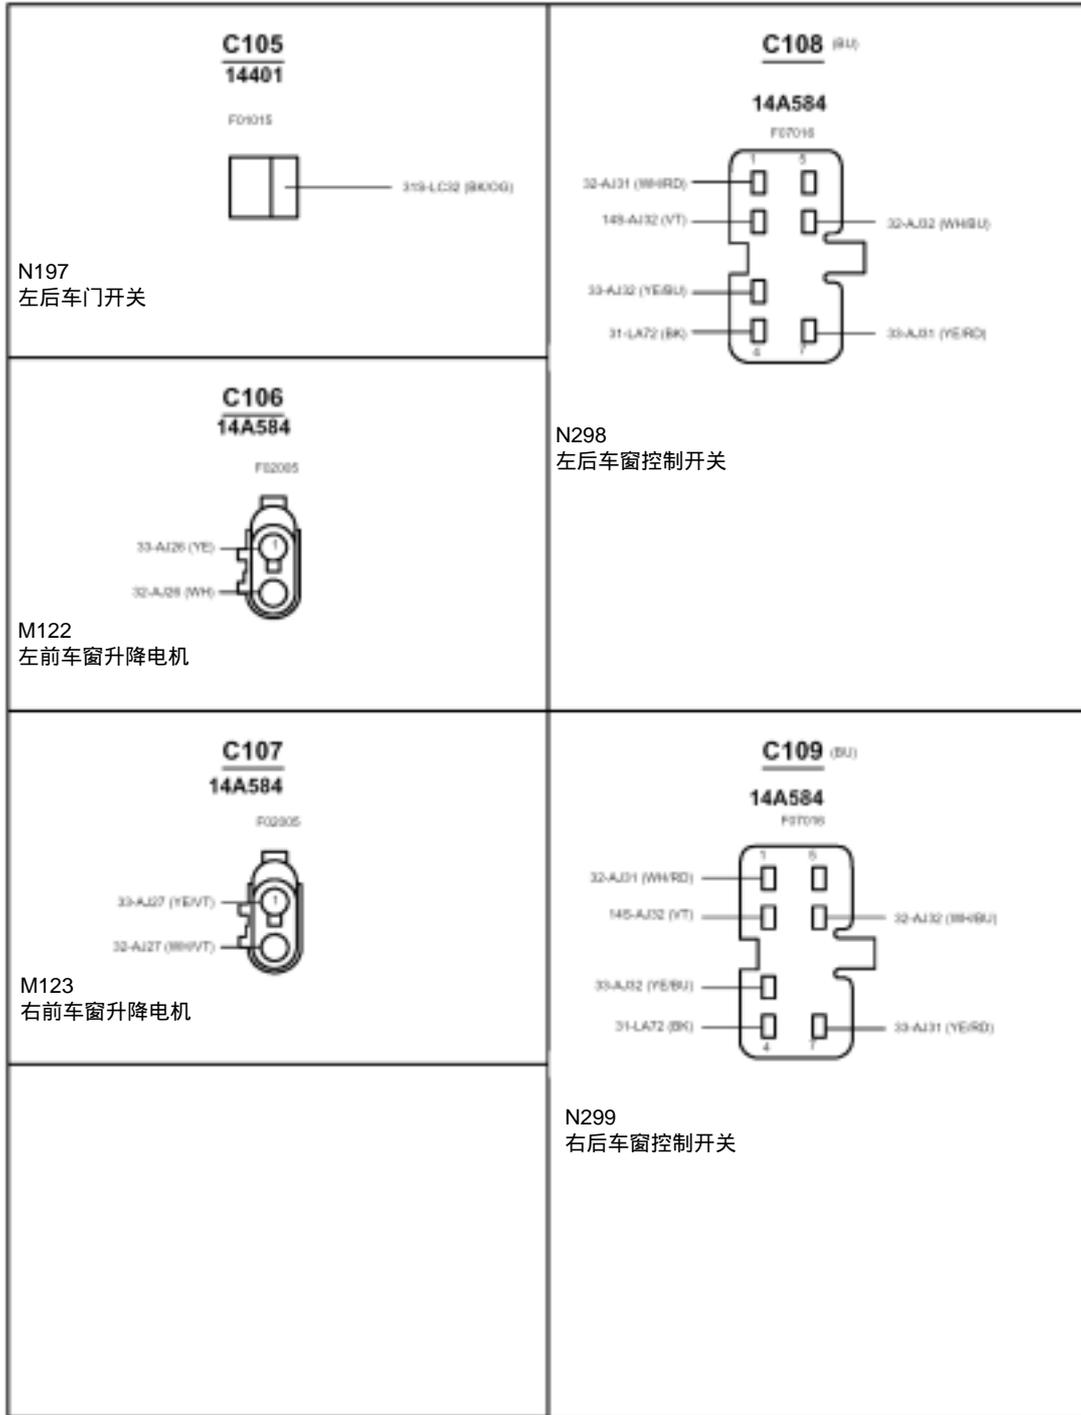
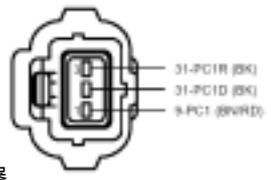
<p>C110 14A584 F02005</p>  <p>30-AJ31 (YERD) 32-AJ31 (BRHRD)</p> <p>M132 左后车窗升降电机</p>	<p>C114 9H589 F02003</p>  <p>31-PC18 (BK) 31-PC10 (BK) 9-PC1 (BRHRD)</p> <p>B8 节气门位置传感器</p>
<p>C111 9H589 F02012</p>  <p>31-PC1B (BK) 31-PC1A (BK)</p> <p>B41 凸轮轴位置传感器</p>	<p>C115 9H589 F02012</p>  <p>31-PC1J (BK) 94S-PC45 (VT/WH)</p> <p>Y108 喷油嘴 1</p>
<p>C112 9H589 F02027</p>  <p>35-PC1F (BK) 94S-PC40 (VT/YE)</p> <p>Y13 怠速控制阀</p>	<p>C116 9H589 F02012</p>  <p>31-PC1K (BK) 94S-PC46 (VT/YE)</p> <p>Y109 喷油嘴 2</p>
<p>C113 9H589 F02027</p>  <p>9-PC18 (BK) 31-PC1G (BK)</p> <p>B10 冷却液温度传感器</p>	<p>C117 9H589 F02012</p>  <p>31-PC1L (BK) 94S-PC47 (VT/BU)</p> <p>Y110 喷油嘴 3</p>
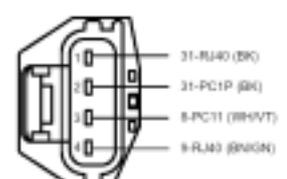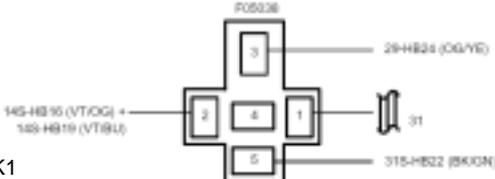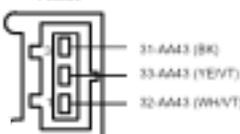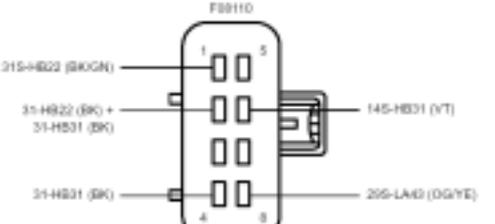
<p>C118 9H589 F02012</p>  <p>Y111 喷油嘴 4</p>	<p>C122 9H589 F04130</p>  <p>B142 温度及歧管绝对压力传感器</p>
<p>C119 14A584 F02906</p>  <p>M133 右后车窗升降电机</p>	<p>C123 14401 F05036</p>  <p>K1 后风窗加热器继电器</p>
<p>C120 14401 F03003</p>  <p>M90 油箱加注盖锁电机</p>	<p>C124 14401 F03110</p>  <p>N10 后风窗加热器开关</p>
<p>C121 14401 F02014</p>  <p>M84 喷水电机,前与后</p>	

