



O-01 DSC HU/CM (F) DSC液压单元/控制模块

O-08 COMBINED SENSOR (R) 组合传感器(R)

O-09 BRAKE FLUID PRESSURE SENSOR (F) 制动液压力传感(F)

AN		AG		AB		W		O		J		G		D		A	
B		B/L		*		*		B		G		W		B		R	
AO	AL	AJ	AH	AE	AC	Z	X	U	R	P	M	K	H	E	B	A	R
W/B	B/LG	B/R	V/Y	B/O	B/L	*	*	*	*	L	*	B/W	L/W	E	B	B	B
AP	AM	AK	AI	AF	AD	AA	Y	V	S	Q	N	L	I	G/B	F	G	C
R/G	*	G/W	R/B	L/W	B/Y	G/R	*	*	*	*	*	Y	G/B	F	G	C	L/R

