

# 常用连接器列表 COMMON CONNECTOR LIST

**X-02 FUSE BLOCK 保险丝盒**

(I)

(R)

① CIGAR	⑨ (AUDIO)
② ACC	⑩ D.LOCK
③ (PWR)	⑪ P.WIND
④ A/C	⑫ ROOM
⑤ —	⑬ SPARE
⑥ —	⑭ SPARE
⑦ (M.DEF)	⑮ SPARE
⑧ (DSC)	⑯ SPARE

注释: 这是从端子侧看到的接头。  
NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.

**X-04 IGNITION SWITCH(I) 点火装置开关(I)**

(I)

---

**X-05 FRONT(F)-INSTRUMENT PANEL(I) 前(F)-仪表板(I)**

(F)

(I)

**X-06 FRONT(F)-INSTRUMENT PANEL(I) 前(F)-仪表板(I)**

(F)

(I)

@ ...WITH AUTO A/C  
带自动空调系统

- WITH MANUAL A/C  
带手动空调系统

---

**X-07 FRONT(F)-REAR(R) 前(F)-后(R)**

(F)

(R)

**带大灯自动水平调节系统**  
# ...WITH HEADLIGHT AUTO LEVELING SYSTEM  
@ ...WITH HEADLIGHT CLEANER SYSTEM  
带大灯清洗系统