

常用连接器列表 COMMON CONNECTOR LIST

X-19 FRONT (F)-ENGINE (E) 前(F)-引擎(E)

(F)

FRONT 前端

(E)

FRONT 前端

NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.
注释: 这是从端子侧看到的接头

X-20 JOINT CONNECTOR (F) 接头(F)

X-21 JOINT CONNECTOR (F) 接头(F)

X-22 JOINT CONNECTOR (I) 接头(I)

~~X-23 JOINT CONNECTOR (I)~~

...WITH BOSE
@ ...WITH CAR-NAVIGATION SYSTEM AND BOSE

X-24 JOINT CONNECTOR (I) 接头(I)

X-25 JOINT CONNECTOR (R) 接头(R)