

线束图标:  (F)  (E)  (R)

[黑色]
二次空气喷射泵继电器
B1-03

[黑色]
(F) 短线束
B1-41

[黑色]
二次空气喷射泵
B1-04

(F)-(1)
X-06

B1-01
PCM

X-01
继电器和主保险丝盒
B1-05
点火继电器
{点火}

X-04

点火开关

(F)-(1)
X-06