
 



E3-01 自动调节控制装置(L)

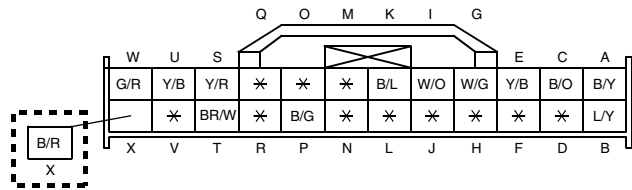


E3-02 前端自动调节传感器(F)



 
E3-03 后端自动调节传感器(R)



E7-03 左侧大灯调节器 LH(F)

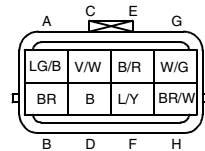

E7-04 右侧大灯调节器 RH(F)

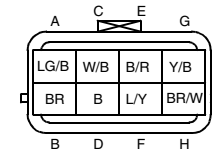

线束图标:

▨ (F)   ◆◆◆ (E)   ▨ (R)

