
 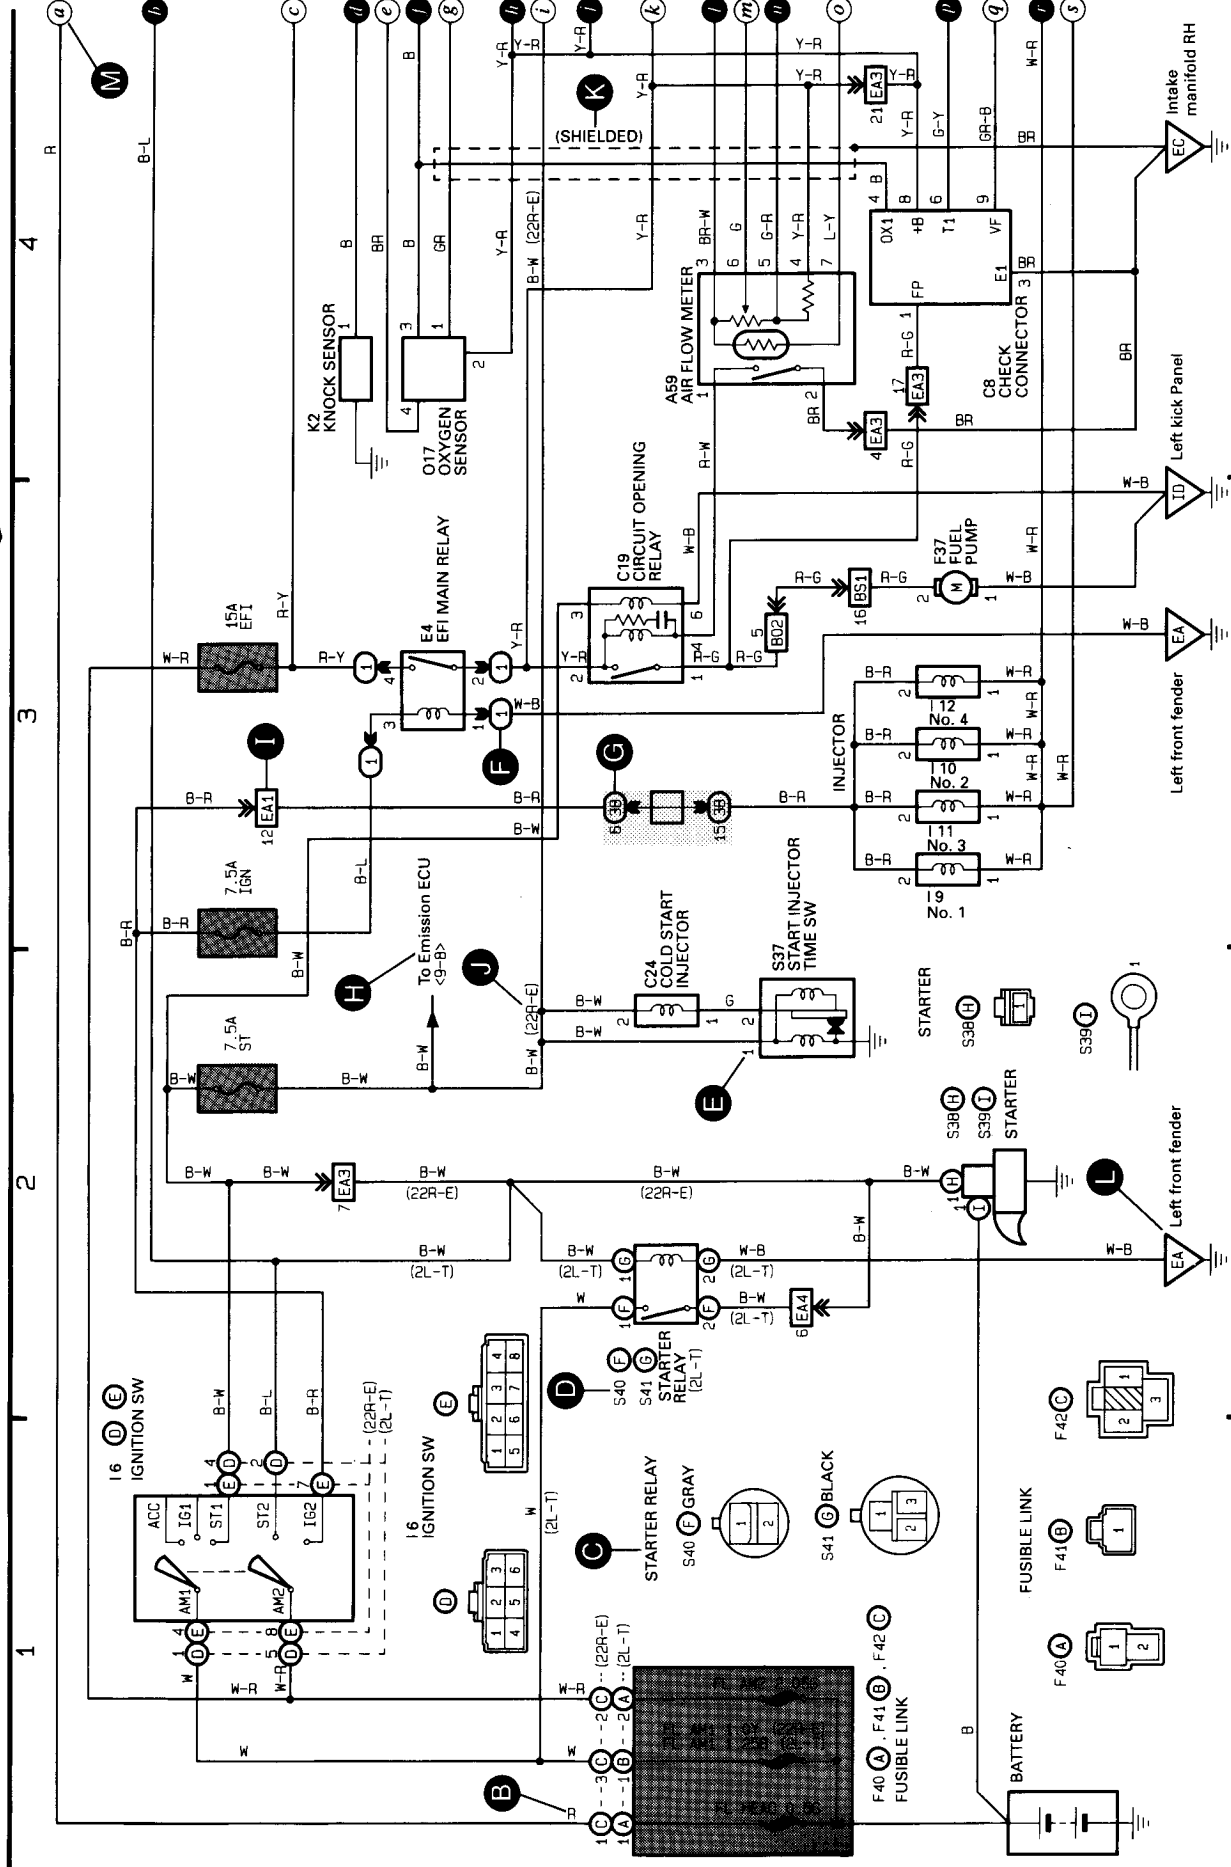
 


B HOW TO USE THIS MANUAL

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

HOW TO READ THIS SECTION



16 IGNITION SW
 7.5A IGN
 7.5A ST
 15A EFI
 E4 EFI MAIN RELAY
 C19 CIRCUIT OPENING RELAY
 A59 AIR FLOW METER
 F37 FUEL PUMP
 C24 COLD START INJECTOR
 S37 START INJECTOR TIME SW
 INJECTOR
 STARTER
 STARTER RELAY
 S40 STARTER RELAY GRAY
 S41 STARTER RELAY BLACK
 FUSIBLE LINK
 F40
 F41
 F42
 BATTERY
 EA
 EA3
 EA4
 ID
 EC
 Left front fender
 Left kick Panel
 Intake manifold RH

A: System Title

B: Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

- B = Black
- BR = Brown
- G = Green
- GR = Gray
- L = Blue
- LG = Light Green
- O = Orange
- P = Pink
- R = Red
- V = Violet
- W = White
- Y = Yellow

The first letter indicates the basic wire code and the second letter indicates the color of the stripe.



 
Example: L - Y

C: Indicates the connector to be connected to a part (the numeral indicates the pin No.)

D: The position of the parts is the same as shown in the wiring diagram and wire routing.


E: Indicates the pin number of the connector.

Example: Numbered in order from upper left to lower right



Female

 Numbered in order from upper right to lower left



Male


The numbering system for the overall wiring diagram is the same as above.

F: Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: **1** Indicates Relay Block No. 1


G: Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification).

Example

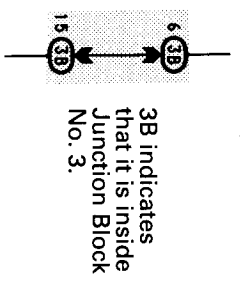

H: Indicates related system.

I: Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗). Outside numerals are pin numbers.

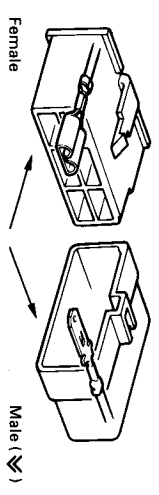

J: () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

K: Indicates a shielded cable.



L: Indicates and located on ground point.

M: The same code occurring on the next page indicates that the wire harness is continuous.

HINT:

Junction connector (code: J1, J2, J3, J4, J5, J6, J7, J8) in this manual include a short terminal which is connected to a number of wire harnesses. Always perform inspection with the short terminal installed. (When installing the wire harnesses, the harnesses can be connected to any position within the short terminal grouping. Accordingly, in other vehicles, the same position in the short terminal may be connected to a wire harness from a different part.) Wire harness sharing the same short terminal grouping have the same color.

