



D RELAY LOCATIONS


[Engine Compartment]

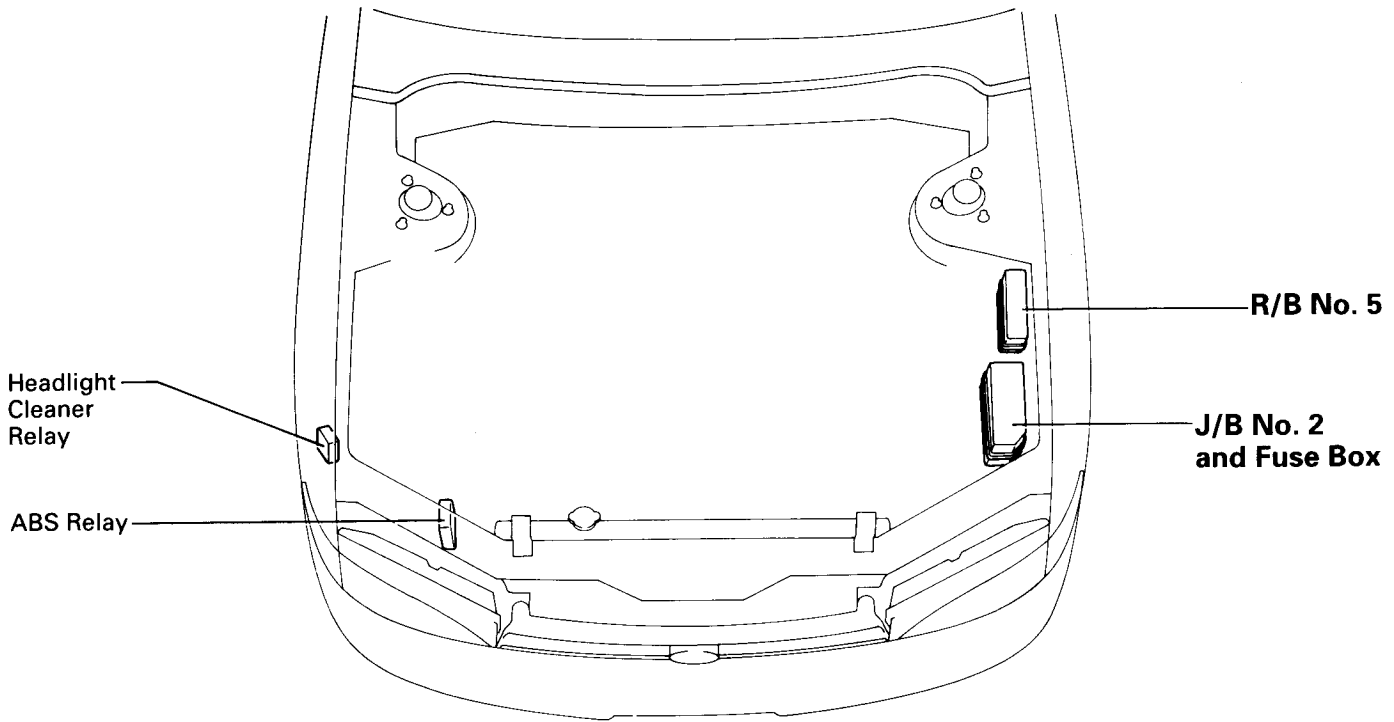

[Body] [Sedan]

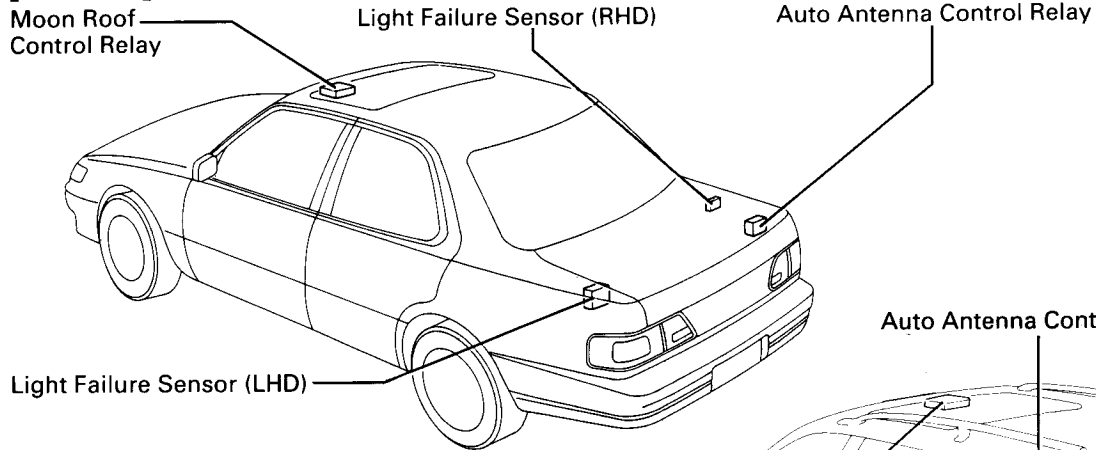


[Wagon]

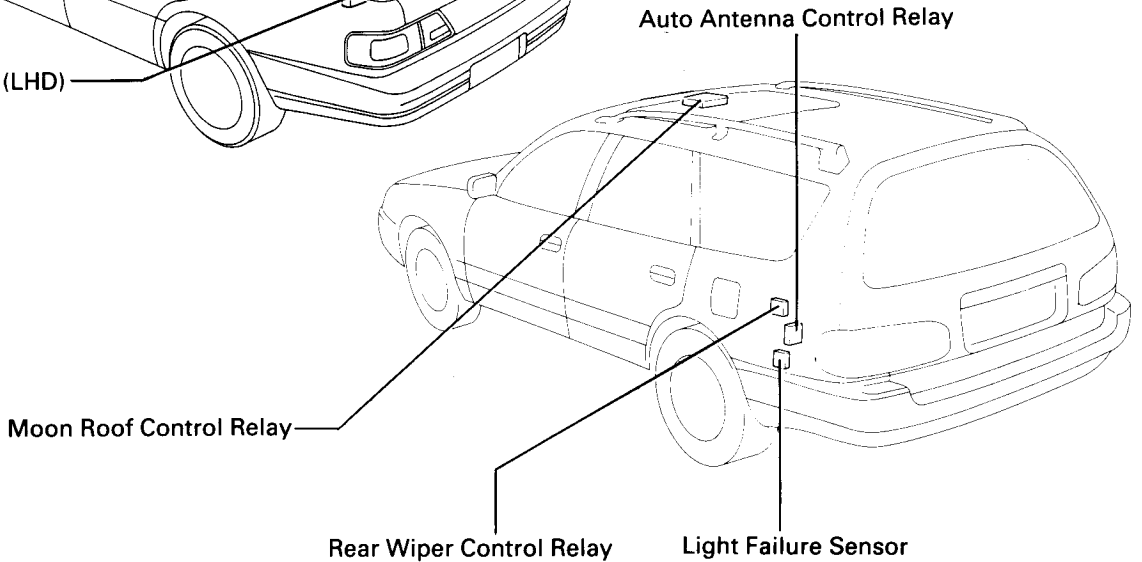


[Instrument Panel LHD]

*1: for Auto A/C
*2: for Manual A/C

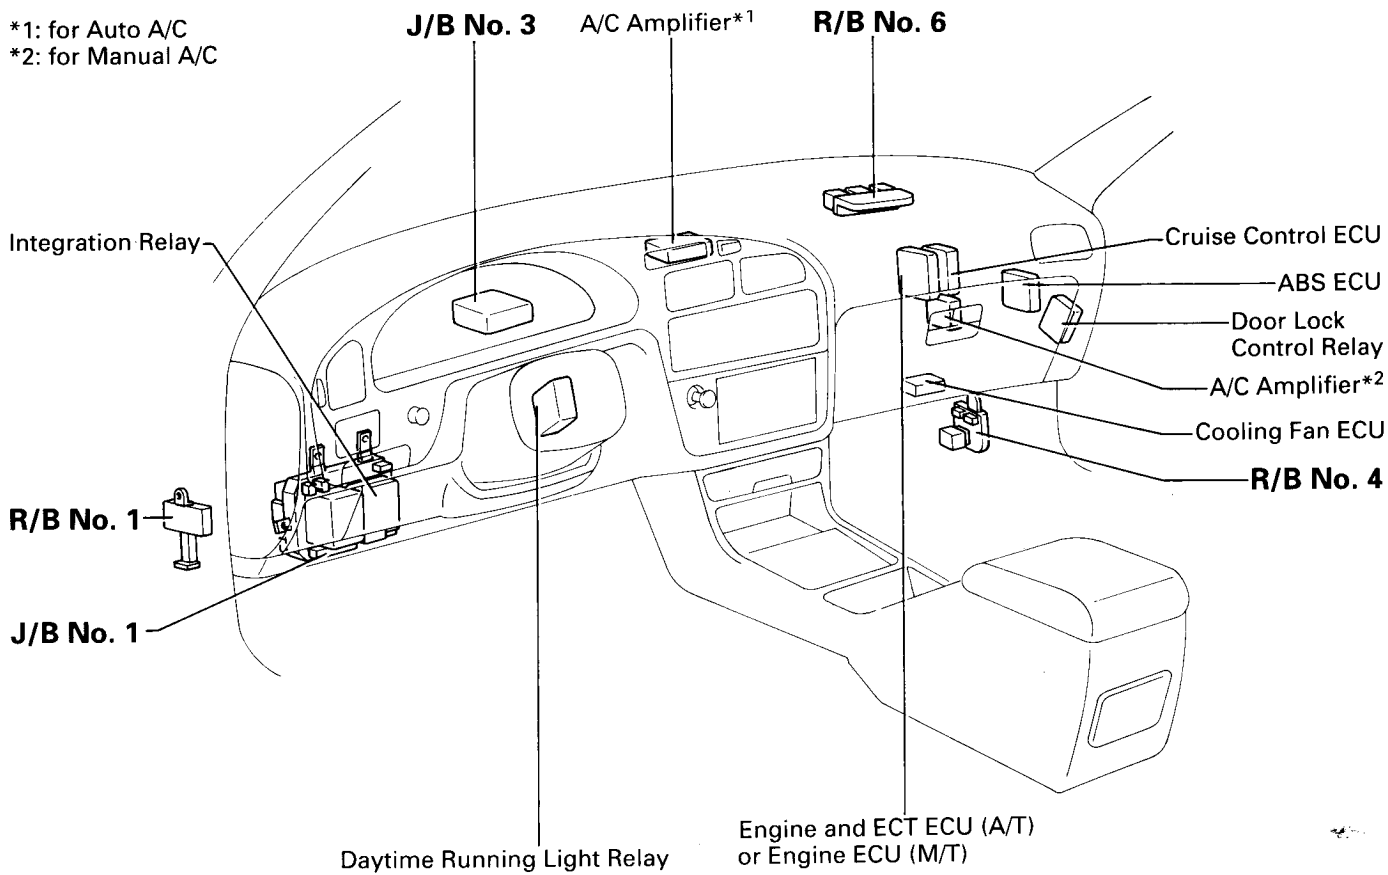

[Instrument Panel RHD]

*1: for Auto A/C
*2: for Manual A/C


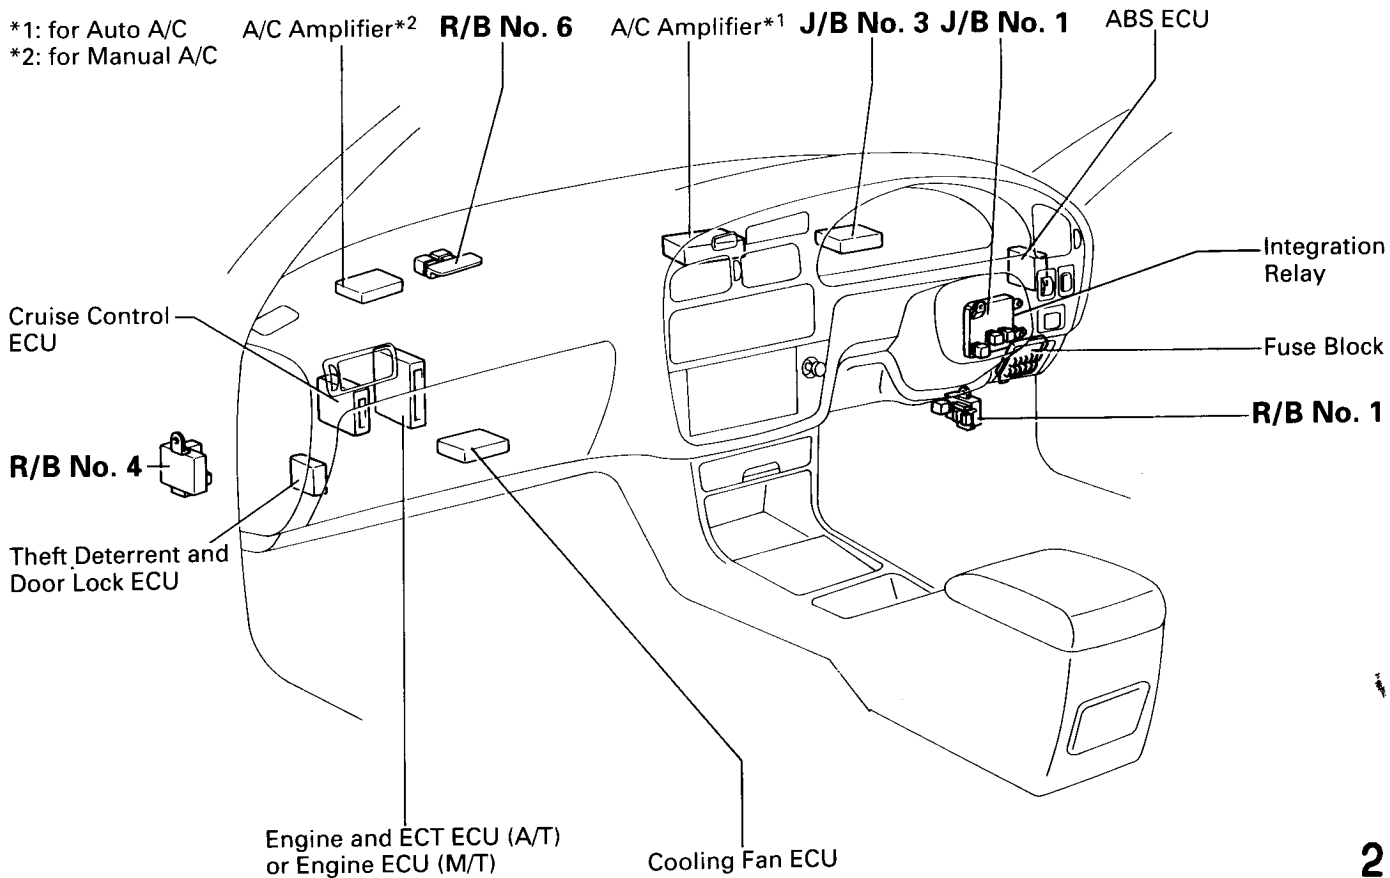


D RELAY LOCATIONS


○ : J/B No. 1 (LHD)

Instrument Panel Left (See Page 23)

*1: Sedan
*2: Wagon

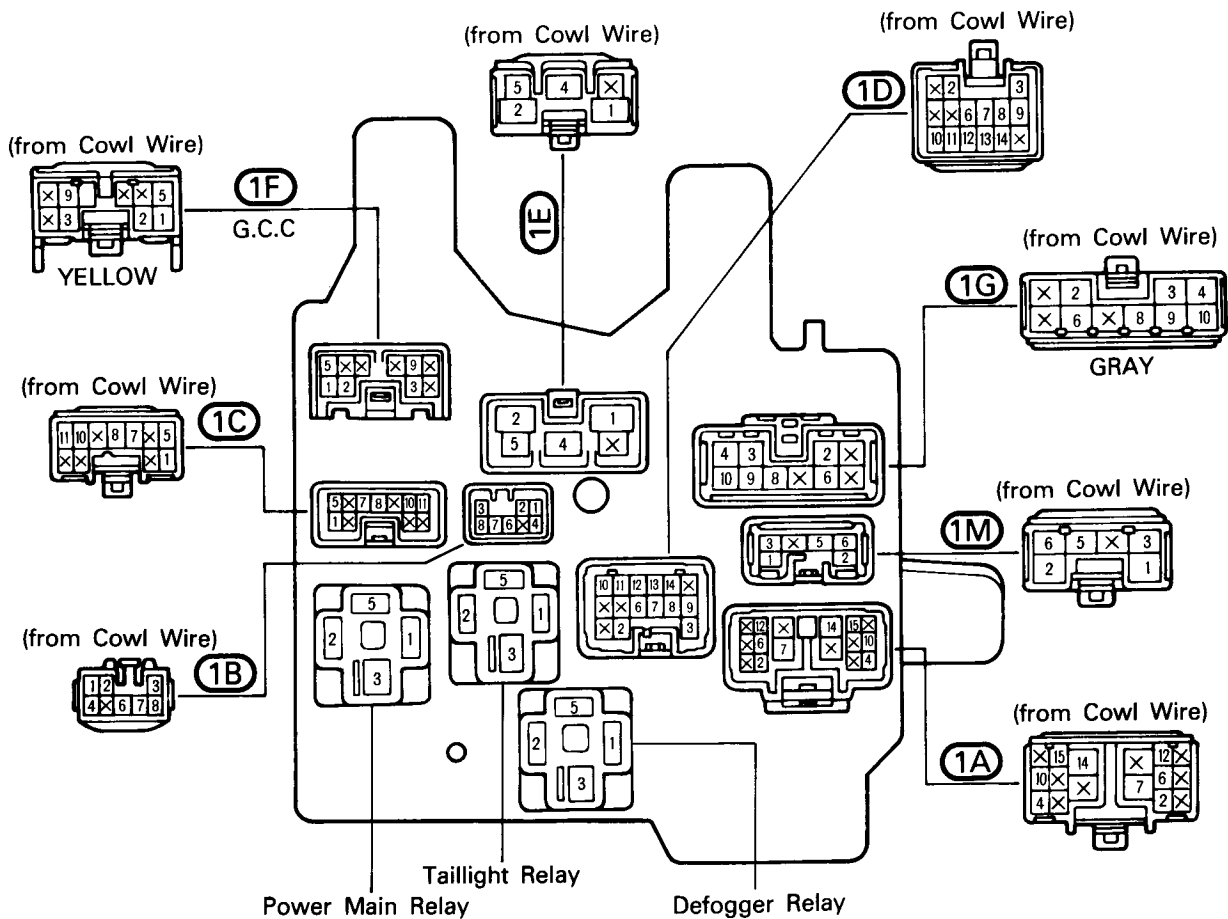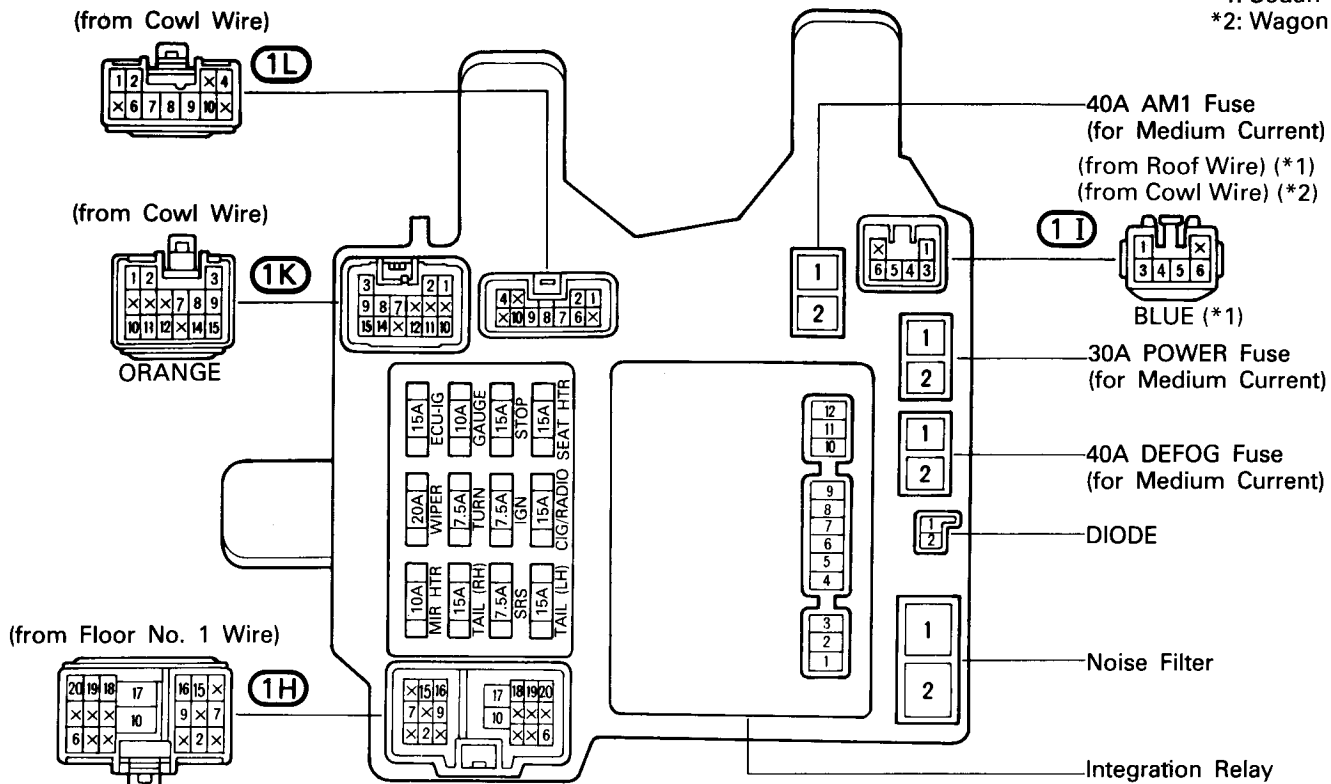

[J/B No. 1 Inner Circuit]

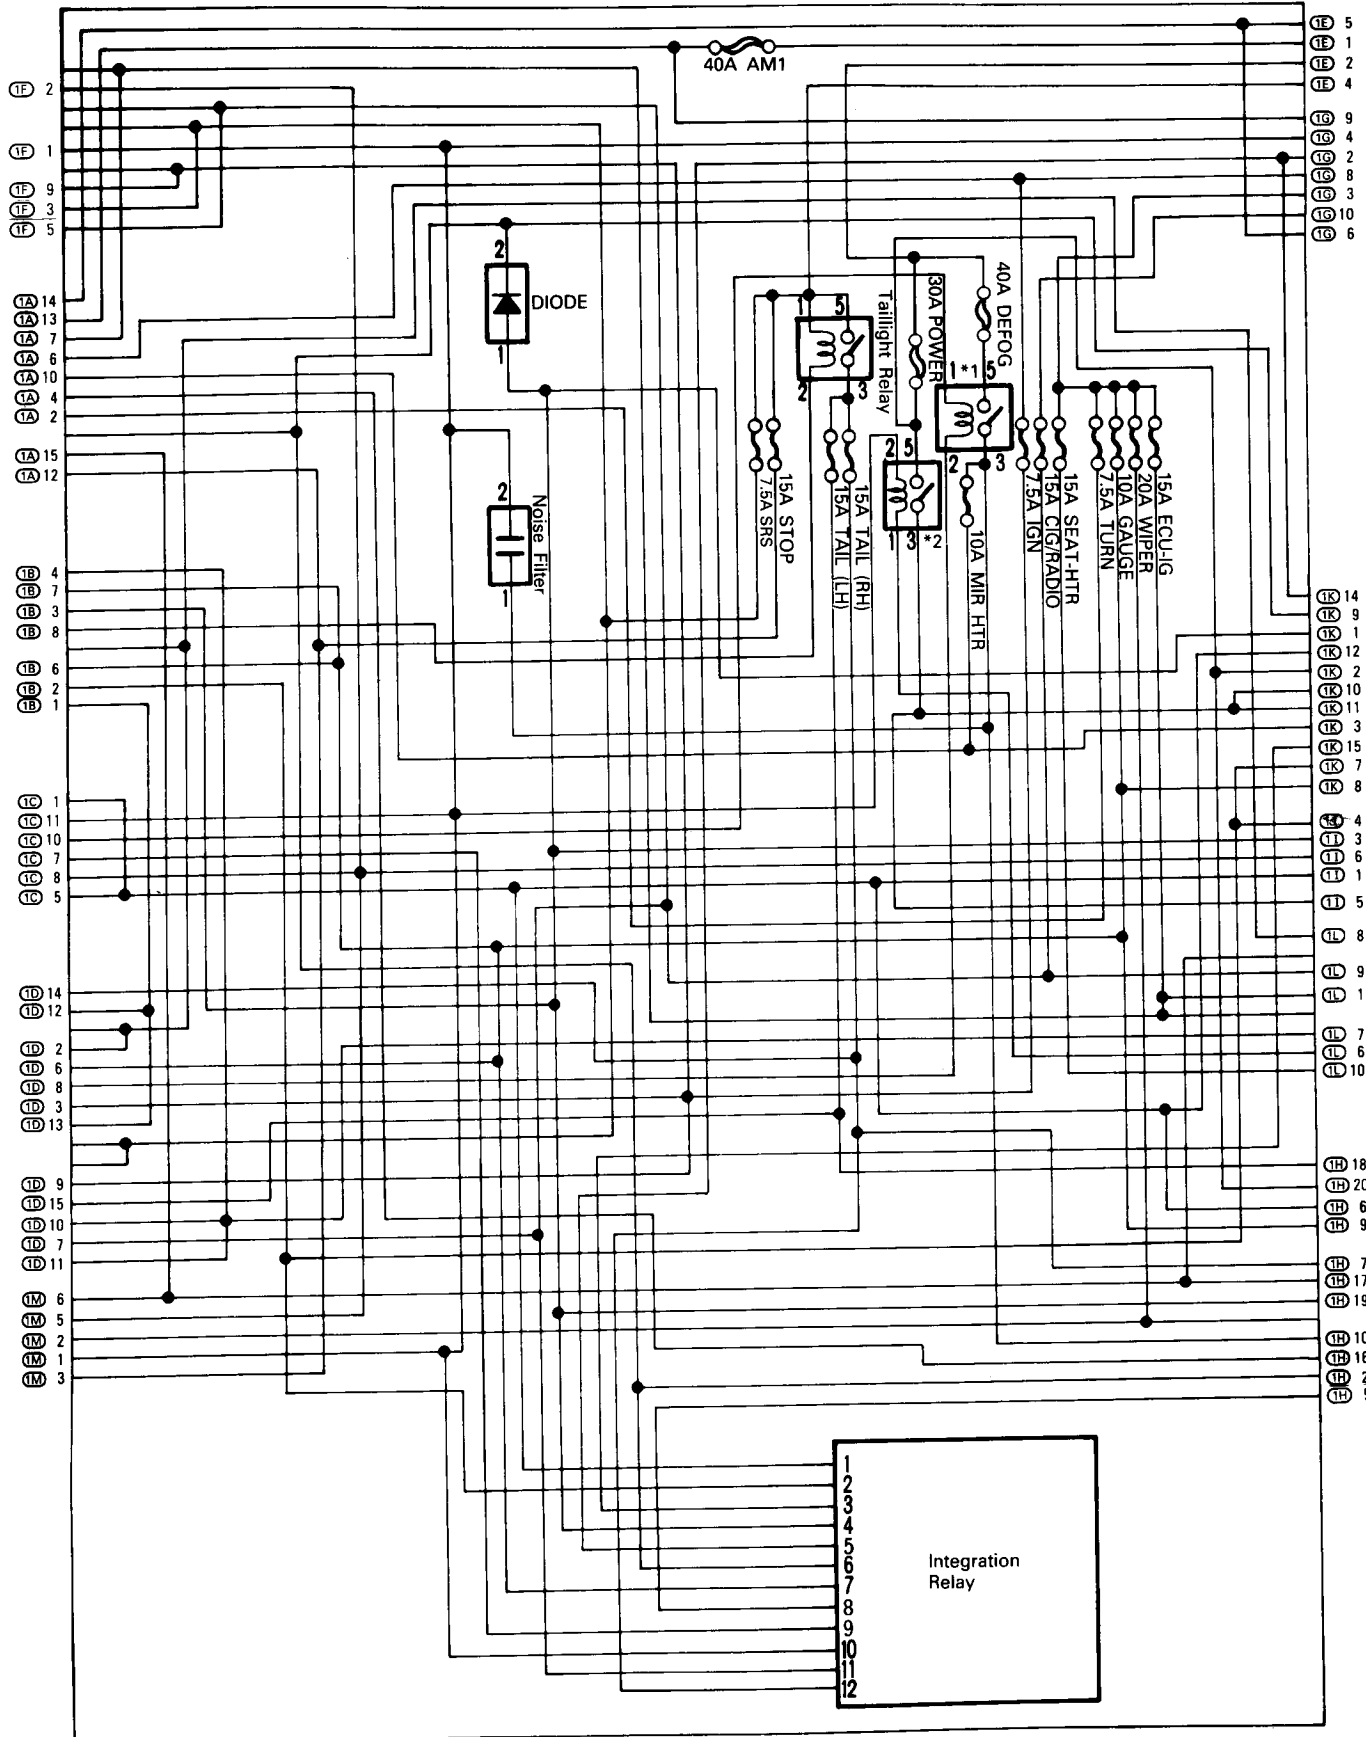


*1: Defogger Relay
 *2: Power Main Relay

D RELAY LOCATIONS


○ : J/B No. 1 (RHD)

Instrument Panel Right (See Page 23)

- *1: Short Pin, *2: Diode, *3: Noise Filter
- *5: 30A POWER Fuse (for Medium Current)
- *6: 40A DEFOG Fuse (for Medium Current)
- *7: Sedan, *8: Wagon

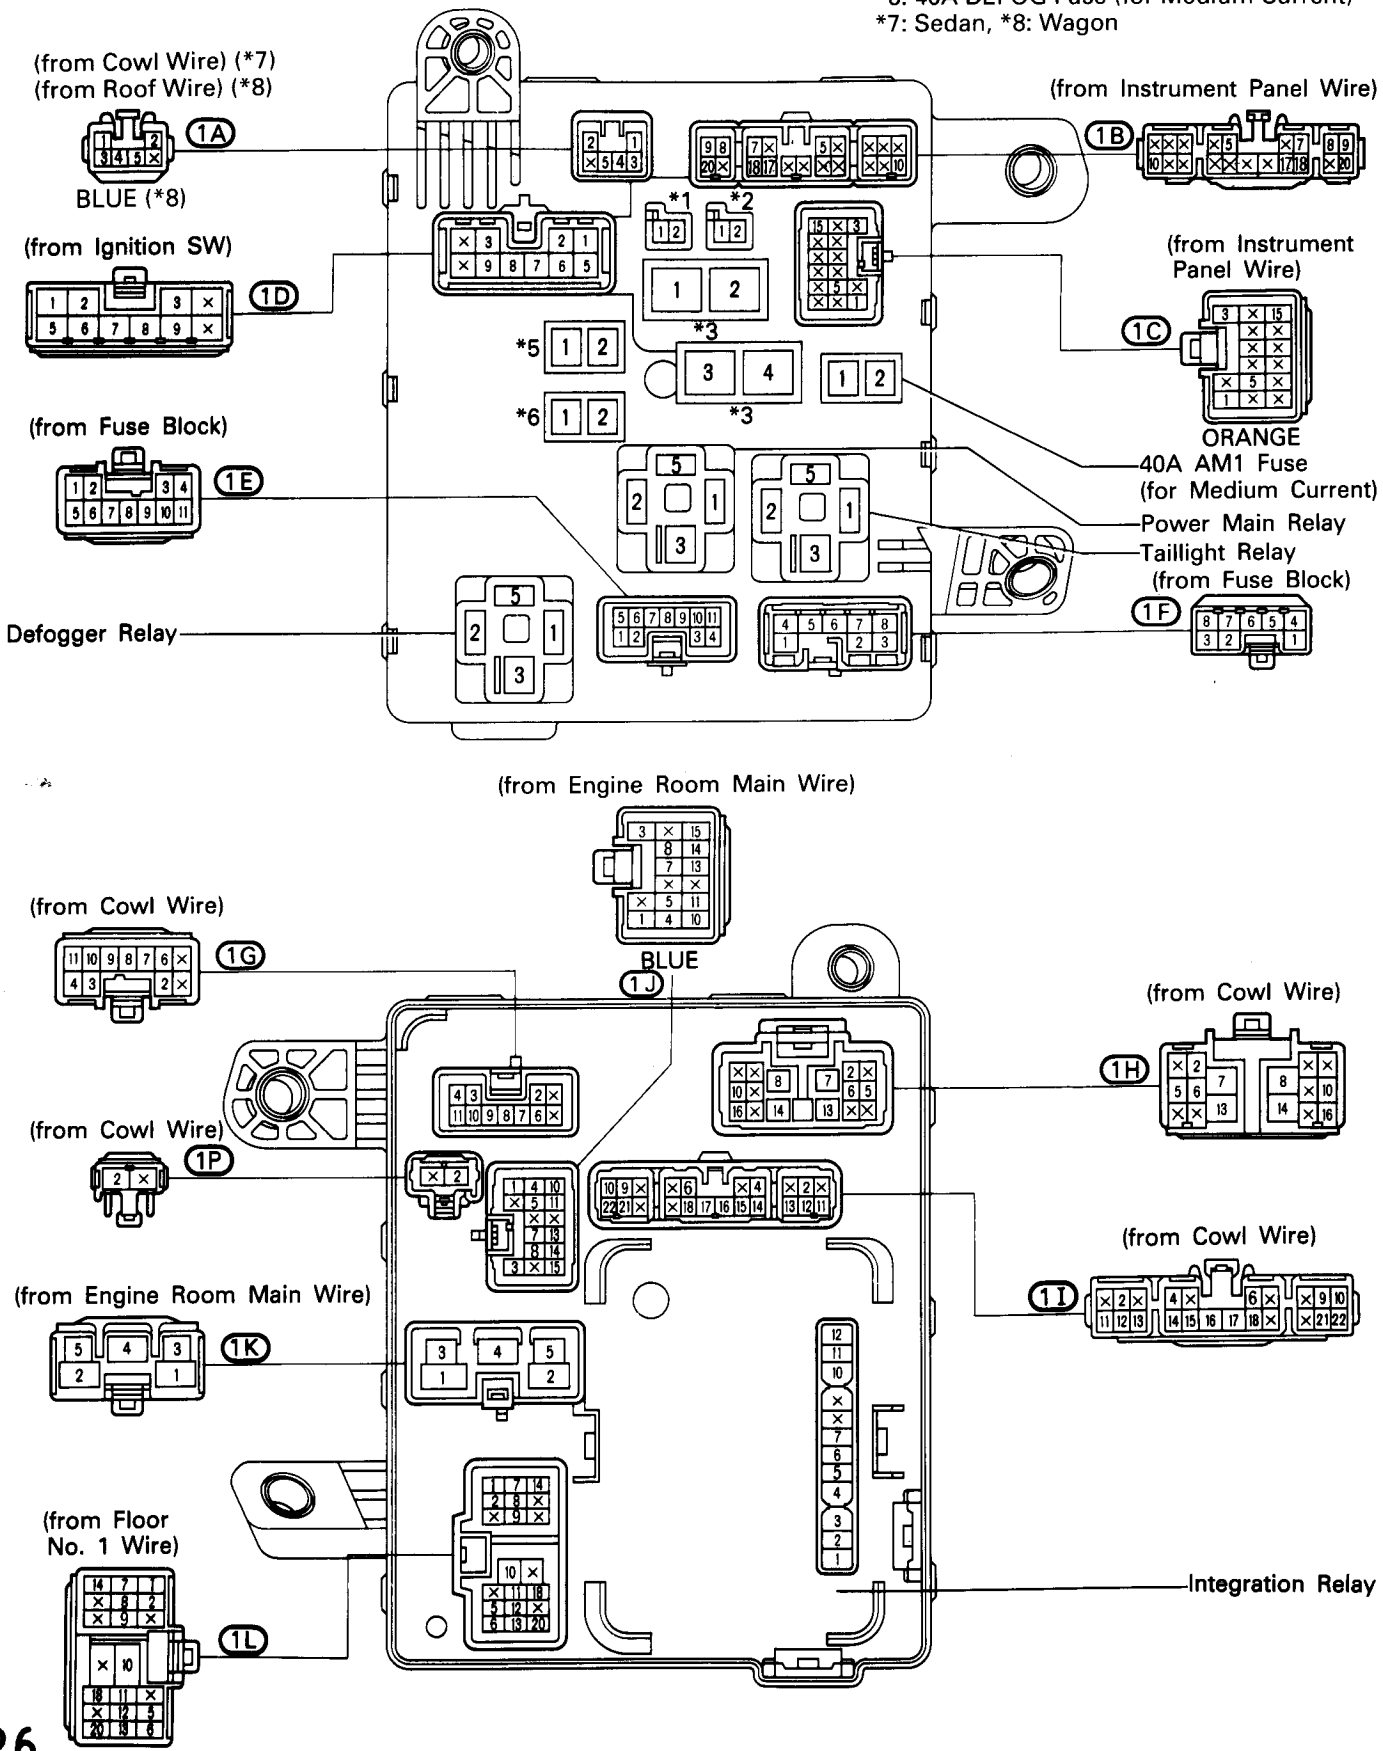

[J/B No. 1 Inner Circuit]

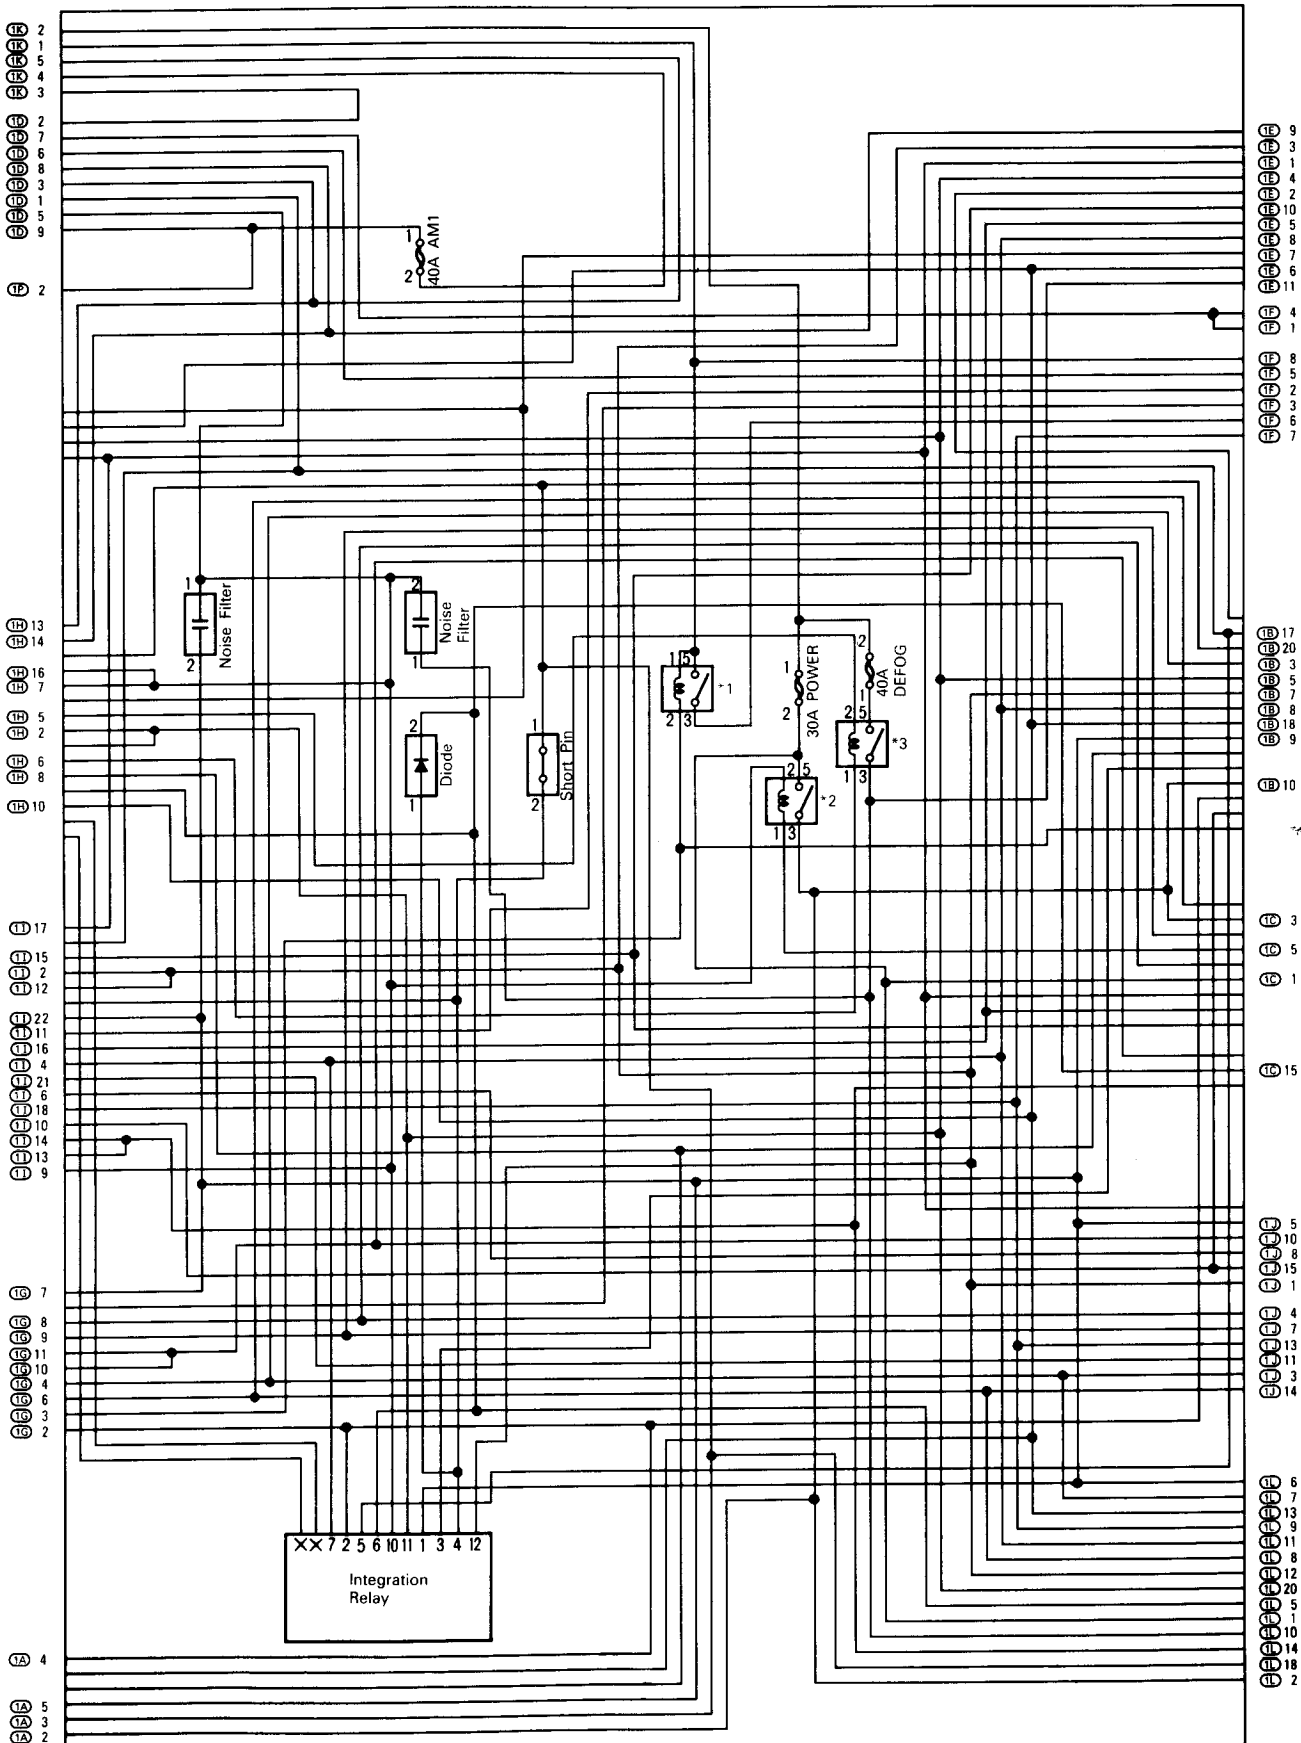


*1: Taillight Relay, *2: Power Main Relay, *3: Defogger Relay

D RELAY LOCATIONS

○ : J/B No. 2

Engine Compartment Left (See Page 22)

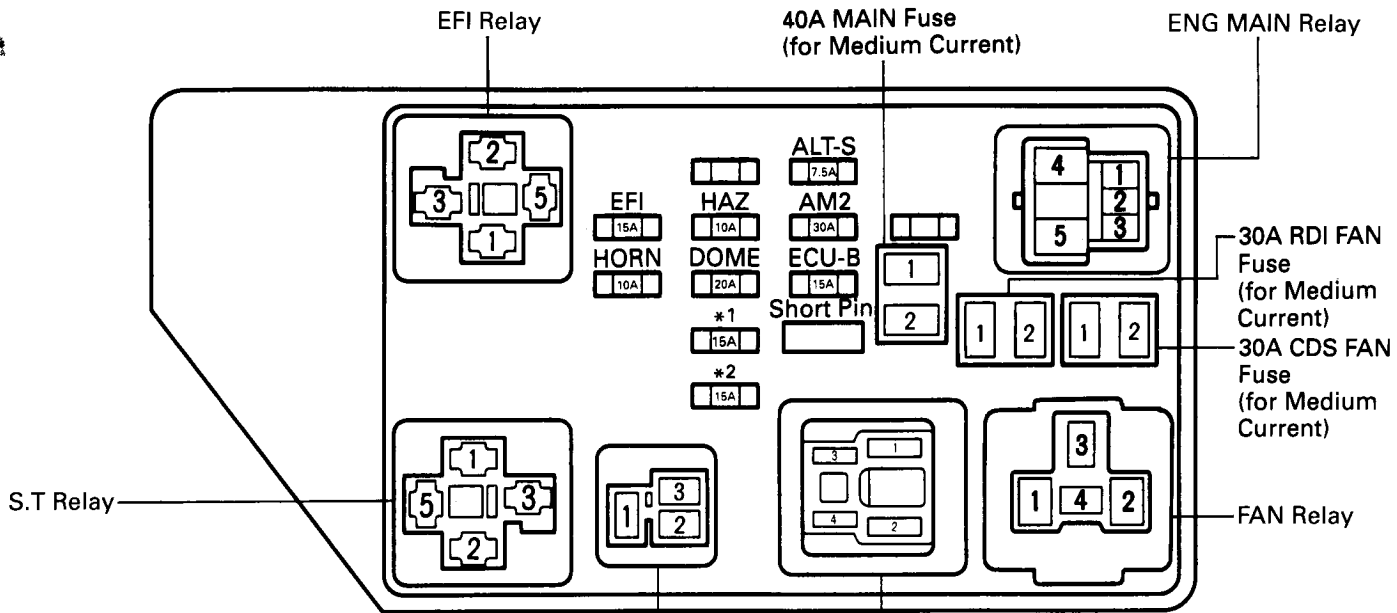


*1: HEAD (LH) (w/o Daytime Running Light) or HEAD (LH-UPR) (w/ Daytime Running Light)

*2: HEAD (RH) (w/o Daytime Running Light) or HEAD (RH-UPR) (w/ Daytime Running Light)


HORN Relay

HEAD Relay


BLACK

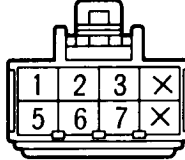

(from Engine Room Main Wire)

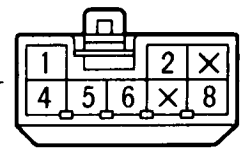

(from Engine Room Main Wire)

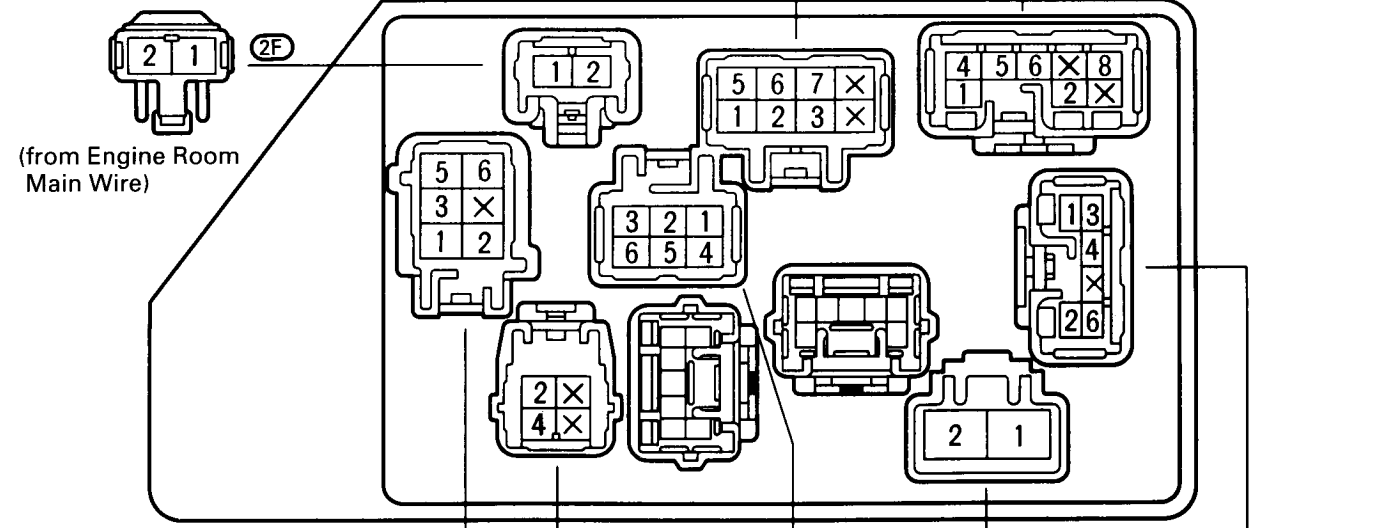

(from Engine Room Main Wire)

(from Engine Wire)

(from Engine Wire)


(from Engine Room Main Wire)

(from Engine Wire)

(from Engine Room Main Wire)

GRAY

[J/B No. 2 Inner Circuit]

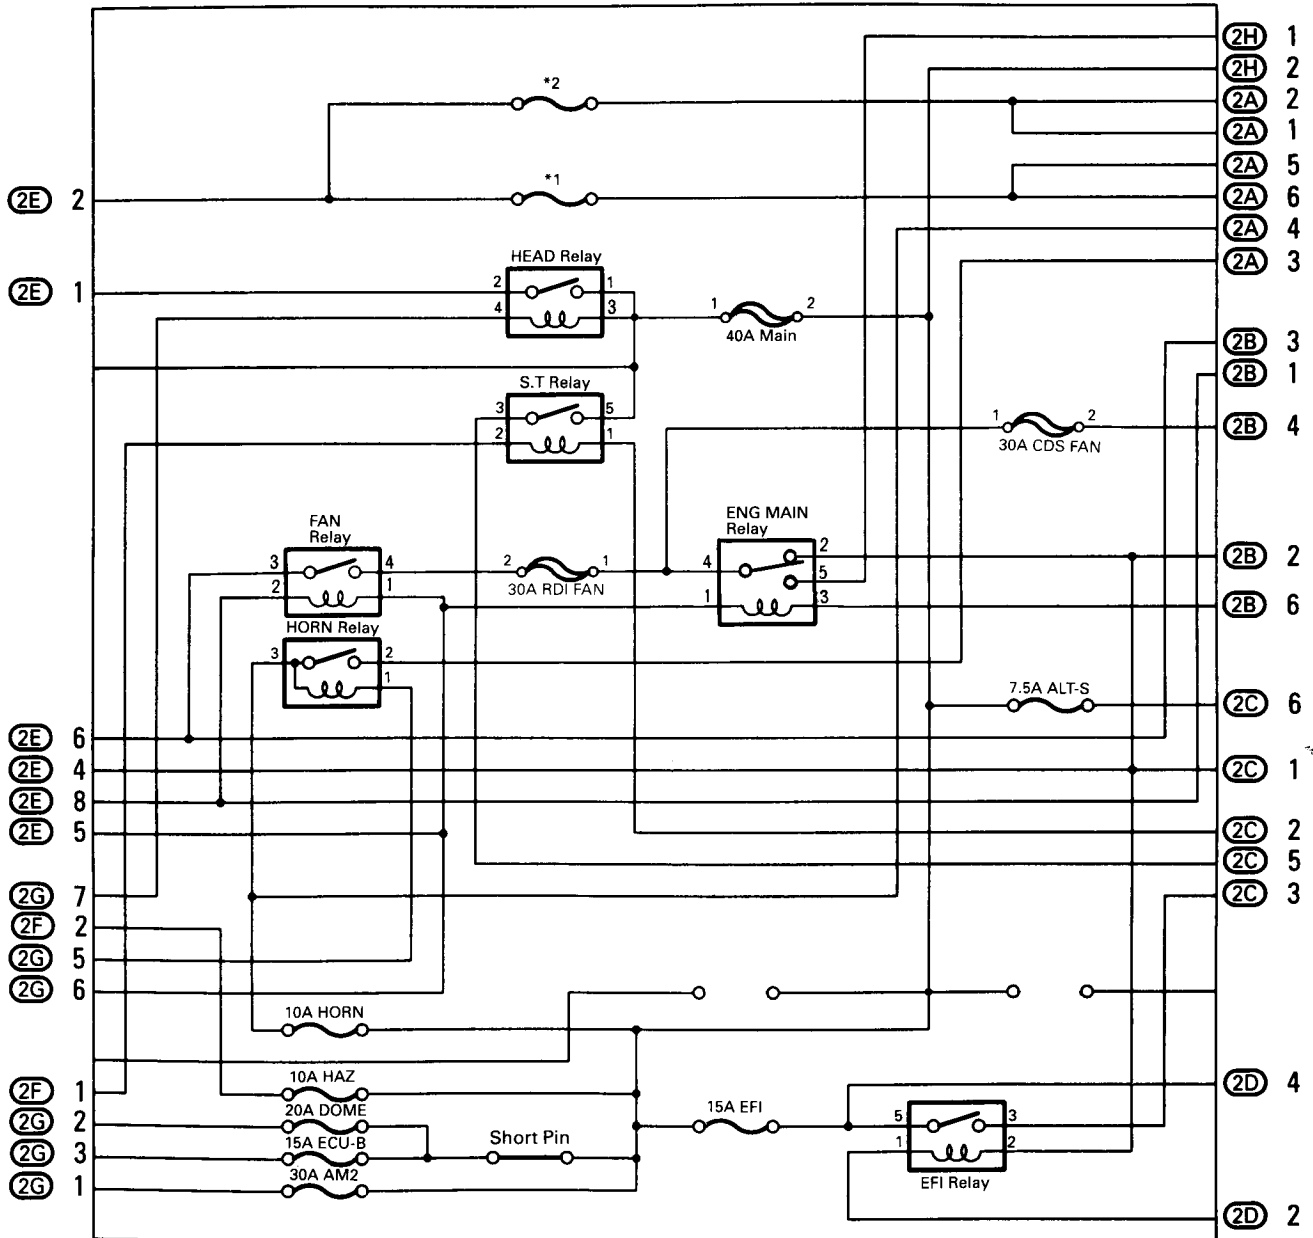


- *1: 15A HEAD (LH) (w/o Daytime Running Light) or
15A HEAD (UPR-LH) (w/ Daytime Running Light)
- *2: 15A HEAD (RH) (w/o Daytime Running Light) or
15A HEAD (UPR-RH) (w/ Daytime Running Light)


D RELAY LOCATIONS

○ : J/B No. 3

Behind Combination Meter (See Page 23)

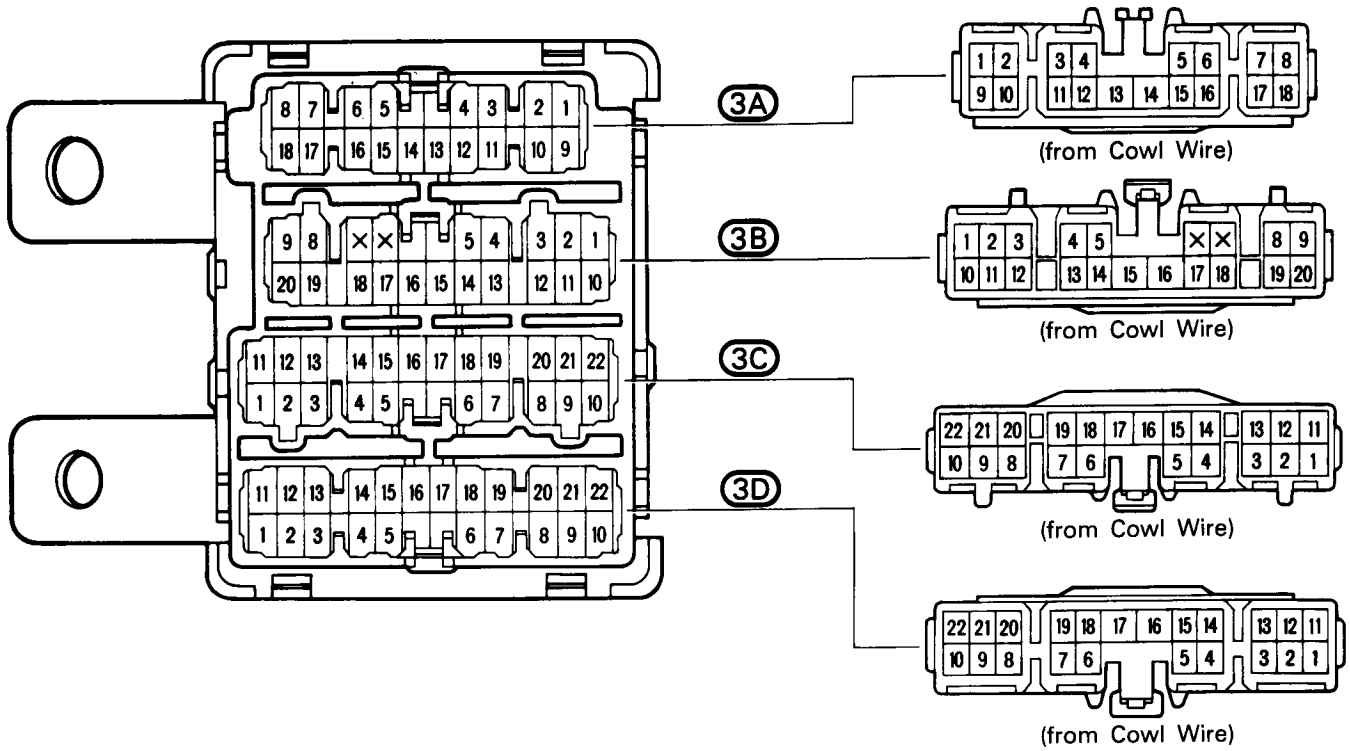


[J/B No. 3 Inner Circuit]

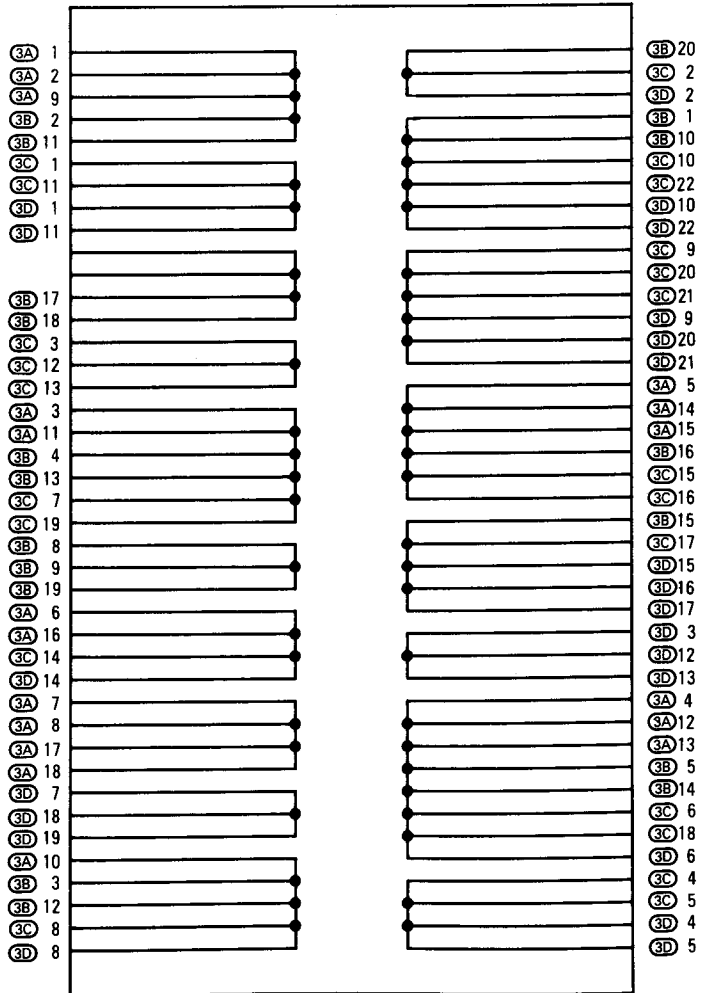


① : R/B No. 1 (LHD)

Left Kick Panel (See Page 23)

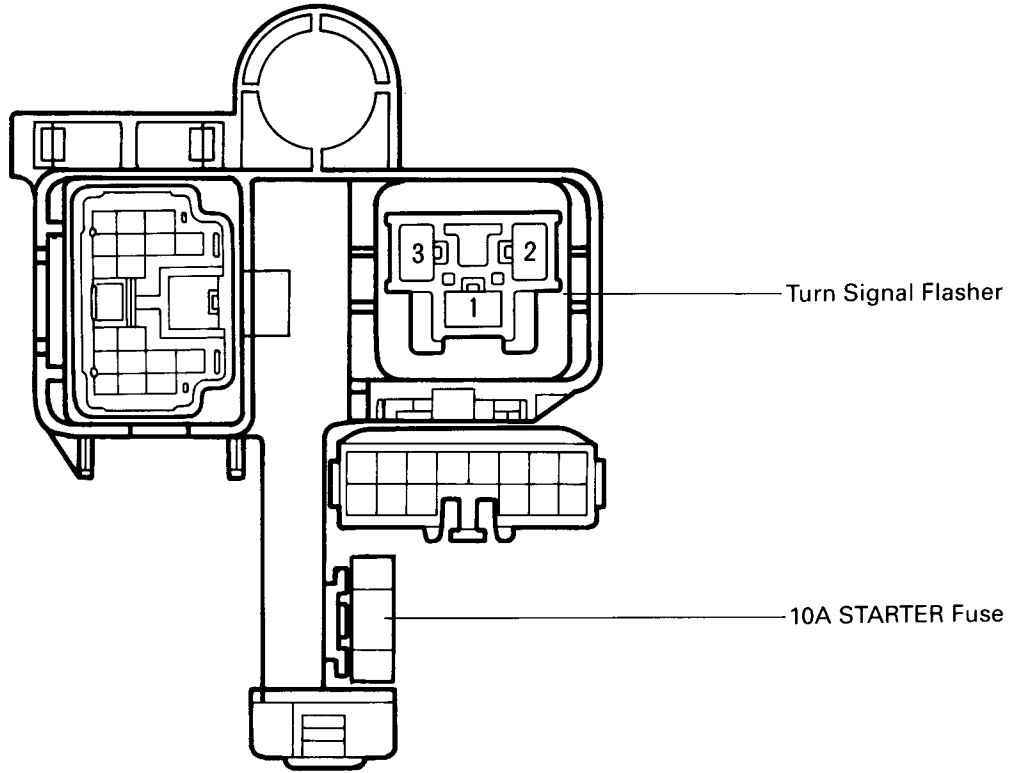


① : R/B No. 1 (RHD)

Left Kick Panel (See Page 23)

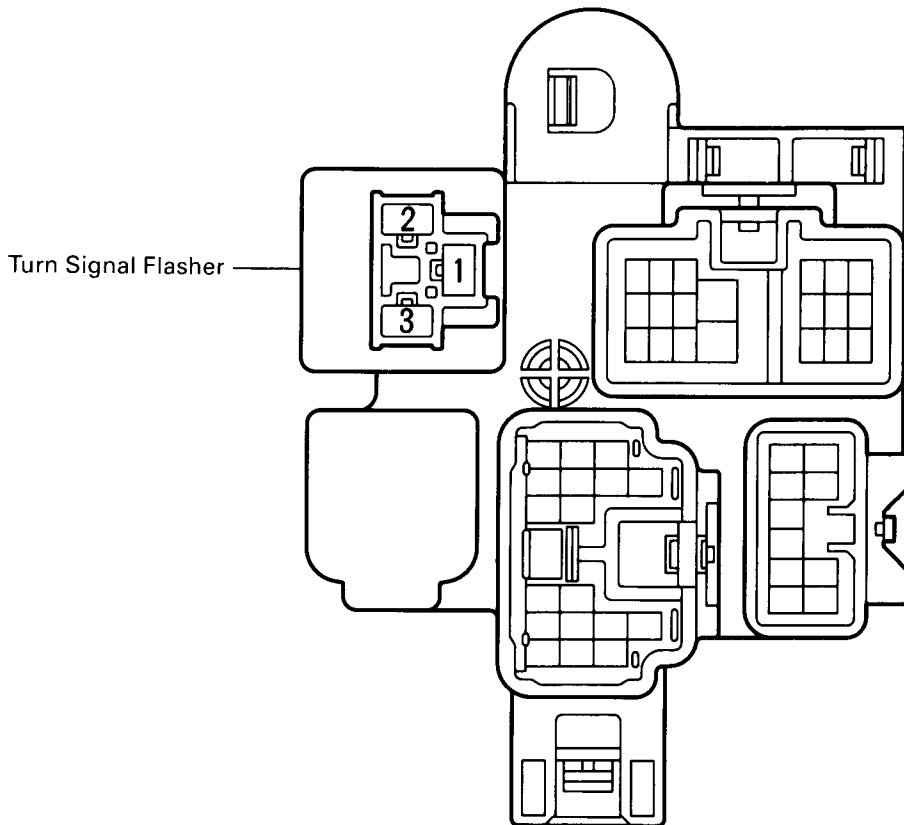


D RELAY LOCATIONS

③ : Fuse Block (RHD) Instrument Panel Right Side (See Page 23)

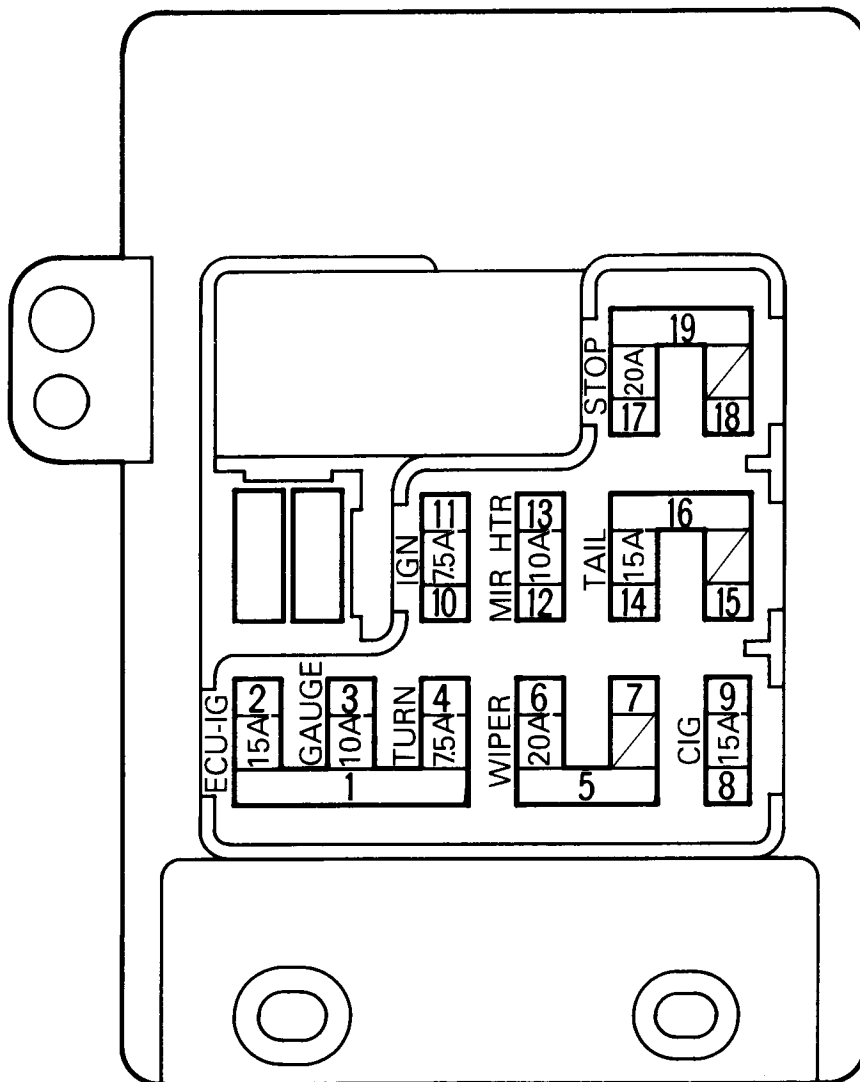


④ : R/B No. 4 (LHD)

Right Kick Panel (See Page 23)

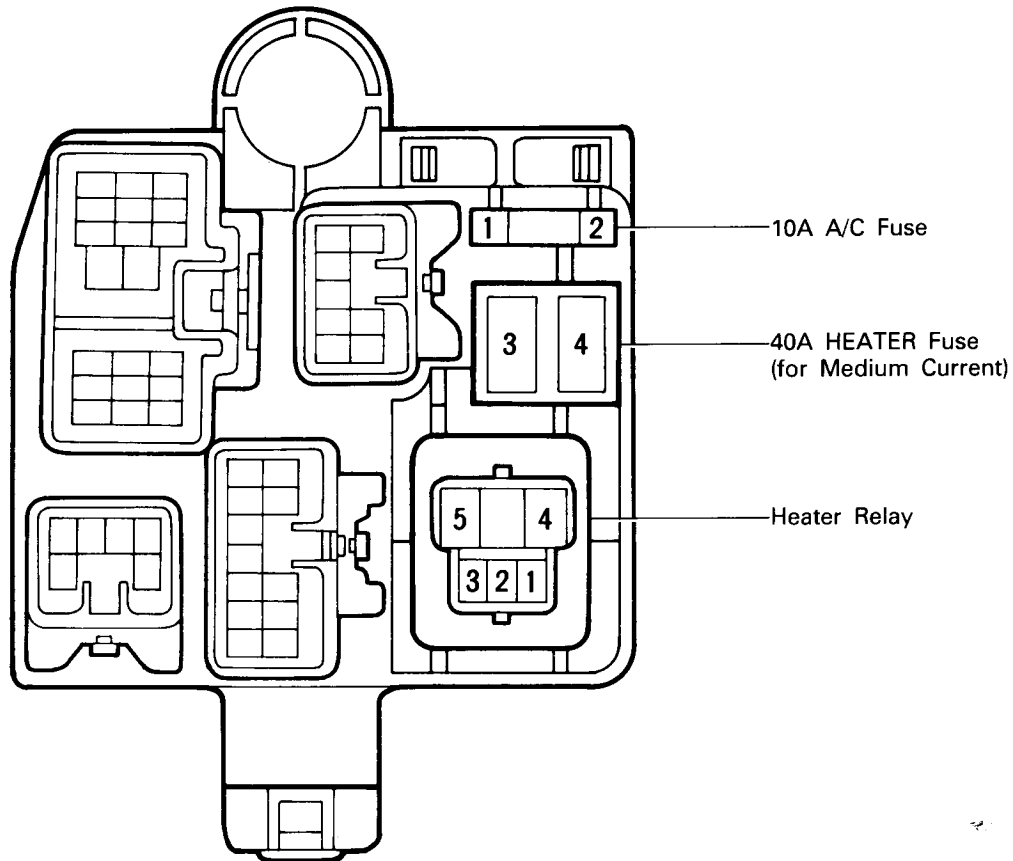

④ : R/B No. 4 (RHD)

Right Kick Panel (See Page 23)

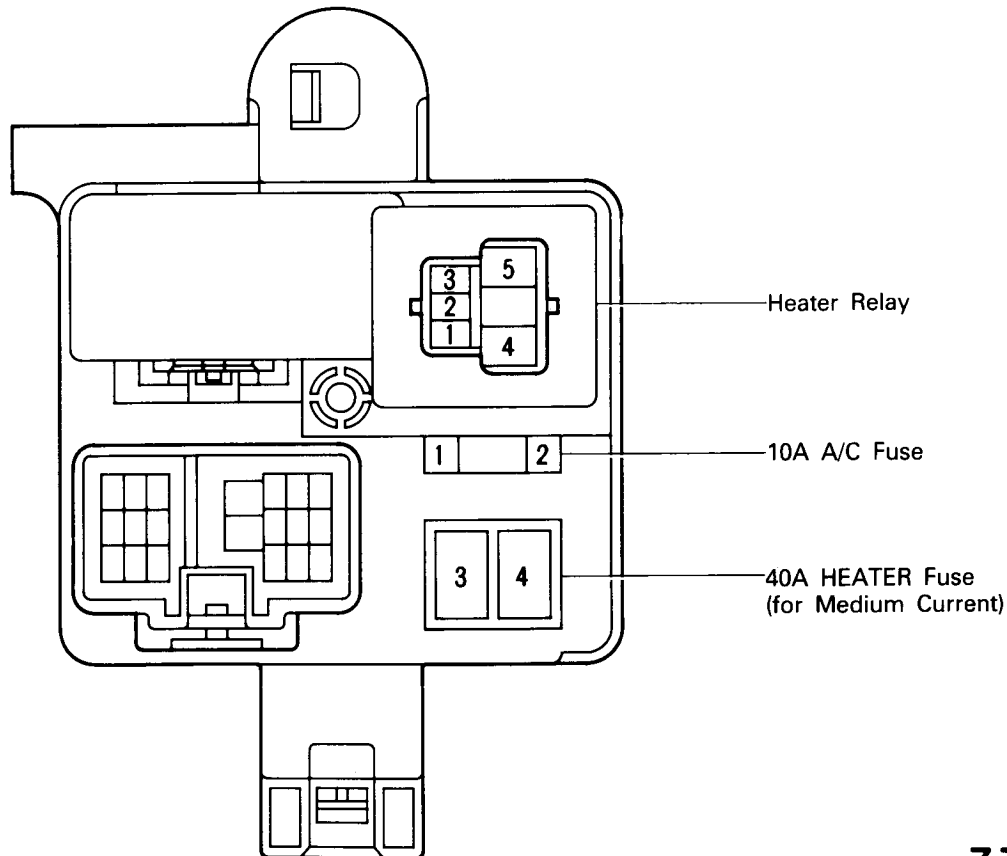


D RELAY LOCATIONS

⑤ : R/B No. 5 Engine Compartment Left (See Page 22)

(3VZ-FE LHD, 3VZ-FE RHD S/D)


*1: 15A HEAD (LWR-LH) Fuse (w/ Daytime Running Light) or 10A ST Fuse (for RHD)
 *2: w/ Daytime Running Light

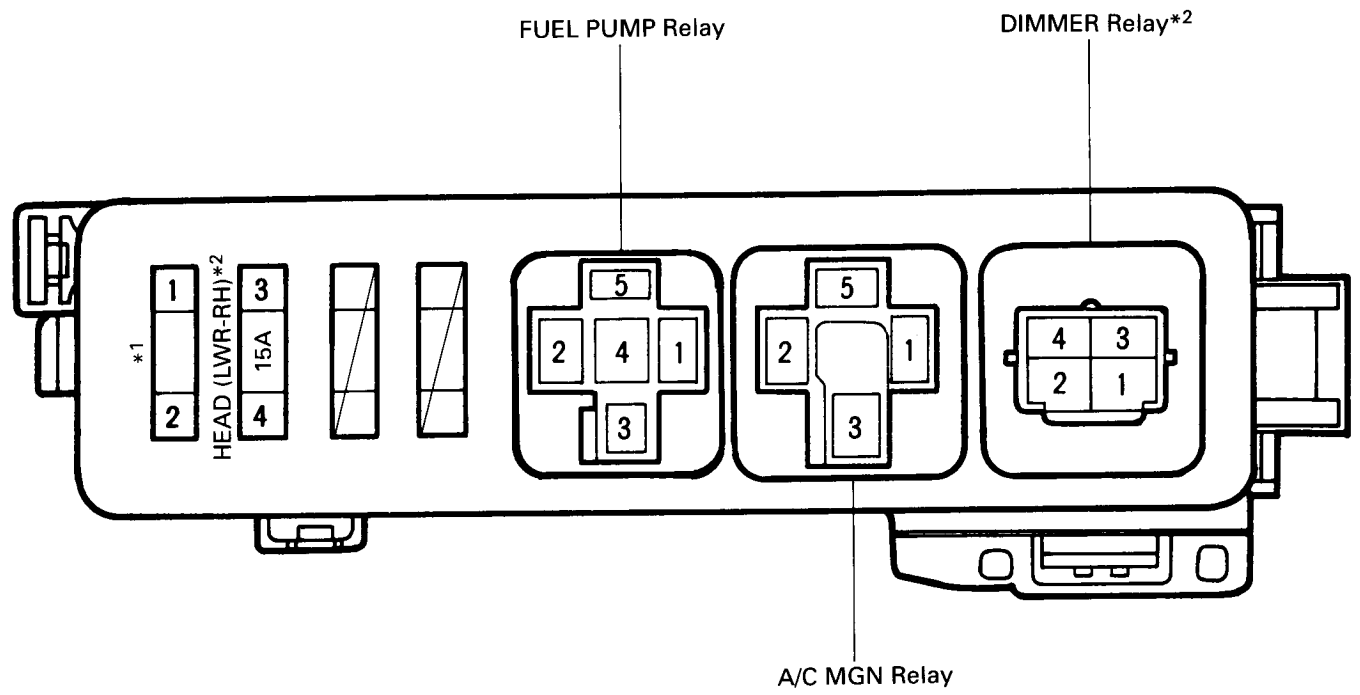

⑤ : R/B No. 5 Engine Compartment Left (See Page 22)

(5S-FE LHD, 5S-FE RHD S/D)


*1: 15A HEAD (LWR-LH) Fuse (w/ Daytime Running Light) or 10A ST Fuse (for RHD)
 *2: w/ Daytime Running Light

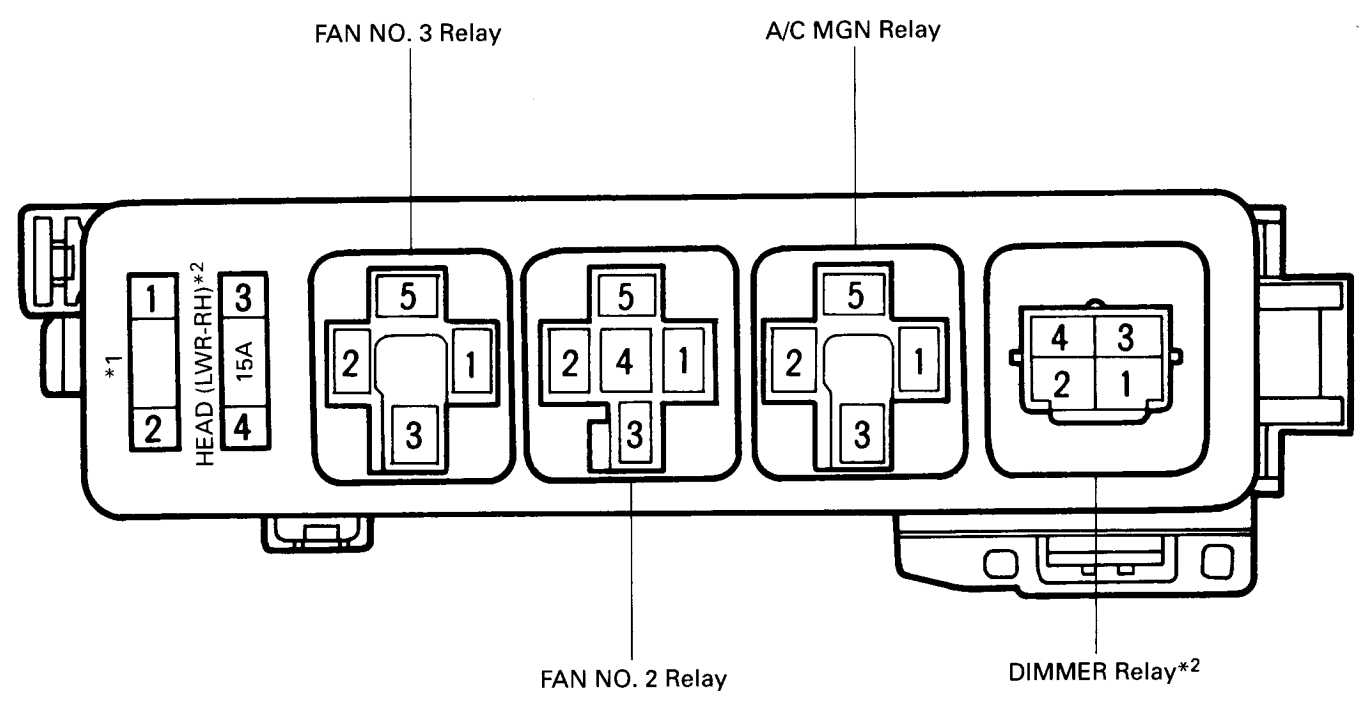

⑤ : R/B No. 5 Engine Compartment Left (See Page 22)

(RHD W/G)

FAN NO. 2 Relay (5S-FE)
FUEL PUMP Relay (3VZ-FE)

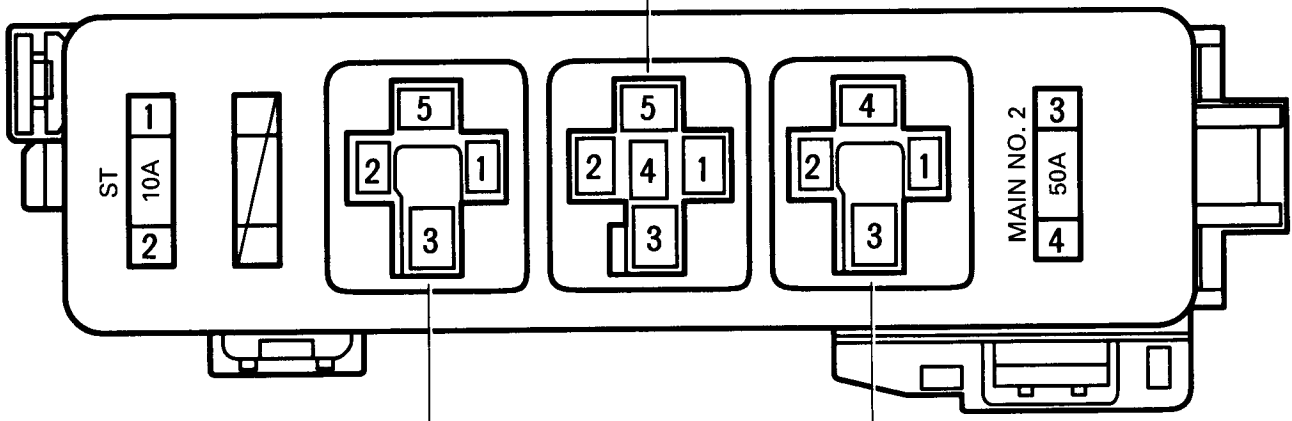


FAN NO. 3 Relay (5S-FE)

A/C MGN Relay

⑥ : R/B No. 6 Behind Glove Box (See Page 23)

Rear Fog Light Relay

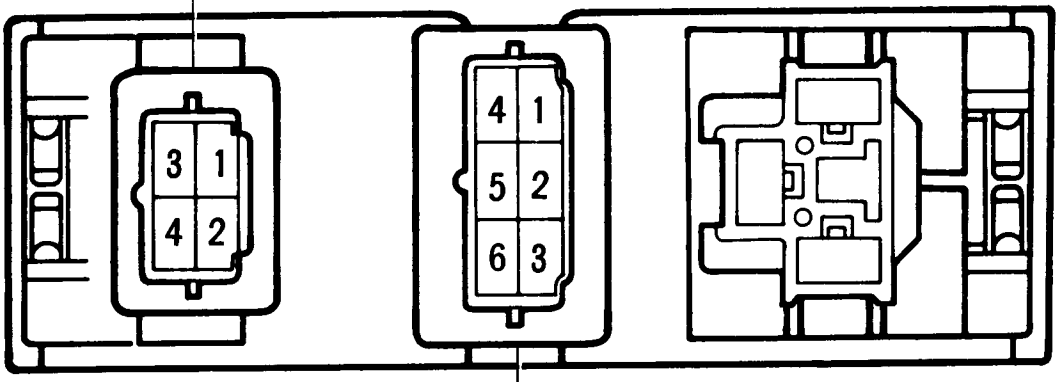

Circuit Opening Relay