

C ABBREVIATIONS

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	=	Anti-Lock Brake System
A/C	=	Air Conditioner
A/T	=	Automatic Transaxle
COMB.	=	Combination
ECT	=	Electronically Controlled Transmission
ECU	=	Electronic Control Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
FL	=	Fusible Link
G.C.C.	=	Gulf Cooperation Council
ISC	=	Idle Speed Control
J/B	=	Junction Block
LH	=	Left-Hand
LHD	=	Left-Hand Drive
M/T	=	Manual Transaxle
O/D	=	Overdrive
R/B	=	Relay Block
RH	=	Right-Hand
RHD	=	Right-Hand Drive
S/D	=	Sedan Type
SW	=	Switch
SRS	=	Supplemental Restraint System
TDCL	=	TOYOTA Diagnostic Communication Link
TEMP.	=	Temperature
VSV	=	Vacuum Switching Valve
W/G	=	Wagon Type
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.