

DTC	P0766	Shift Solenoid "D" Performance (Shift Solenoid Valve S4)
------------	--------------	---

SYSTEM DESCRIPTION

The ECM uses signals from the output shaft speed sensor and input speed sensor to detect the actual gear position (1st, 2nd, 3rd or O/D gear).

Then the ECM compares the actual gear with the shift schedule in the ECM memory to detect mechanical problems of the shift solenoid valves, valve body or automatic transaxle (clutch, brake, gear, etc.).

DTC No.	DTC Detection Condition	Trouble Area
P0766	Gear required by the ECM does not match the actual gear when driving (2 trip detection logic)	<ul style="list-style-type: none"> • Shift solenoid valve S4 remains open or closed • Valve body is blocked • Shift solenoid valve S4 • Automatic transaxle (clutch, brake, gear, etc.) • ECM

MONITOR DESCRIPTION

This DTC indicates a stuck OFF malfunction of the shift solenoid valve S4, stuck ON malfunction of the shift solenoid valve SL2, or brake control valve malfunction. The ECM commands gear shifts by turning the shift solenoid valves ON/OFF. When the gear position commanded by the ECM and the actual gear position are not the same, the ECM illuminates the MIL and stores the DTC.

MONITOR STRATEGY

Related DTCs	P0766: Shift solenoid valve S4/ON malfunction Shift solenoid valve S4/OFF malfunction
Required sensors/Components	Shift solenoid valve S4, Speed sensor (NT), Speed sensor (NC), Crankshaft position sensor (NE)
Frequency of operation	Continuous
Duration	1 sec.
MIL operation	2 driving cycles
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

All

Transmission range	"D"
ECT (Engine coolant temperature)	60°C (140°F) or more
ATF temperature	-20°C (-4°F) or more
ATF temperature circuit	Not circuit malfunction
ECT sensor circuit	Not circuit malfunction
Turbine speed sensor circuit	Not circuit malfunction
Intermediate shaft speed sensor circuit	Not circuit malfunction
Output speed sensor circuit	Not circuit malfunction
Shift solenoid valve SL1 circuit	Not circuit malfunction
Shift solenoid valve SL2 circuit	Not circuit malfunction
Shift solenoid valve S4 circuit	Not circuit malfunction
Electric throttle control system	Not circuit malfunction

OFF malfunction

ECM selected gear	4th
-------------------	-----

Vehicle speed	10 km/h (6.2 mph) or more
Throttle valve opening angle	5% or more

ON malfunction

ECM selected gear	3rd
Vehicle speed	10 km/h (6.2 mph) or more
Throttle valve opening angle	5% or more



TYPICAL MALFUNCTION THRESHOLDS

Either of the following conditions is met:

OFF malfunction or ON malfunction

2 detections are necessary per driving cycle:

1st detection: temporary flag ON

2nd detection: pending fault code ON

OFF malfunction

Intermediate shaft speed/Output speed	1.34 to 1.48
---------------------------------------	--------------

ON malfunction

Intermediate shaft speed/Output speed	0.95 to 1.09
---------------------------------------	--------------

INSPECTION PROCEDURE

HINT:

Performing the intelligent tester's ACTIVE TEST allows relay, VSV, actuator and other items to be operated without removing any parts. Performing the ACTIVE TEST early in troubleshooting is one way to save time.

The DATA LIST can be displayed during the ACTIVE TEST.

1. Warm up the engine.
2. Turn the ignition switch OFF.
3. Connect the intelligent tester to the CAN VIM. Then connect the CAN VIM to the DLC3.
4. Turn the ignition switch ON and turn the tester ON.
5. Enter the following menus: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST.
6. Follow the instructions on the tester and perform the ACTIVE TEST.

HINT:

While driving, the shift position can be forcibly changed with the tester.

Comparing the shift position commanded by the ACTIVE TEST with the actual shift position enables you to confirm the problem (see page AX-31).

Item	Test Details	Diagnostic Note
SHIFT	[Test Details] Operate the shift solenoid valve and set each shift lever position by yourself [Vehicle Condition] <ul style="list-style-type: none"> • IDL: ON • 50 km/h (31 mph) or less [Other information] <ul style="list-style-type: none"> • Press "→" button: Shift up • Press "←" button: Shift down 	Possible to check the operation of the shift solenoid valves

HINT:

- This test can be conducted when the vehicle speed is 50 km/h (31 mph) or less.
- The shift position commanded by the ECM is shown in the DATA LIST/SHIFT display on the tester.

1 CHECK OTHER DTC OUTPUT (IN ADDITION TO DTC P0766)

- (a) Connect the intelligent tester to the CAN VIM. Then connect the CAN VIM to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Enter the following menus: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (d) Read the DTCs using the tester.

Result

Display (DTC output)	Proceed to
Only P0766 is output	A
P0766 and other DTCs are output	B


HINT:

If any other codes besides P0766 are output, perform troubleshooting for those DTCs first.

B → **GO TO DTC CHART**

A

2 INSPECT SHIFT SOLENOID VALVE S4

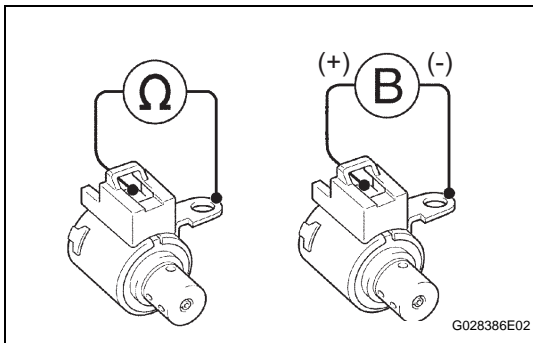

- (a) Remove the shift solenoid valve S4.
- (b) Measure the resistance between the solenoid valve terminal and solenoid valve body.

Standard resistance:

11 to 15 Ω at 20°C (68°F)

- (c) Connect the battery's positive (+) lead to the terminal of the solenoid valve connector, and the negative (-) lead to the solenoid body. Then check that the valve moves and makes an operating noise.

OK:

Valve moves and makes operating noise.

NG → **REPLACE SHIFT SOLENOID VALVE S4**

OK

3 INSPECT TRANSMISSION VALVE BODY ASSEMBLY

- (a) Check the transmission valve body assembly.

OK:

There are no foreign objects on each valve.

NG → **REPAIR OR REPLACE TRANSMISSION VALVE BODY ASSEMBLY**

OK

4	INSPECT TORQUE CONVERTER CLUTCH ASSEMBLY
----------	---

(a) Check the torque converter clutch assembly (see page [AX-152](#)).

OK:

The torque converter clutch operates normally.

AX

NG 

REPLACE TORQUE CONVERTER CLUTCH ASSEMBLY

OK 

REPAIR OR REPLACE AUTOMATIC TRANSAXLE ASSEMBLY
